


BONNET ADJUSTMENT

id091000407300

Height Difference Adjustment

1. Verify that the height difference between the bonnet and the body is within the specification.

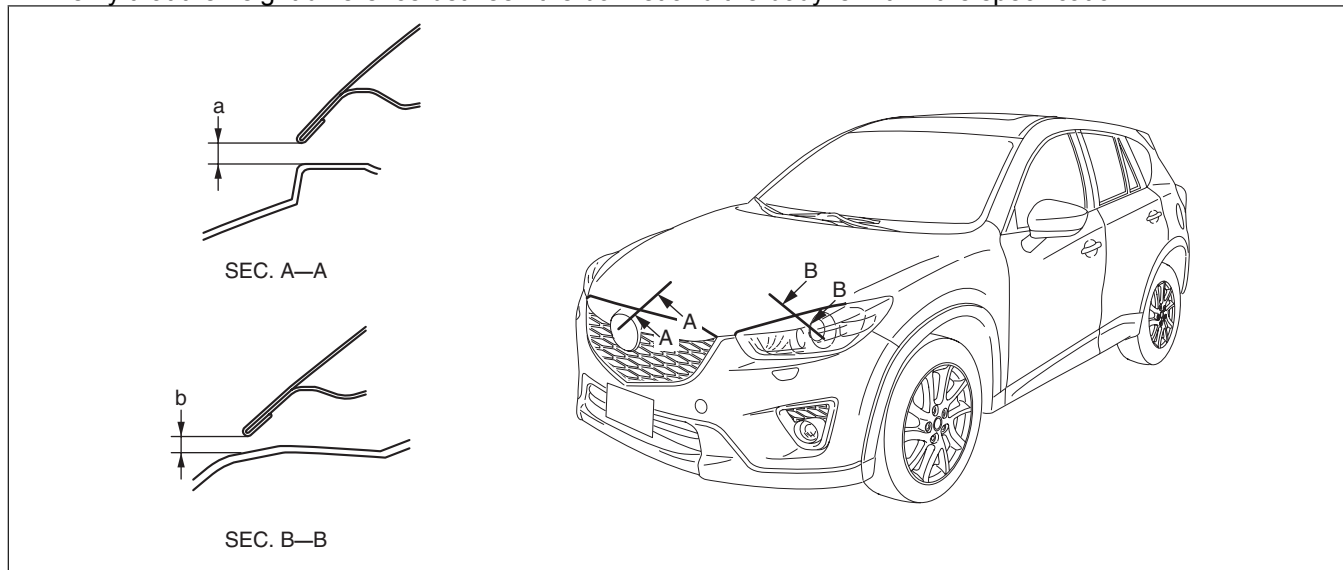


ac5wzw00002475

Standard clearance

a: 2.7—6.9 mm {0.11—0.27 in}

b: 4.1—8.0 mm {0.17—0.31 in}



2. Disconnect the negative battery cable.
3. Remove the following parts:
 - (1) Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
 - (2) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
 - (3) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (4) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
 - (5) Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
4. Loosen bolts and adjust the bonnet.
5. Tighten bolts. (See BONNET REMOVAL/INSTALLATION.)
6. Install the following parts:
 - (1) Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
 - (2) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
 - (3) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (4) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
 - (5) Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
7. Connect the negative battery cable (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
8. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
9. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)

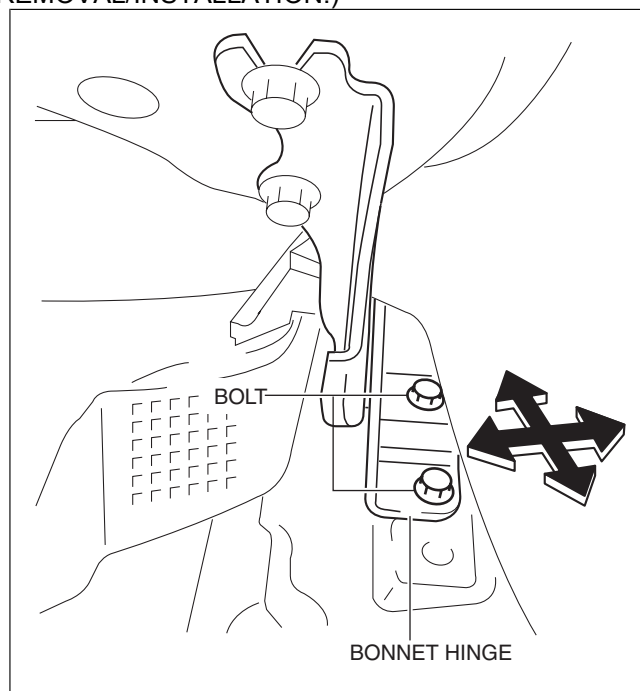

ac5wzw00002476

Gap Adjustment

1. Verify that the gap between the bonnet and the body is within the specification.

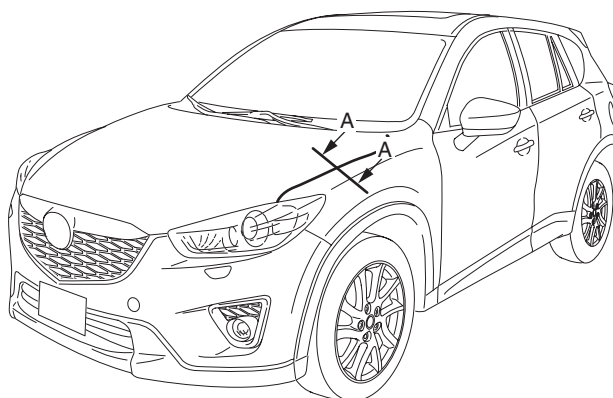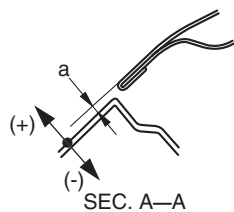


ac5wzw00004621

Standard clearance

a: -1.2—1.2 mm {-0.047—0.047 in}

2. Turn the stopper rubber to adjust the height of the bonnet.

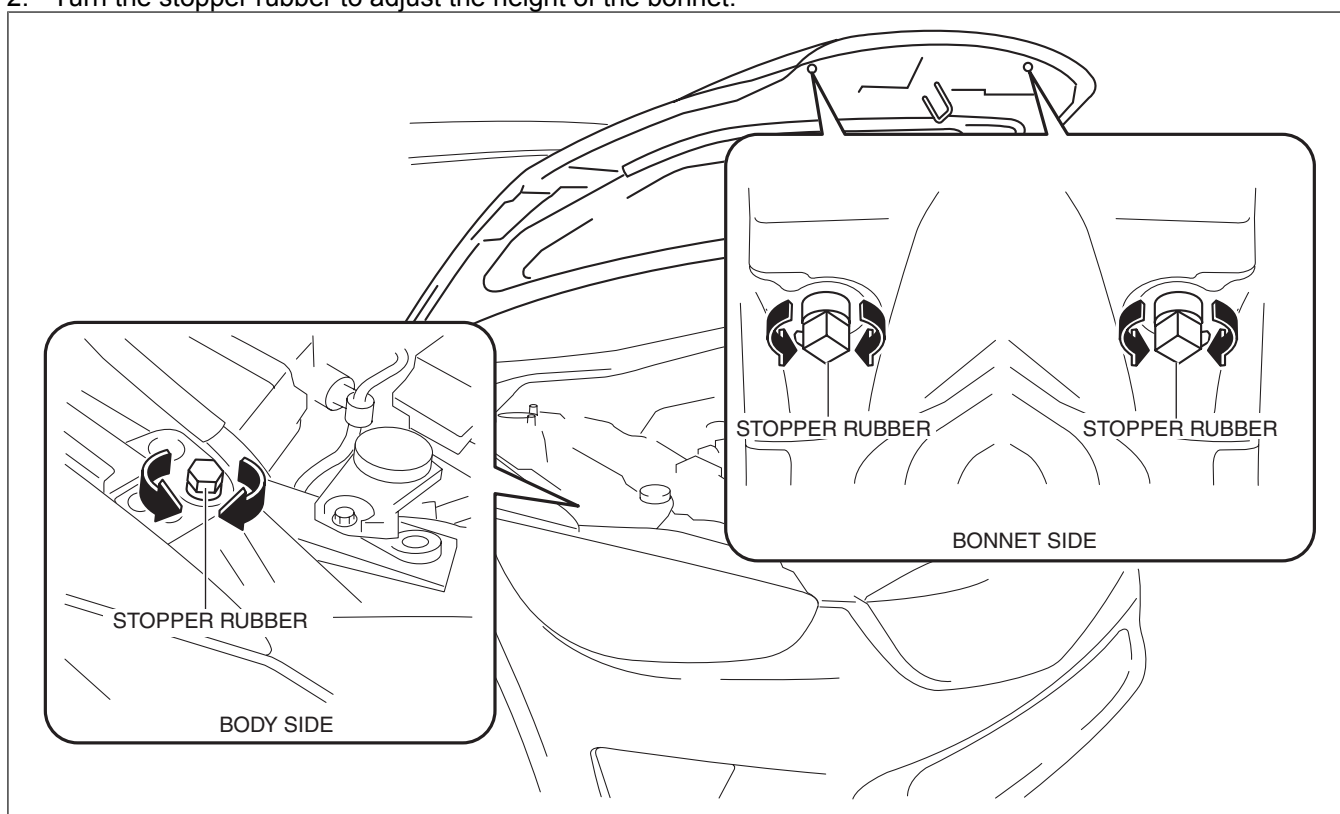

ac5wzw00002478