

# DTC P02CA:00 [SKYACTIV-D 2.2]

id0102s4212200

<b>DTC P02CA:00</b>	<b>Large-type turbocharger overboost condition</b>
<b>DETECTION CONDITION</b>	<ul style="list-style-type: none"> <li>The difference between the target intake air pressure and the actual intake air pressure in the range of the large-type turbocharger less than the specified value for a continuous <b>7 s</b> when the following conditions are met.</li> </ul> <p><b>MONITORING CONDITIONS</b></p> <ul style="list-style-type: none"> <li>Small-type turbocharger does not operate</li> <li>Diesel particulate filter regeneration control is not performed</li> <li>Engine speed: <b>2,000 rpm or more</b></li> <li>Fuel injection amount: <b>25 mm<sup>3</sup>/stroke or more</b></li> </ul> <p><b>Diagnostic support note</b></p> <ul style="list-style-type: none"> <li>This is a continuous monitor (CCM).</li> <li>The check engine light illuminates if the PCM detects the above malfunction condition in two consecutive drive cycles or in one drive cycle while the DTC for the same malfunction has been stored in the PCM.</li> <li>PENDING CODE is available if the PCM detects the above malfunction condition during the first drive cycle.</li> <li>FREEZE FRAME DATA (Mode 2)/Snapshot data is available.</li> <li>DTC is stored in the PCM memory.</li> </ul>
<b>FAIL-SAFE FUNCTION</b>	<ul style="list-style-type: none"> <li>Inhibits the EGR control.</li> <li>Inhibits engine-stop by operating the i-stop function.</li> <li>PCM restricts engine-transaxle integration control.</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>Compressor bypass solenoid valve connector or terminals malfunction</li> <li>Wastegate solenoid valve connector or terminals malfunction</li> <li>Regulating solenoid valve connector or terminals malfunction</li> <li>Short to ground or open circuit in compressor bypass solenoid valve power supply circuit <ul style="list-style-type: none"> <li>Short to ground in wiring harness between main relay terminal C and compressor bypass solenoid valve terminal A</li> <li>ENGINE2 15 A fuse malfunction</li> <li>Open circuit in wiring harness between main relay terminal C and compressor bypass solenoid valve terminal A</li> </ul> </li> <li>Short to ground or open circuit in wastegate solenoid valve power supply circuit <ul style="list-style-type: none"> <li>Short to ground in wiring harness between main relay terminal C and wastegate solenoid valve terminal A</li> <li>ENGINE2 15 A fuse malfunction</li> <li>Open circuit in wiring harness between main relay terminal C and wastegate solenoid valve terminal A</li> </ul> </li> <li>Short to ground or open circuit in regulating solenoid valve power supply circuit <ul style="list-style-type: none"> <li>Short to ground in wiring harness between main relay terminal C and regulating solenoid valve terminal A</li> <li>ENGINE2 15 A fuse malfunction</li> <li>Open circuit in wiring harness between main relay terminal C and regulating solenoid valve terminal A</li> </ul> </li> <li>Regulating valve position sensor connector or terminals malfunction</li> <li>Short to ground in wiring harness between the following terminals: <ul style="list-style-type: none"> <li>Compressor bypass solenoid valve terminal B—PCM terminal 1CO</li> <li>Wastegate solenoid valve terminal B—PCM terminal 1CL</li> <li>Regulating solenoid valve terminal B—PCM terminal 1CP</li> <li>Regulating valve position sensor terminal C—PCM terminal 1BO</li> <li>Regulating valve position sensor terminal B—PCM terminal 1BP</li> </ul> </li> <li>PCM connector or terminals malfunction</li> <li>Regulating valve position sensor circuits are shorted to each other</li> <li>Open circuit in wiring harness between the following terminals: <ul style="list-style-type: none"> <li>Compressor bypass solenoid valve terminal B—PCM terminal 1CO</li> <li>Wastegate solenoid valve terminal B—PCM terminal 1CL</li> <li>Regulating solenoid valve terminal B—PCM terminal 1CP</li> <li>Regulating valve position sensor terminal C—PCM terminal 1BO</li> </ul> </li> <li>Vacuum piping or positive pressure piping of compressor bypass valve malfunction</li> <li>Vacuum piping or positive pressure piping of wastegate valve malfunction</li> <li>Vacuum piping or positive pressure piping of regulating valve malfunction</li> <li>Compressor bypass solenoid valve malfunction</li> <li>Wastegate solenoid valve malfunction</li> <li>Regulating solenoid valve malfunction</li> <li>Regulating valve position sensor malfunction</li> <li>PCM malfunction</li> </ul>

**DTC P02CA:**  
**00**

# **Large-type turbocharger overboost condition**


MAIN RELAY  
TERMINAL C

ENGINE2 15 A

16  
COMPRESSOR BYPASS  
SOLENOID VALVE




17  
WASTEGATE  
SOLENOID VALVE




18  
REGULATING  
SOLENOID VALVE




19  
REGULATING VALVE POSITION SENSOR

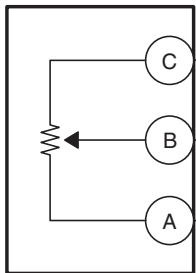


PCM

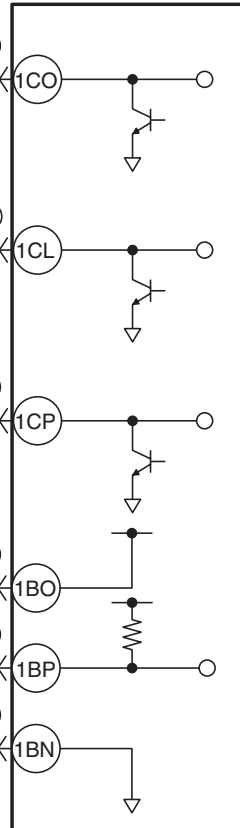


WASTEGATE SOLENOID VALVE  
WIRING HARNESS-SIDE  
CONNECTOR




REGULATING SOLENOID VALVE  
WIRING HARNESS-SIDE  
CONNECTOR



COMPRESSOR BYPASS SOLENOID VALVE  
WIRING HARNESS-SIDE  
CONNECTOR




REGULATING VALVE POSITION SENSOR  
WIRING HARNESS-SIDE  
CONNECTOR



PCM WIRING HARNESS-SIDE CONNECTOR

1EE 1EA 1DW 1DS 1DO 1DK 1DG	1DA 1CW 1CS 1CO 1CK 1CG 1CC 1BY	1BR 1BM 1BH 1BC 1AX 1AS 1AN 1AI	1AD 1Y 1T 1O 1J 1E 1A
1EF 1EB 1DX 1DT 1DP 1DL 1DH	1DB 1CX 1CT 1CP 1CL 1CH 1CD 1BZ	1BS 1BN 1BI 1BD 1AY 1AT 1AO 1AJ	1AE 1Z 1U 1P 1K 1F 1B
1EI 1EG 1EC 1DY 1DU 1DQ 1DM 1DI	1DE 1DC 1CY 1CU 1CQ 1CM 1CI 1CE 1CA 1BW	1BT 1BO 1BJ 1BE 1AZ 1AU 1AP 1AK	1AF 1AA 1V 1Q 1L 1G 1C
1EJ 1EH 1ED 1DZ 1DV 1DR 1DN 1DJ	1DF 1DD 1CZ 1CV 1CR 1CN 1CJ 1CF 1CB 1BX	1BU 1BP 1BK 1BF 1BA 1AV 1AQ 1AL	1AG 1AB 1W 1R 1M 1H 1D
		1BV 1BQ 1BL 1BG 1BB 1AW 1AR 1AM	1AH 1AC 1X 1S 1N 1I



## Diagnostic Procedure

STEP	INSPECTION		ACTION
1	<b>VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED</b> <ul style="list-style-type: none"> <li>Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded?</li> </ul>	Yes	Go to the next step.
		No	Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	<b>VERIFY RELATED SERVICE INFORMATION AVAILABILITY</b> <ul style="list-style-type: none"> <li>Verify related Service Information availability.</li> <li>Is any related Service Information available?</li> </ul>	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	<b>VERIFY RELATED PENDING CODE AND/OR DTC</b> <ul style="list-style-type: none"> <li>Switch the ignition off, then ON (engine off).</li> <li>Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 2.2].)</li> <li>Are any other PENDING CODEs and/or DTCs present?</li> </ul>	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 2.2].)
		No	Go to the next step.
4	<b>INSPECT COMPRESSOR BYPASS SOLENOID VALVE CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Switch the ignition off.</li> <li>Disconnect the compressor bypass solenoid valve connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 20.
		No	Go to the next step.
5	<b>INSPECT WASTEGATE SOLENOID VALVE CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Disconnect the wastegate solenoid valve connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 20.
		No	Go to the next step.
6	<b>INSPECT REGULATING SOLENOID VALVE CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Disconnect the regulating solenoid valve connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 20.
		No	Go to the next step.
7	<b>INSPECT COMPRESSOR BYPASS SOLENOID VALVE POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>Verify that the compressor bypass solenoid valve and wastegate solenoid valve and regulating solenoid valve connectors are disconnected.</li> <li>Switch the ignition ON (engine off).</li> <li>Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>Compressor bypass solenoid valve terminal A</li> <li>Wastegate solenoid valve terminal A</li> <li>Regulating solenoid valve terminal A</li> </ul> </li> <li>Is the voltage B+?</li> </ul>	Yes	Go to the next step.
		No	Inspect the ENGINE2 15 A fuse. <ul style="list-style-type: none"> <li>If the fuse is blown: <ul style="list-style-type: none"> <li>Repair or replace the wiring harness for a possible short to ground.</li> <li>Replace the fuse.</li> </ul> </li> <li>If the fuse is deteriorated: <ul style="list-style-type: none"> <li>Replace the fuse.</li> </ul> </li> <li>If the fuse is normal: <ul style="list-style-type: none"> <li>Repair or replace the wiring harness for a possible open circuit.</li> </ul> </li> </ul> Go to Step 20.
8	<b>INSPECT REGULATING VALVE POSITION SENSOR CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Switch the ignition off.</li> <li>Disconnect the regulating valve position sensor connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 20.
		No	Go to the next step.

STEP	INSPECTION	ACTION	
9	<b>INSPECT EACH CIRCUIT FOR SHORT TO GROUND</b> <ul style="list-style-type: none"> <li>• Verify that the compressor bypass solenoid valve and wastegate solenoid valve and regulating solenoid valve and regulating valve position sensor connectors are disconnected.</li> <li>• Inspect for continuity between the following terminals (wiring harness-side) and body ground: <ul style="list-style-type: none"> <li>— Compressor bypass solenoid valve terminal B</li> <li>— Wastegate solenoid valve terminal B</li> <li>— Regulating solenoid valve terminal B</li> <li>— Regulating valve position sensor terminal C</li> <li>— Regulating valve position sensor terminal B</li> </ul> </li> <li>• Is there continuity?</li> </ul>	Yes	If the short to ground circuit could be detected in the wiring harness: <ul style="list-style-type: none"> <li>• Repair or replace the wiring harness for a possible short to ground.</li> </ul> If the short to ground circuit could not be detected in the wiring harness: <ul style="list-style-type: none"> <li>• Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)</li> </ul> Go to Step 20.
		No	Go to the next step.
10	<b>INSPECT PCM CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>• Disconnect the PCM connector.</li> <li>• Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>• Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 20.
		No	Go to the next step.
11	<b>INSPECT REGULATING VALVE POSITION SENSOR SIGNAL CIRCUIT AND GROUND CIRCUIT FOR SHORT TO EACH OTHER</b> <ul style="list-style-type: none"> <li>• Verify that the compressor bypass solenoid valve and wastegate solenoid valve and regulating solenoid valve and regulating valve position sensor and PCM connectors are disconnected.</li> <li>• Inspect for continuity between regulating valve position sensor terminals B and A (wiring harness-side).</li> <li>• Is there continuity?</li> </ul>	Yes	Repair or replace the wiring harness for a possible short to each other, then go to Step 20.
		No	Go to the next step.
12	<b>INSPECT EACH CIRCUIT FOR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>• Verify that the compressor bypass solenoid valve and wastegate solenoid valve and regulating solenoid valve and regulating valve position sensor and PCM connectors are disconnected.</li> <li>• Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>— Compressor bypass solenoid valve terminal B—PCM terminal 1CO</li> <li>— Wastegate solenoid valve terminal B—PCM terminal 1CL</li> <li>— Regulating solenoid valve terminal B—PCM terminal 1CP</li> <li>— Regulating valve position sensor terminal C—PCM terminal 1BO</li> </ul> </li> <li>• Is there continuity?</li> </ul>	Yes	Go to the next step.
		No	Repair or the replace the wiring harness for a possible open circuit, then go to Step 20.
13	<b>INSPECT VACUUM PIPING AND POSITIVE PRESSURE PIPING OF COMPRESSOR BYPASS VALVE</b> <ul style="list-style-type: none"> <li>• Inspect vacuum piping and positive pressure piping of compressor bypass valve. (See TURBOCHARGER REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)</li> <li>• Is there hose leakage or damage in the vacuum piping and positive pressure piping?</li> </ul>	Yes	Repair or replace the malfunctioning part according to the inspection results, then go to Step 20.
		No	Go to the next step.
14	<b>INSPECT VACUUM PIPING AND POSITIVE PRESSURE PIPING OF WASTEGATE VALVE</b> <ul style="list-style-type: none"> <li>• Inspect vacuum piping and positive pressure piping of wastegate valve. (See TURBOCHARGER REMOVAL/ INSTALLATION [SKYACTIV-D 2.2].)</li> <li>• Is there hose leakage or damage in the vacuum piping and positive pressure piping?</li> </ul>	Yes	Repair or replace the malfunctioning part according to the inspection results, then go to Step 20.
		No	Go to the next step.

STEP	INSPECTION		ACTION
15	<b>INSPECT VACUUM PIPING AND POSITIVE PRESSURE PIPING OF REGULATING VALVE</b> <ul style="list-style-type: none"> <li>Inspect vacuum piping and positive pressure piping of regulating valve. (See TURBOCHARGER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)</li> <li>Is there hose leakage or damage in the vacuum piping and positive pressure piping?</li> </ul>	Yes	Repair or replace the malfunctioning part according to the inspection results, then go to Step 20.
		No	Go to the next step.
16	<b>INSPECT COMPRESSOR BYPASS SOLENOID VALVE</b> <ul style="list-style-type: none"> <li>Inspect the compressor bypass solenoid valve. (See COMPRESSOR BYPASS SOLENOID VALVE INSPECTION [SKYACTIV-D 2.2].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the compressor bypass solenoid valve, then go to Step 20. (See COMPRESSOR BYPASS SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No	Go to the next step.
17	<b>INSPECT WASTEGATE SOLENOID VALVE</b> <ul style="list-style-type: none"> <li>Inspect the wastegate solenoid valve. (See WASTEGATE SOLENOID VALVE INSPECTION [SKYACTIV-D 2.2].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the wastegate solenoid valve, then go to Step 20. (See WASTEGATE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No	Go to the next step.
18	<b>INSPECT REGULATING SOLENOID VALVE</b> <ul style="list-style-type: none"> <li>Inspect the regulating solenoid valve. (See REGULATING SOLENOID VALVE INSPECTION [SKYACTIV-D 2.2].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the regulating solenoid valve, then go to Step 20. (See REGULATING SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No	Go to the next step.
19	<b>INSPECT REGULATING VALVE POSITION SENSOR</b> <ul style="list-style-type: none"> <li>Reconnect all disconnected connectors.</li> <li>Inspect the regulating valve position sensor. (See REGULATING VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 2.2].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the regulating valve actuator, then go to the next step. (See TURBOCHARGER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No	Go to the next step.
20	<b>VERIFY DTC TROUBLESHOOTING COMPLETED</b> <ul style="list-style-type: none"> <li>Always reconnect all disconnected connectors.</li> <li>Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].)</li> <li>Start the engine and warm it up completely.</li> </ul> <p><b>Caution</b></p> <ul style="list-style-type: none"> <li>While performing this step, always operate the vehicle in a safe and lawful manner.</li> <li>When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.</li> </ul> <ul style="list-style-type: none"> <li>Drive the vehicle under the FREEZE FRAME DATA (Mode 2)/snapshot data condition.</li> <li>Perform the Pending Trouble Code Access Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 2.2].)</li> <li>Is the PENDING CODE for this DTC present?</li> </ul>	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) Go to the next step.
		No	Go to the next step.
21	<b>VERIFY AFTER REPAIR PROCEDURE</b> <ul style="list-style-type: none"> <li>Perform the "AFTER REPAIR PROCEDURE". (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].)</li> <li>Are any DTCs present?</li> </ul>	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 2.2].)
		No	DTC troubleshooting completed.