

BLOW-BY-HEATER RELAY [SKYACTIV-D 2.2]


id0140z7258700

Purpose/Function

- Supplies power to blow-by heater.
- Supplies battery voltage to blow-by heater based on the signals from the PCM.

Construction


- Installed to the relay and fuse block.

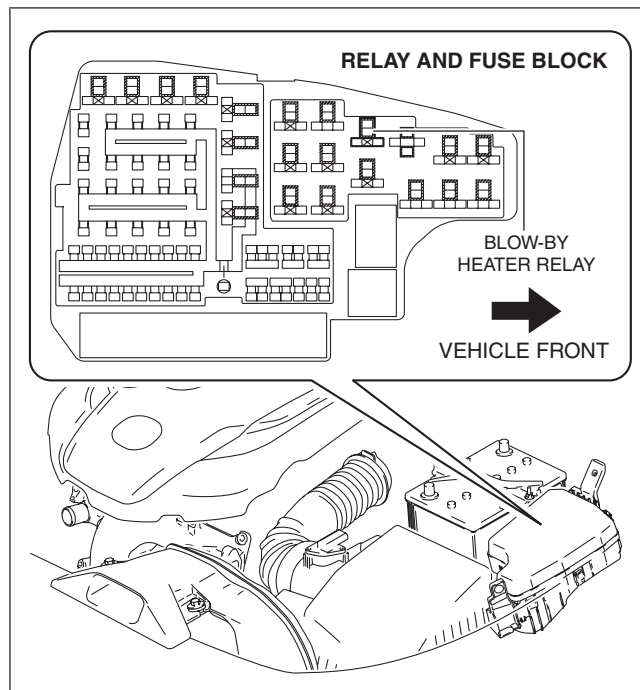

ac5wzn00002368

Operation

- The contact point is on when the battery voltage is supplied to the coil based on the signal from the PCM, and the battery voltage is supplied to the blow-by heater.

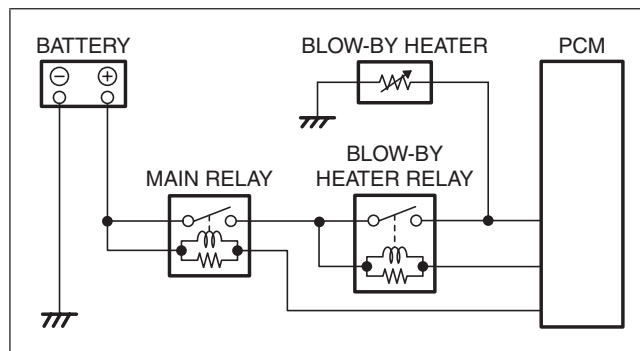

ac5wzn00002369

Fail-safe

- Function not equipped.