

HEADLIGHT CLEANER MOTOR INSPECTION


id091900803200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
4. Disconnect the headlight cleaner motor connector from the headlight cleaner motor. (See HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION.)
5. Disconnect the headlight cleaner hose from the headlight cleaner motor. (See HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION.)

Warning


- **Water sprayed on the battery and ground could cause electrocution. When performing the headlight cleaner motor inspection, prepare a container to collect washer fluid and be careful not to spray washer fluid.**

6. After connecting headlight cleaner motor terminal B to the positive battery terminal, and terminal A to the ground, verify that washer fluid sprays from the front of the headlight cleaner motor.

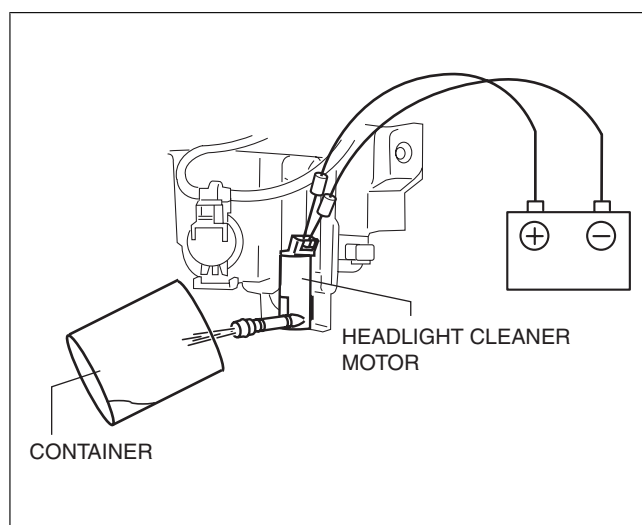

ac5wzw00002202

- If there is any malfunction, replace the headlight cleaner motor. (See HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION.)

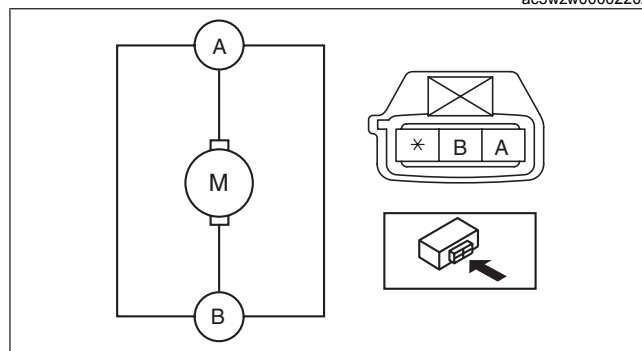

ac5jjw00000443