


FRONT DRIVE SHAFT INSPECTION

id031300801200

1. Inspect the connections for any looseness.
 - If there is any malfunction, tighten or replace the applicable part.
2. Inspect the dust boot for damage and cracks.
 - If there is any malfunction, replace the applicable part.
3. Move the spline and joint up and down, left and right by hand and verify that there is no excessive play.
 - If there is any malfunction, replace the applicable part.

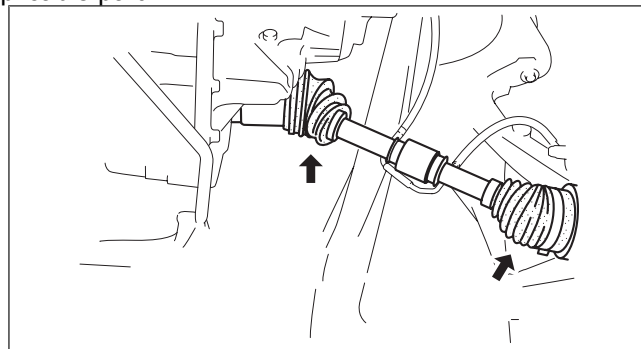

ac5wzw00002588