


## FRONT BUMPER REMOVAL/INSTALLATION

id091000800300


### Caution

- Affix the protective tape to the position (vehicle body side) shown in the figure to prevent scratches and damage.

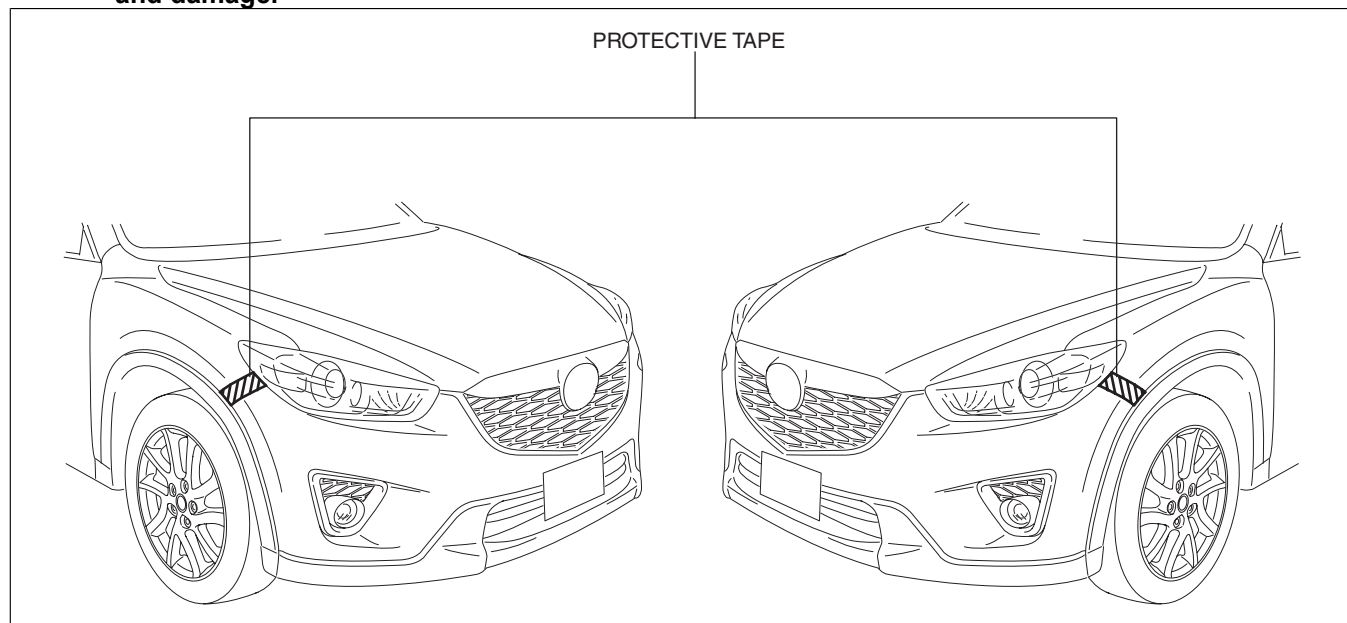

ac5wzw00002889

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove fasteners A.

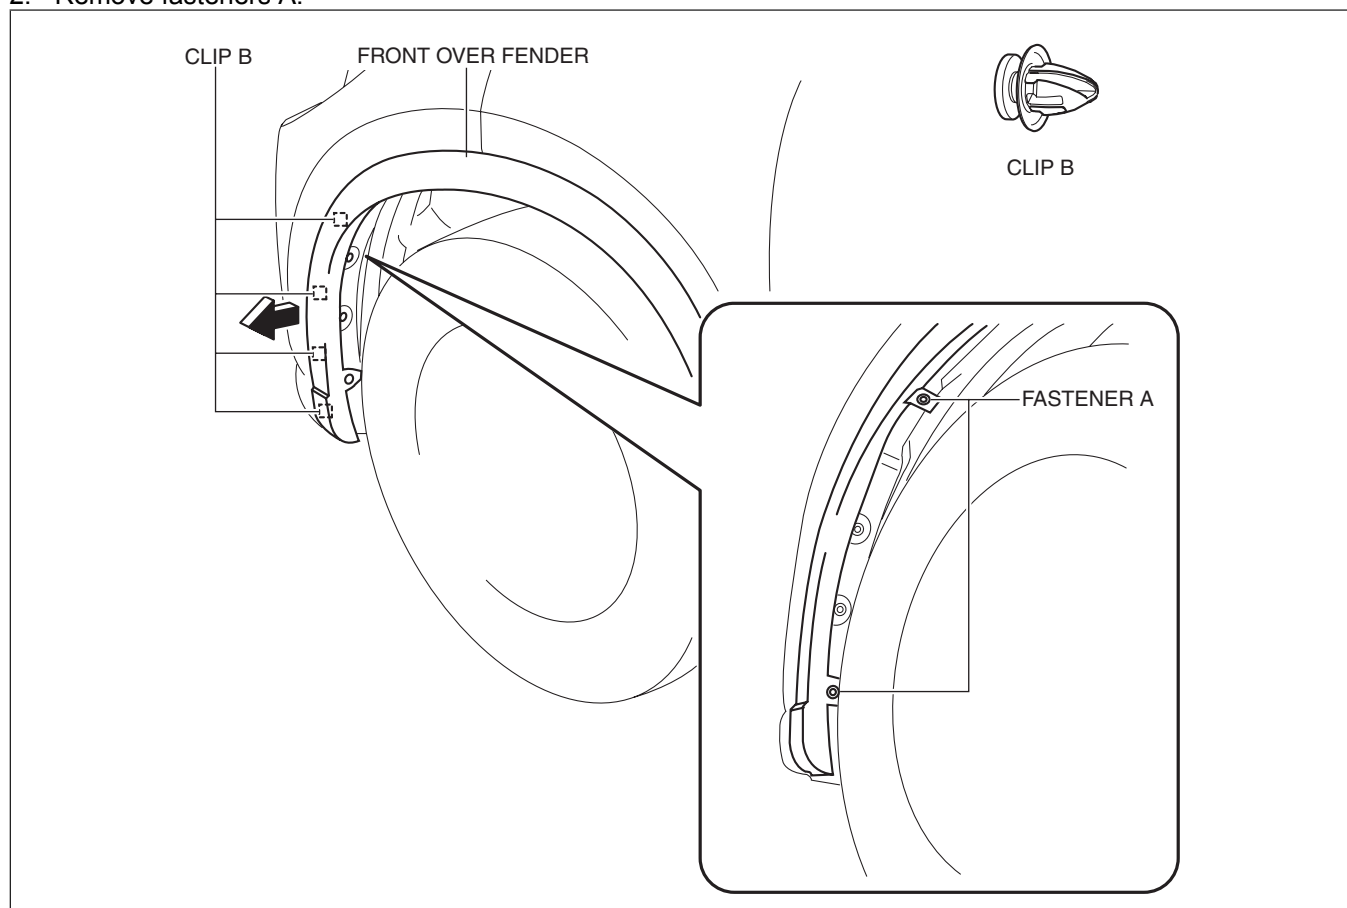


ac5wzw00003095

3. Pull the front over fender in the direction of the arrow shown in the figure, set the front over fender out of the way while detaching clips B.

**Caution**


- After removing clips B, insert a rag between the front fender panel and the front over fender to prevent the front fender panel and clips B from being damaged.

4. Remove screws C.

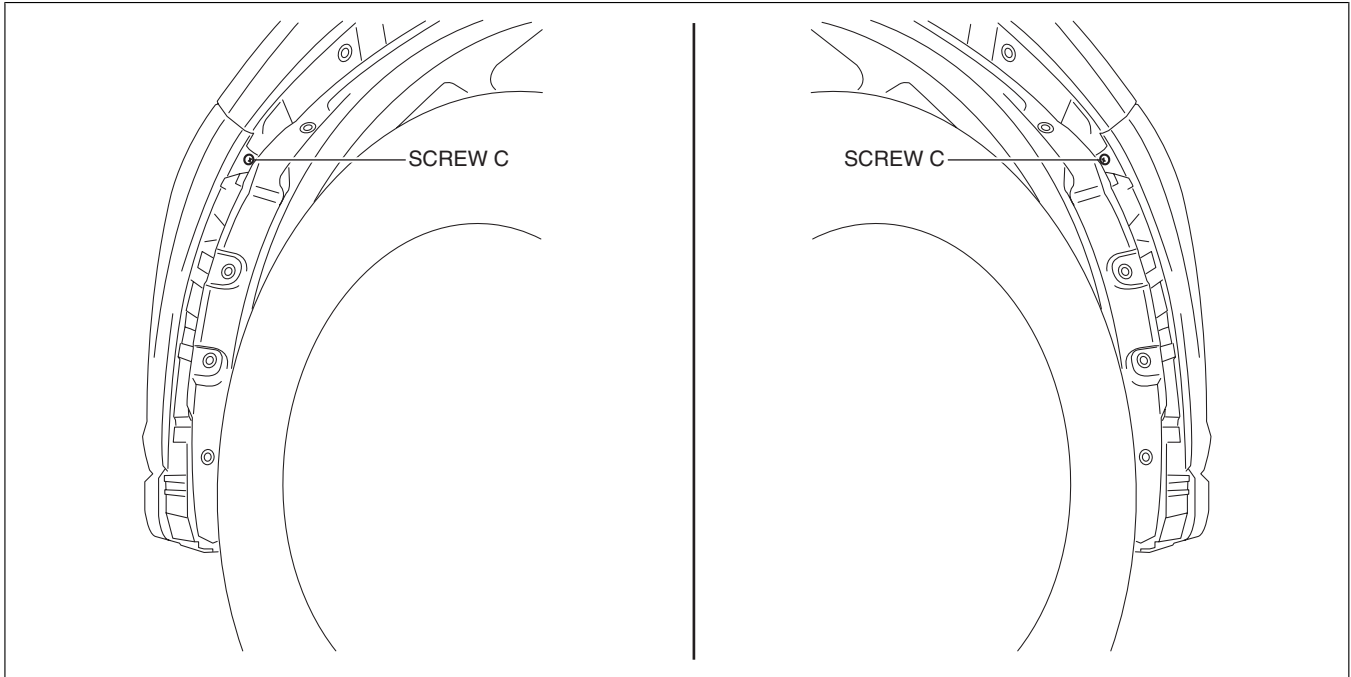


ac5wzw00001143

5. Remove screws D.

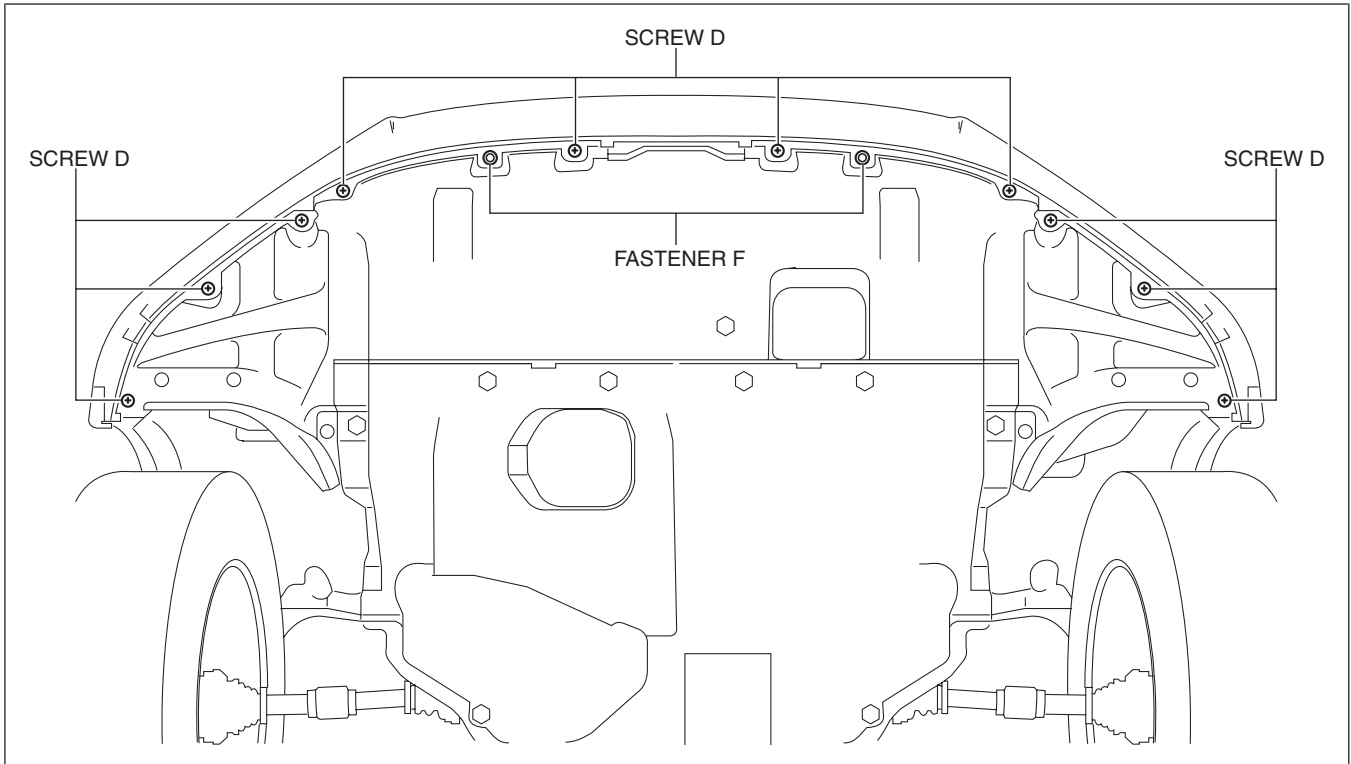

ac5wzw00001144

6. Remove fasteners F.
7. Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
8. Remove fasteners G.

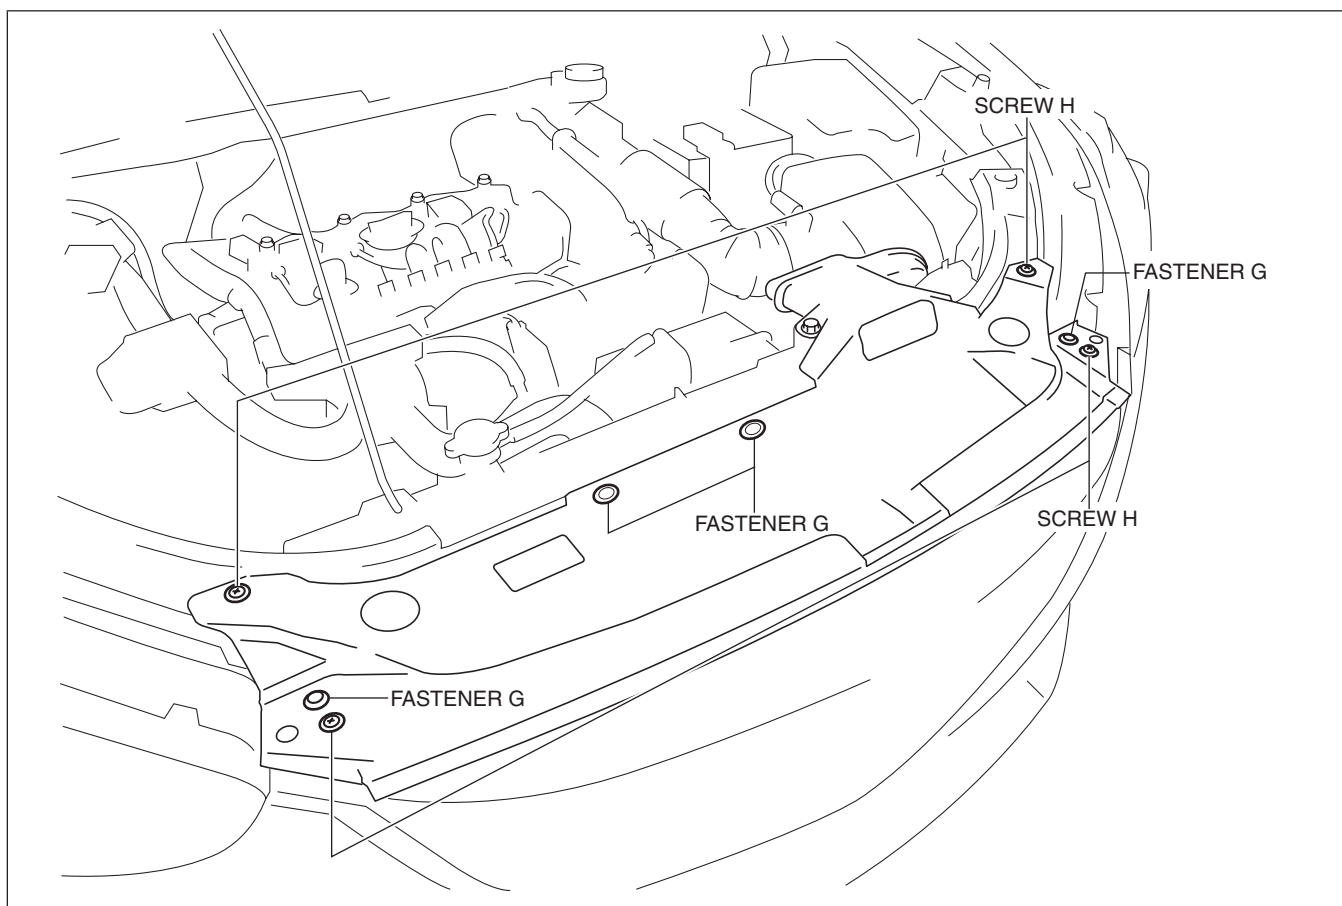


ac5wzw00003096

9. Remove screws H.

10. Pull the front bumper in the direction of the arrow (1) shown in the figure, then remove tabs I.


**Caution**

- The front bumper and front bumper slider are engaged firmly. If they are disengaged forcibly the bumper could fall and be damaged. Perform the servicing carefully when disengaging the front bumper from the front bumper slider.
- When disengaging the front bumper from the front bumper slider, the front bumper could fall and be damaged. Support the front bumper so that it does not fall.

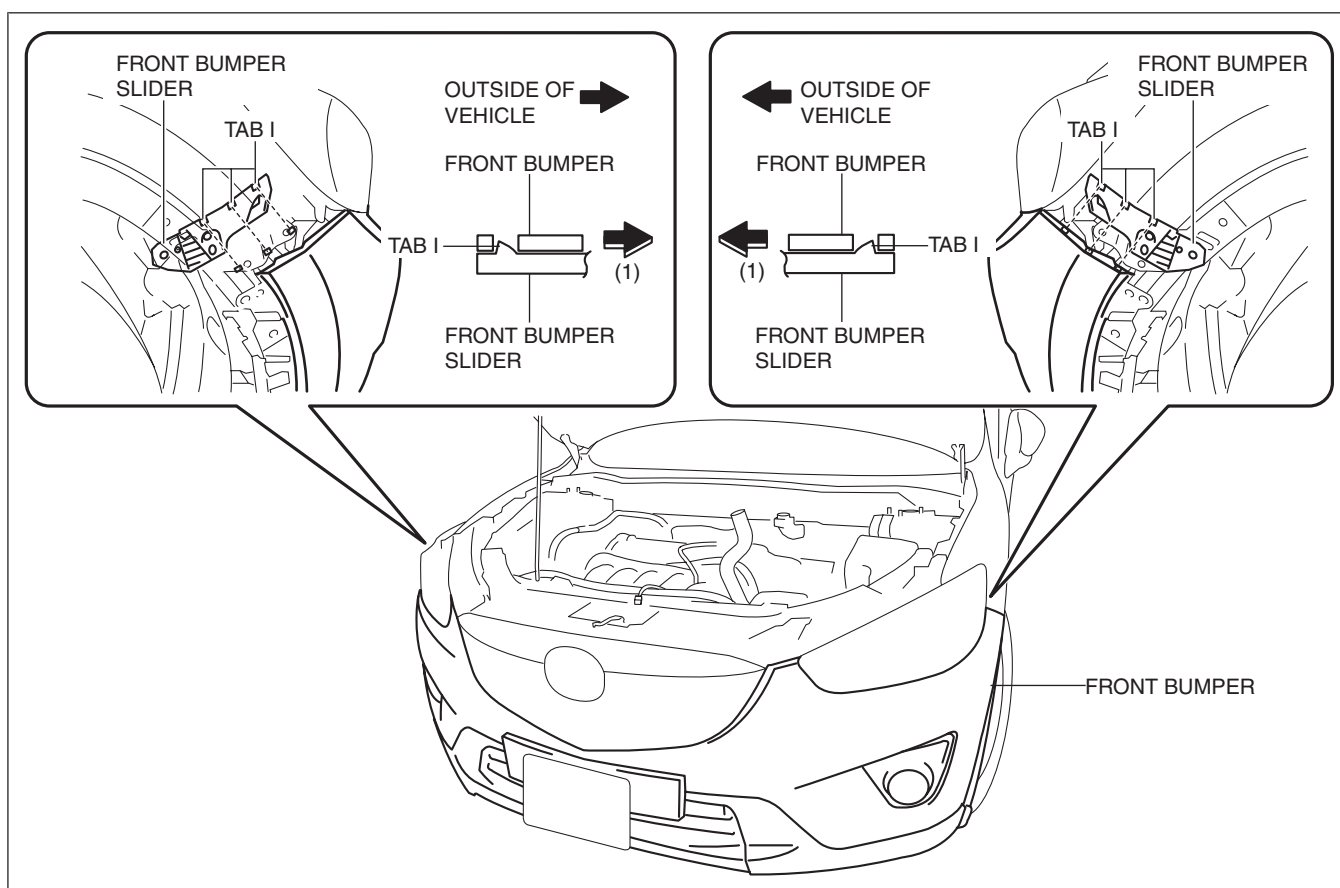

ac5wzw00004623

11. Remove the front bumper from the front bumper slider.
12. Pull the front bumper in the direction of the arrow (2) shown in the figure and remove it while detaching guides G.

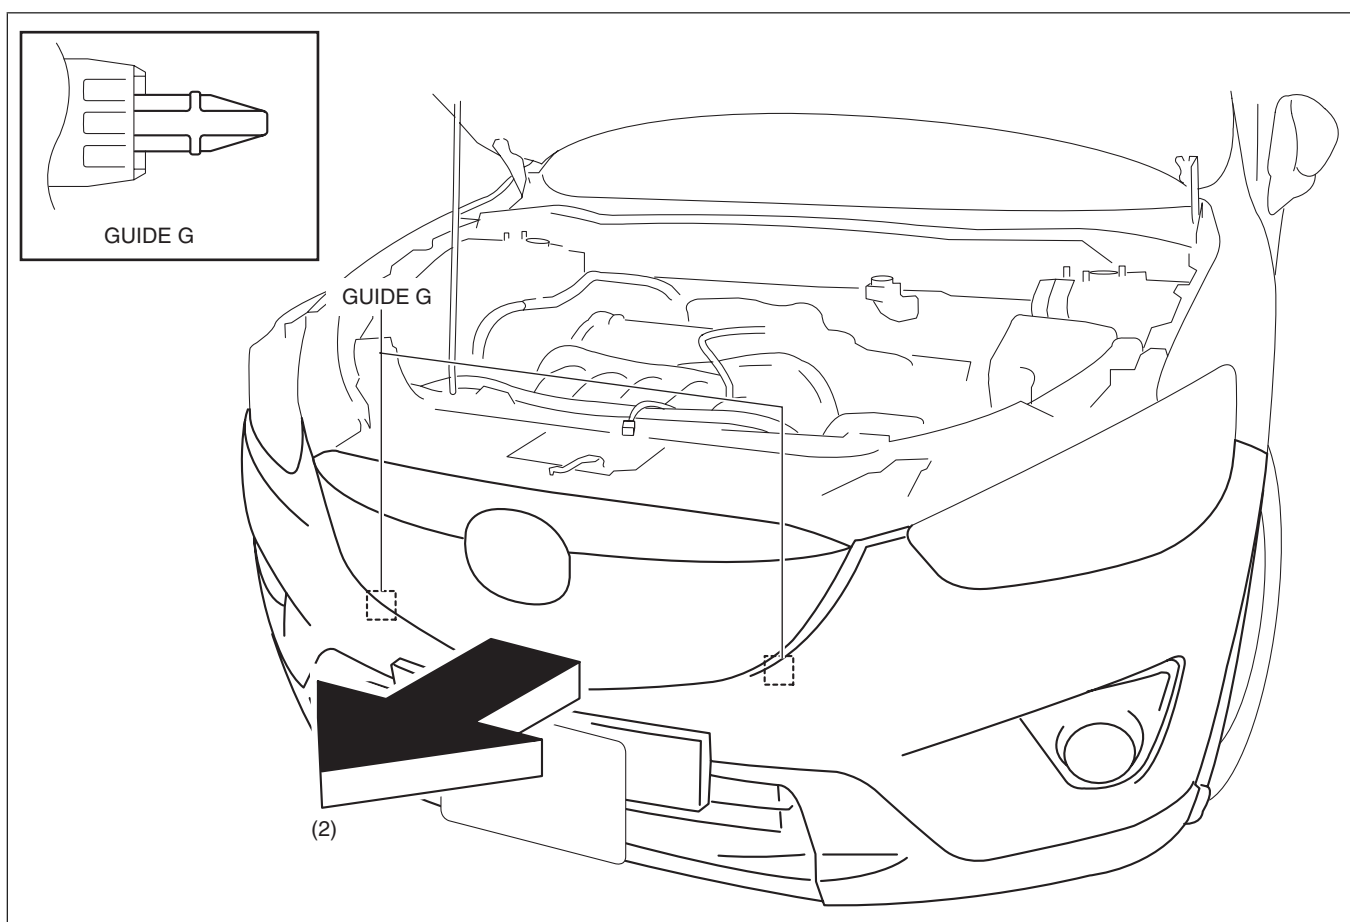


ac5wzw00004624

13. Disconnect the front fog light connector. (with front fog lights)
14. Disconnect the front ultrasonic sensor connector. (with parking sensor system)
15. Disconnect the front headlight cleaner hose (with headlight cleaner)

**Caution**

- **After removing front bumper, it may hit the front over fender and cause a damage and/or injury. Perform the following procedure to prevent the front over fender from being damaged.**
  - **Fix the front over fender and front fender panel with protective tape.**

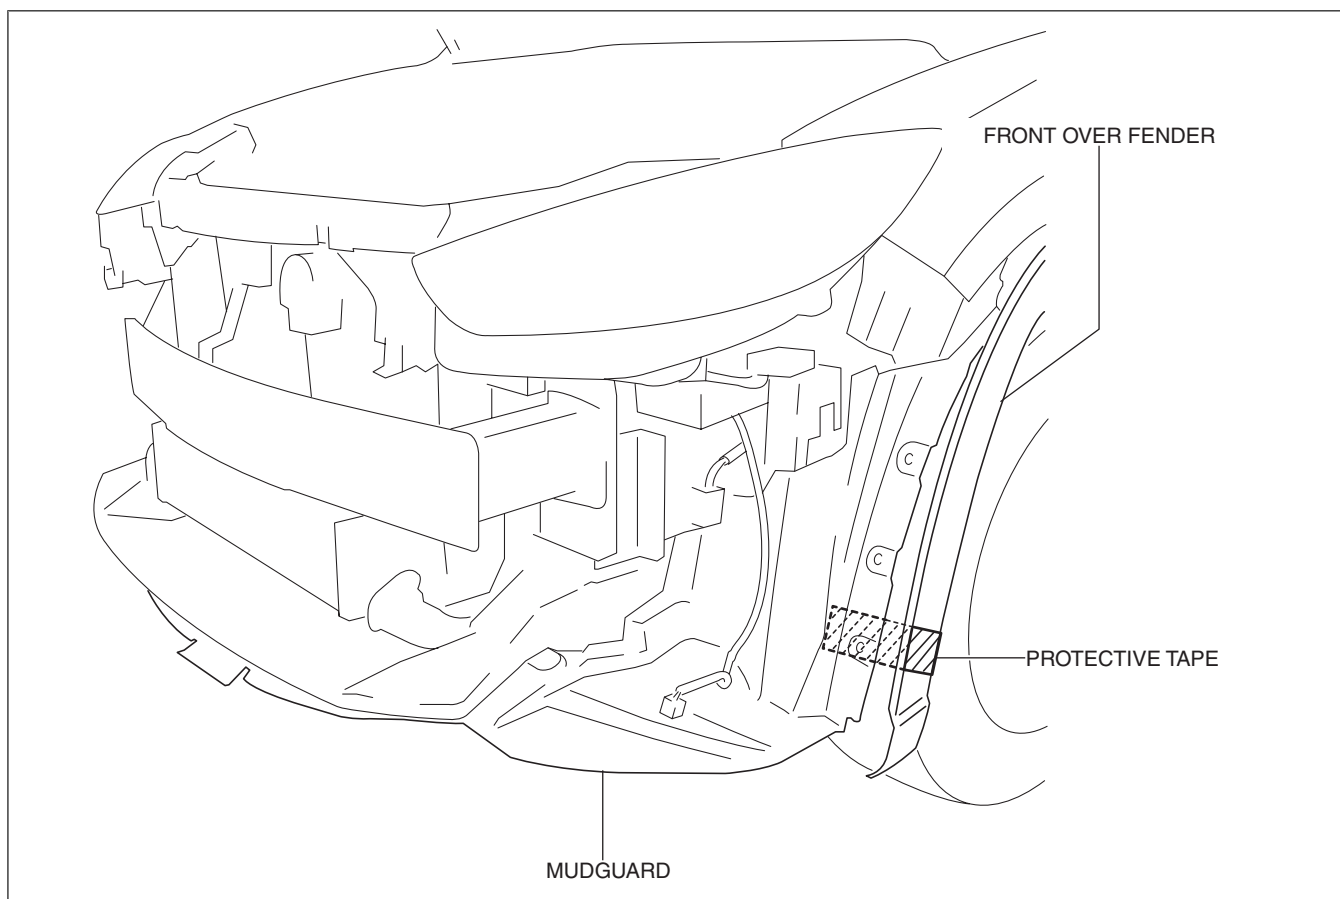

ac5uuw00002028

16. Install in the reverse order of removal.
17. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)