


## AUXILIARY JACK/USB PORT REMOVAL/INSTALLATION

id092000811500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the upper console. (See REAR CONSOLE DISASSEMBLY/ASSEMBLY.)
3. While pressing the auxiliary jack/USB port tabs in the direction of the arrows (1) shown in the figure, press the auxiliary jack/USB port in the direction of the arrow (2) to detach the auxiliary jack/USB port tabs from the upper console.

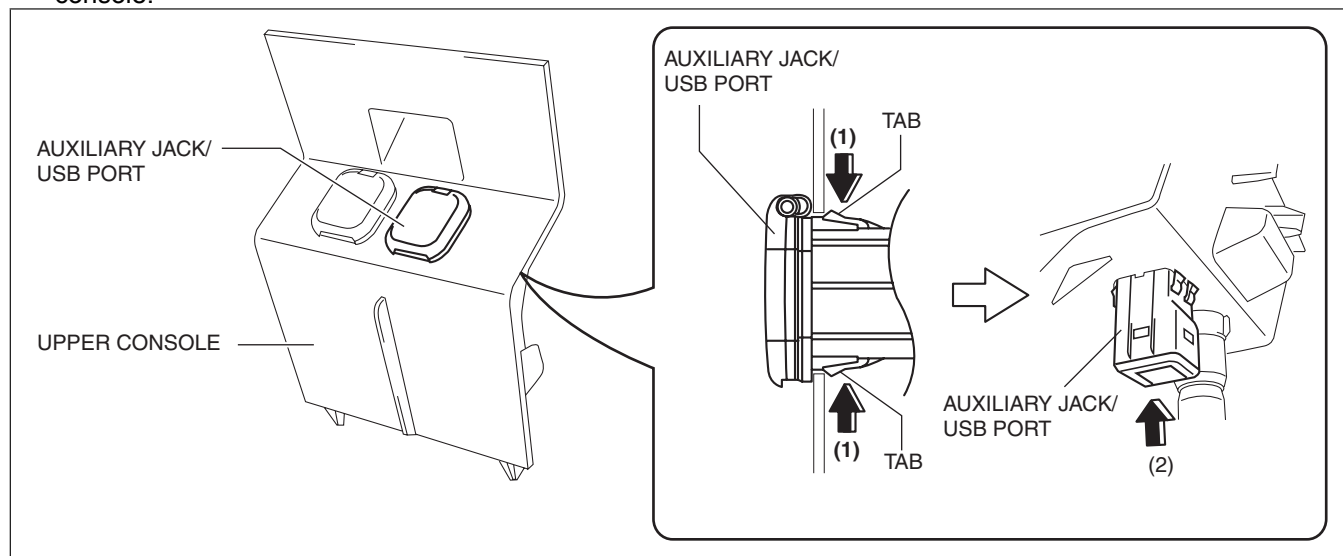

4. Remove the auxiliary jack/USB port.
5. Install in the reverse order of removal.

ac5wzw00002292