


POWER OUTER MIRROR INSPECTION

id091200002700

Mirror Glass Adjustment, Retract/Return

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Power outer mirror (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
3. Apply battery positive voltage and connect the ground to the power outer mirror terminals and inspect the power outer mirror operation.

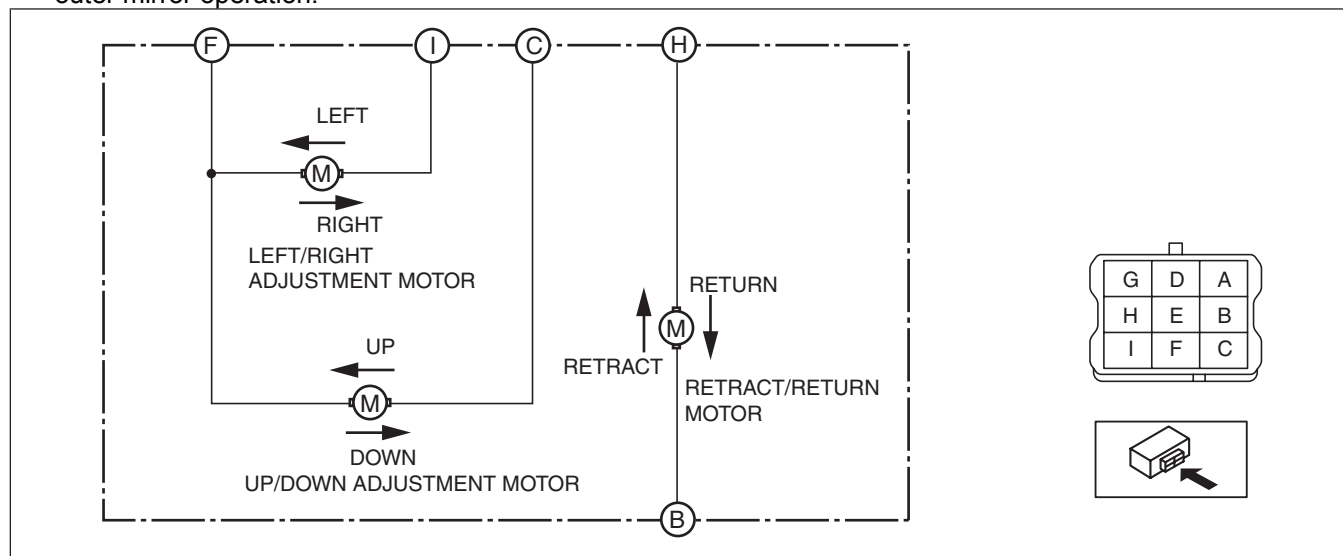


ac5wzw00001248

- If the power outer mirror does not operate as indicated in the table, replace the power outer mirror.

Mirror operation direction	Battery positive voltage connect terminal	Ground connect terminal
Up	C	F
Down	F	C
Left	I	F
Right	F	I
Retract	B	H
Return	H	B

Heated Outer Mirror Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Power outer mirror (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
 - (4) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Verify that the continuity between heated outer mirror connector terminals is as indicated in the table.

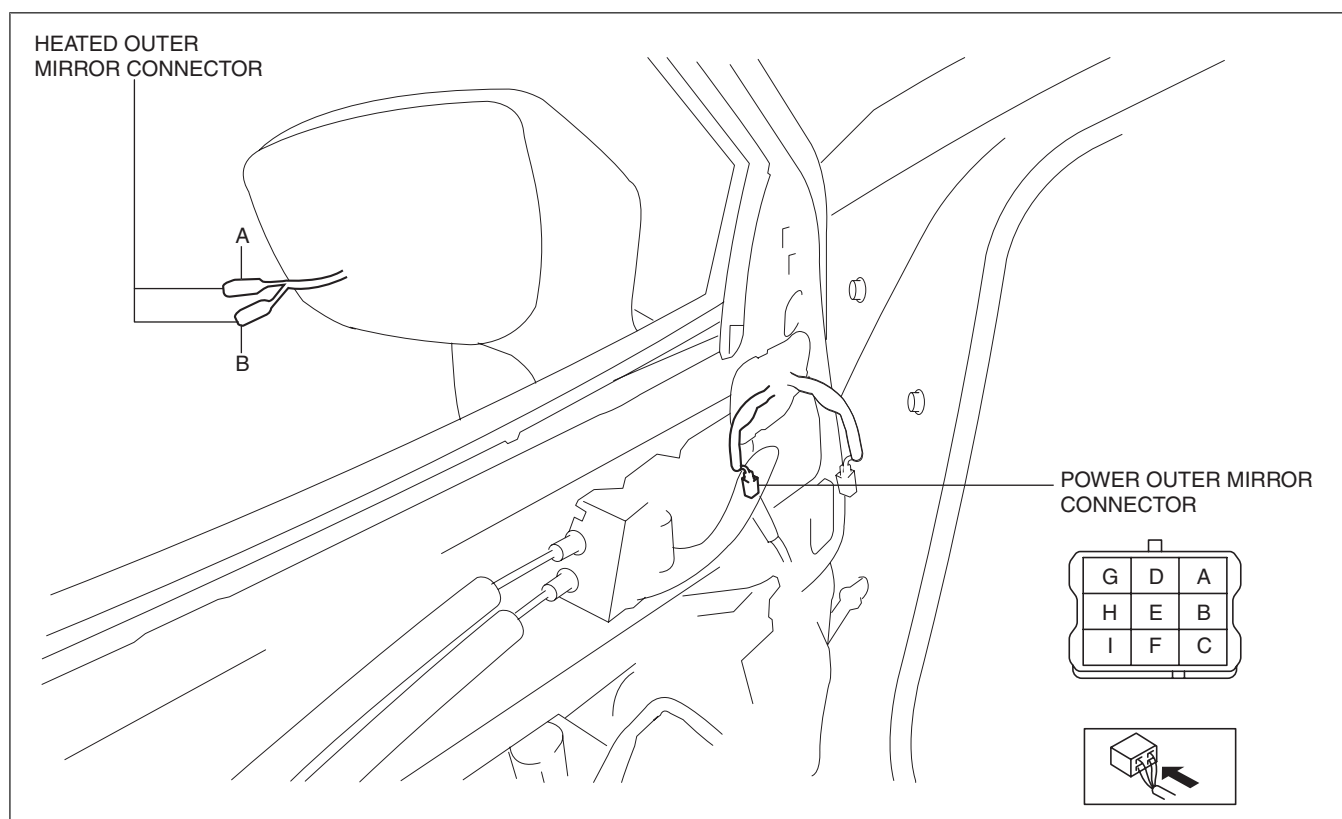

ac5wzw00002546

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)

Continuity				
Test condition	Terminal			
	A	G	A	B
Under any condition	○			○
		○	○	

ac5wzw00002547

RVM Indicator Light Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Power outer mirror (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
 - (4) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Verify that the continuity between RVM indicator light connector terminals is as indicated in the table.



ac5wzw00002538

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)

Continuity				
Test condition	Terminal			
	D	G	A	B
Under any condition	○	—	○	
		○	—	○

ac5wzw00003073

BSM Indicator Light Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Power outer mirror (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
 - (4) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Verify that the continuity between BSM indicator light connector terminals is as indicated in the table.



ac5wzw00003069

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)

Continuity				
Test condition	Terminal			
	G	H	A	B
Under any condition	○	—	○	
		○	—	○

ac5wzw00003074