


FRONT OUTER HANDLE REMOVAL/INSTALLATION


id091400510100

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
 - (4) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
 - (5) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
4. Disconnect the keyless antenna connector (With advanced keyless entry system).

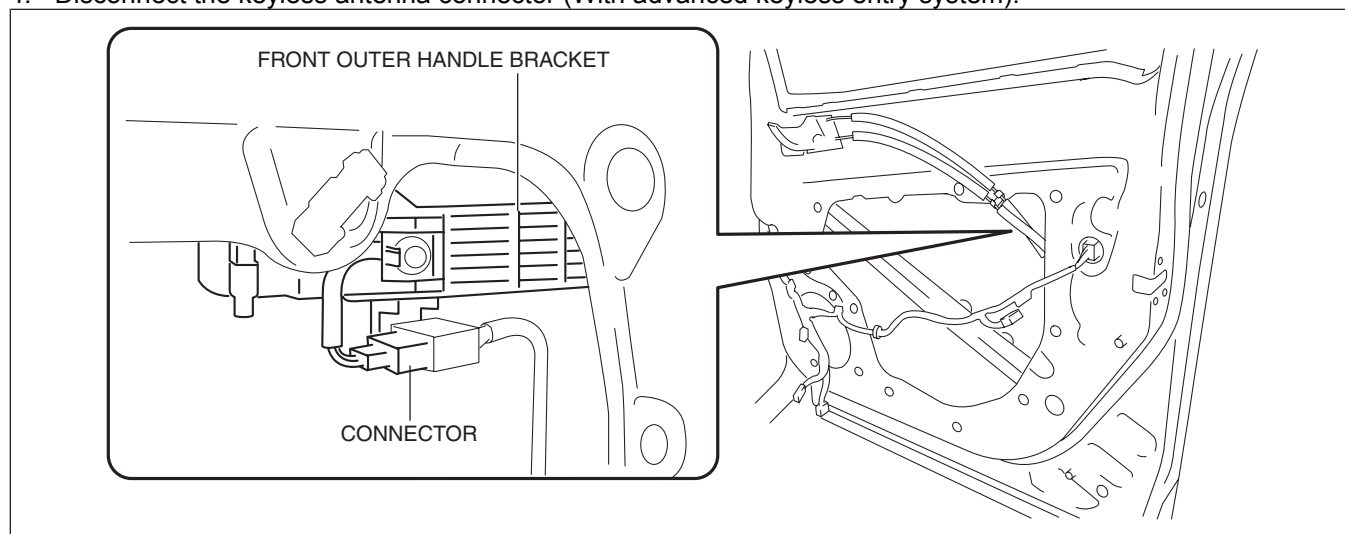


ac5wzw00000956

5. While pulling the front outer handle bracket pin in the direction of arrow (1) shown in the figure, pull the front outer handle in the direction of arrow (2) to detach the front outer handle bracket pin and the front outer handle.

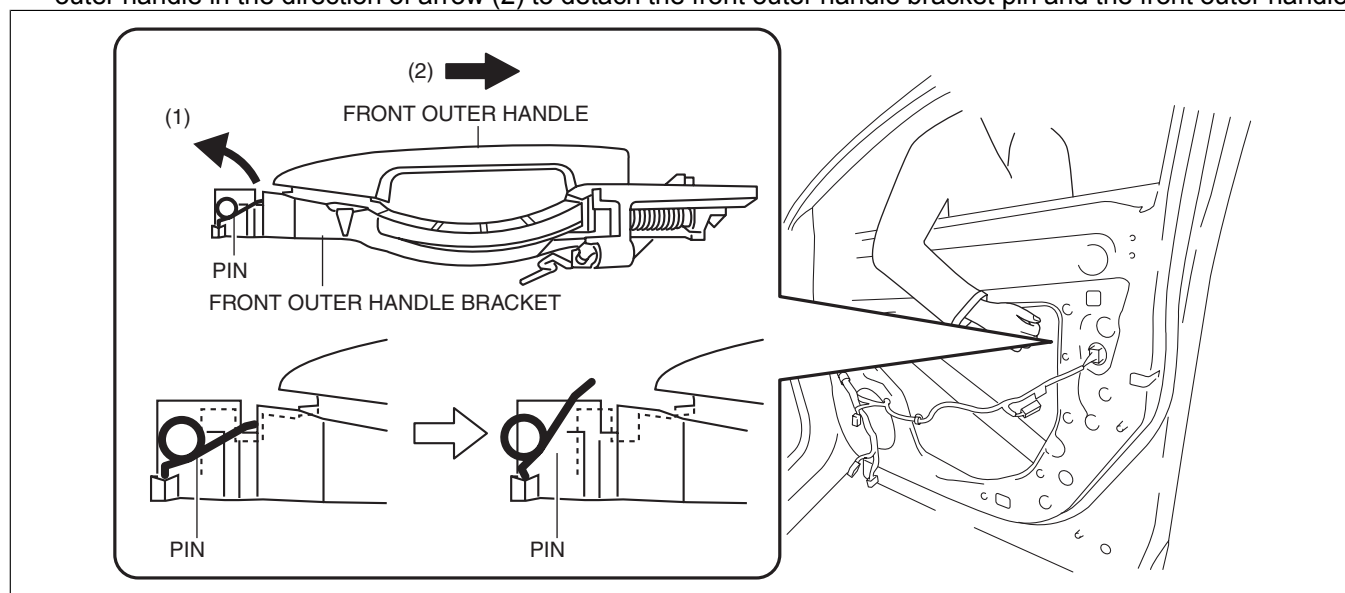


ac5wzw00000957

6. Remove the front outer handle in the direction of the arrow shown in the figure.

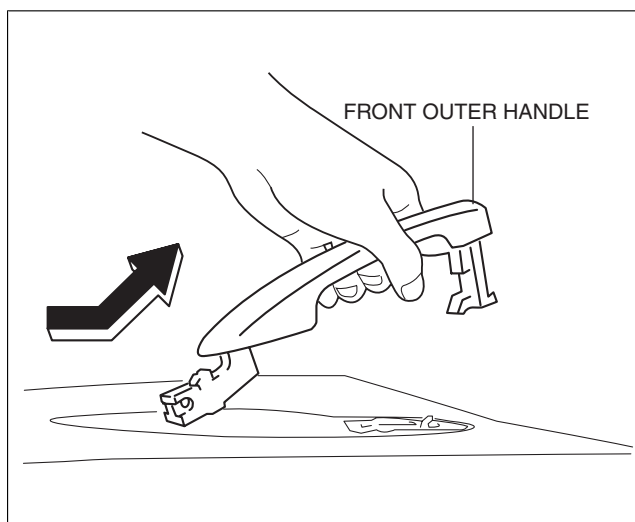

ac5wzw00000958

7. Loosen the screw securing the front outer handle bracket.

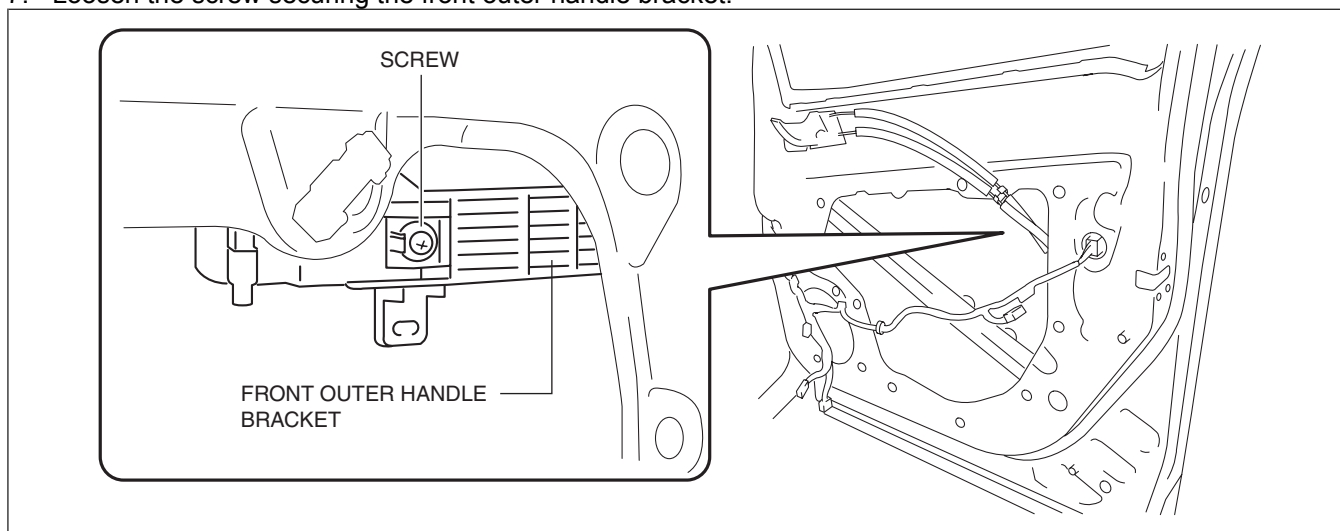


ac5wzw00000959

Note


- The screw cannot be removed because the front outer handle bracket has a stopper which prevents the screw from falling.

8. Pull the front outer handle bracket in the direction of arrow (1) shown in the figure and detach the front outer handle bracket hooks from the body.

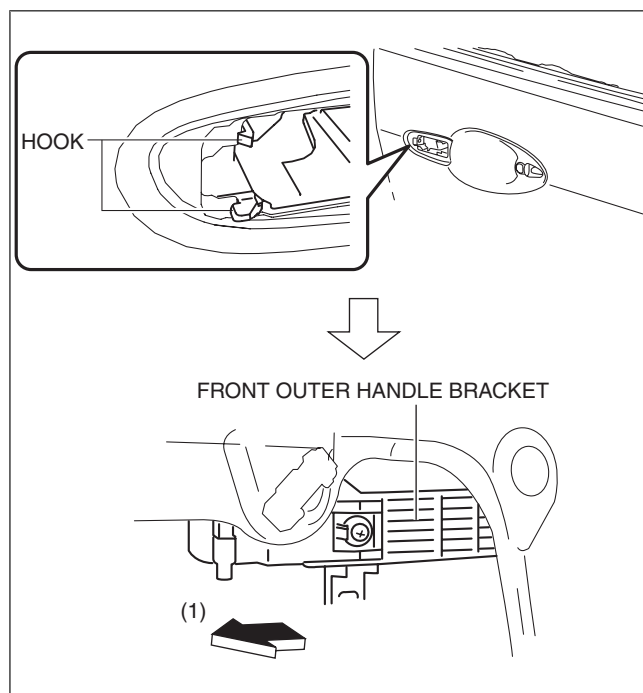


ac5wzw00000962

9. Lift the front outer handle bracket in the direction of arrow (2) shown in the figure to pull the rod out of the rod holder. (See Front Outer Handle Bracket Installation Note.)

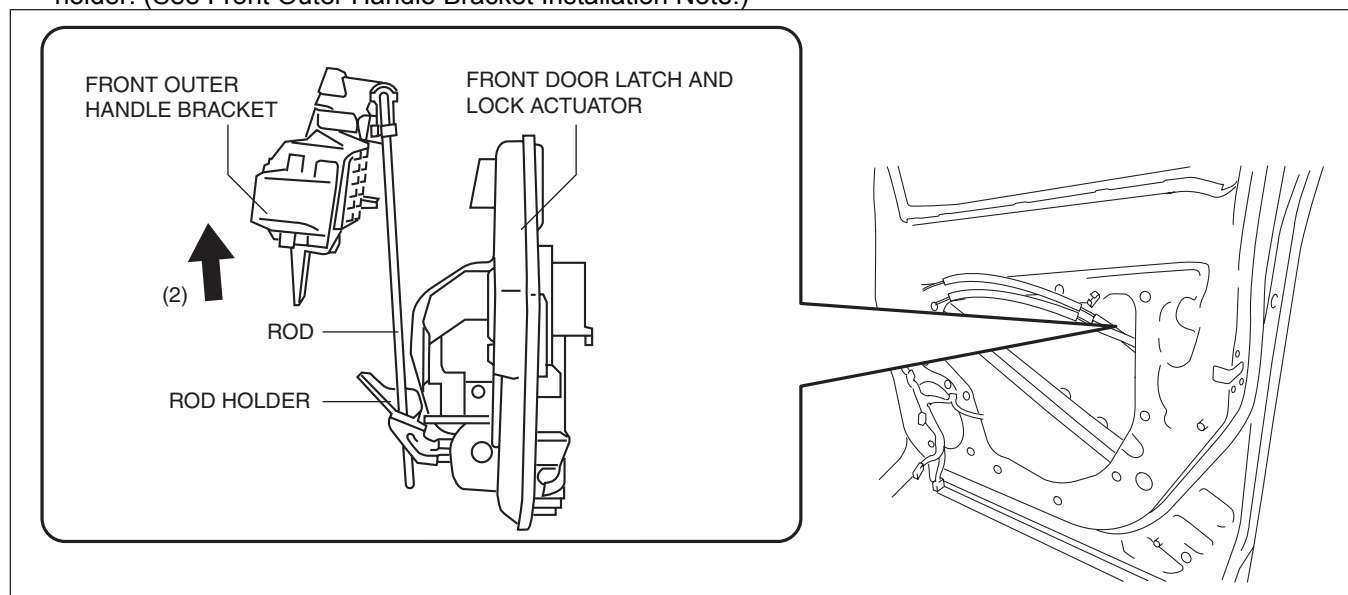

ac5wzw00003189


10. Remove the front outer handle bracket.
11. Remove the handle seat from the body.
12. Install in the reverse order of removal.

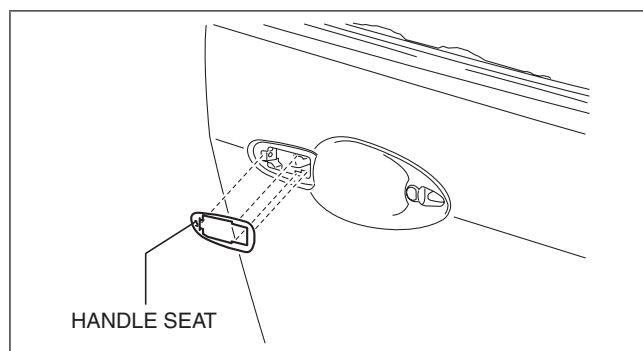

ac5wzw00002740

Front Outer Handle Bracket Installation Note

- To assure that the rod is inserted into the rod holder hole, verify that there is no excessive play.

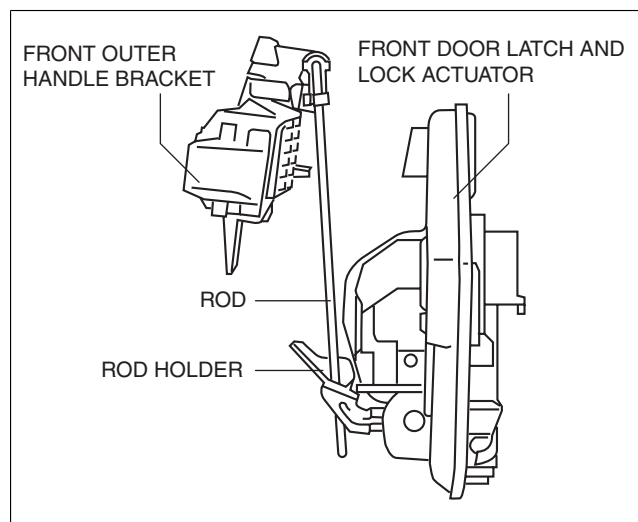

ac5wzw00002754