


## MAP LIGHT REMOVAL/INSTALLATION

id091800801200

### Front Map Light


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Open the sunglasses holder.
3. Remove the screws from the front map light.

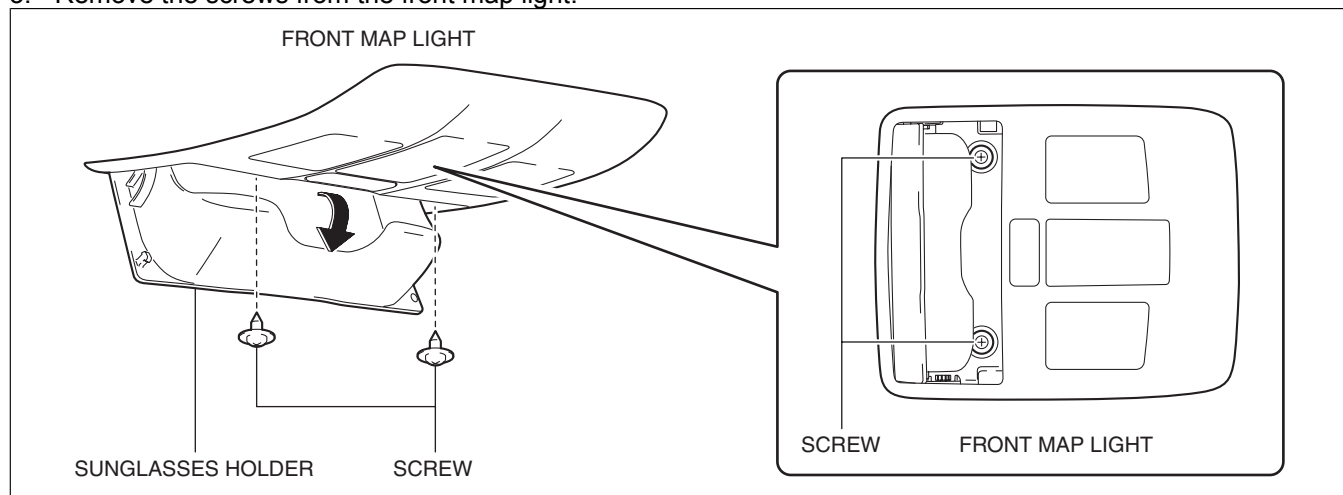


4. Move the front map light in the direction of the arrow (1) shown in the figure and pull out the pin from the bracket.

### Caution


- Be careful not to pull the connector out strongly when removing the front map light. Otherwise, the contact surface of the wiring harness secured to the headliner will come off and the wiring harness could be pulled out. If the front map light is installed with the wiring harness pulled out, the wiring harness could get caught between the headliner and front map light bracket resulting in an open or short circuit in the wiring harness.

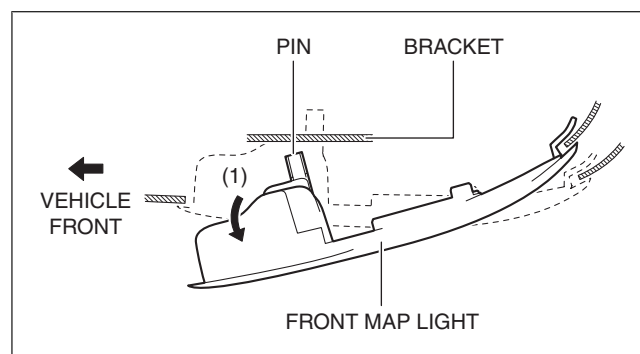

5. Move the front map light in the direction of the arrow (2) shown in the figure and pull out the front map light from the headliner.

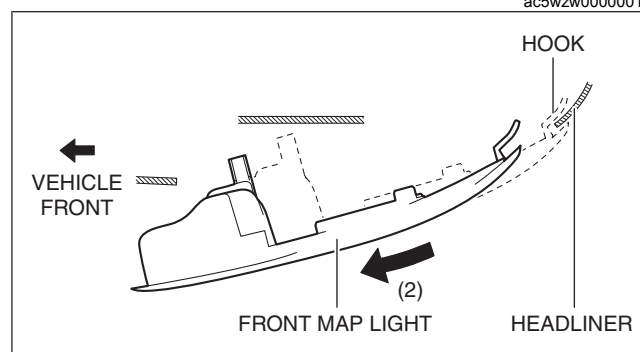


6. Disconnect the connector.

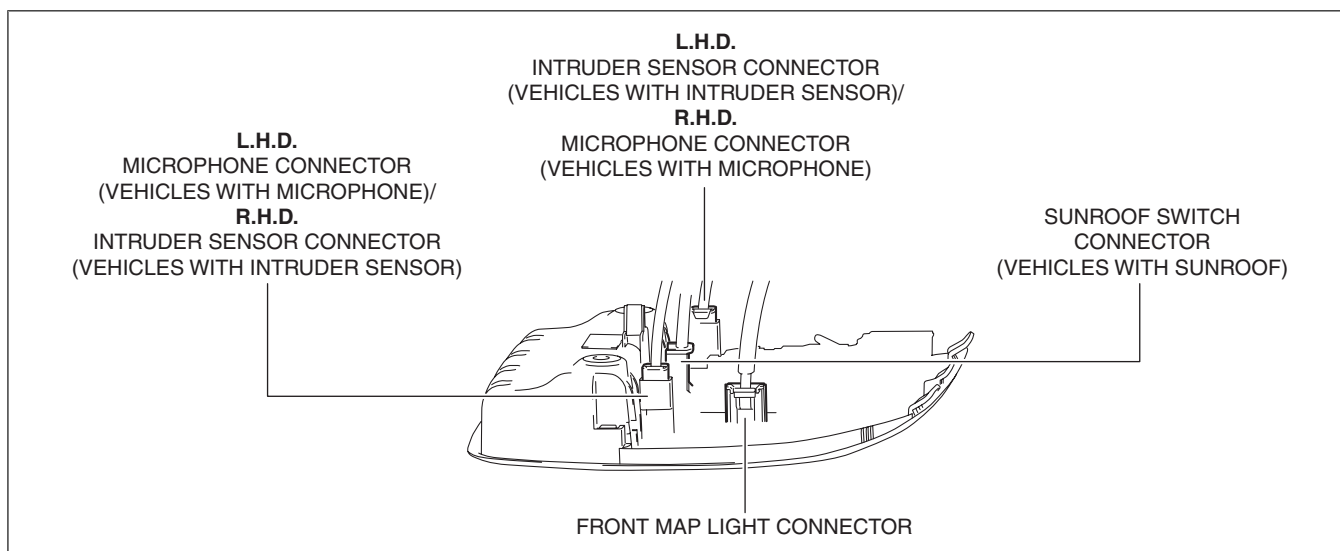

ac5wzw00000017

7. Remove the front map light.
8. Install in the reverse order of removal.

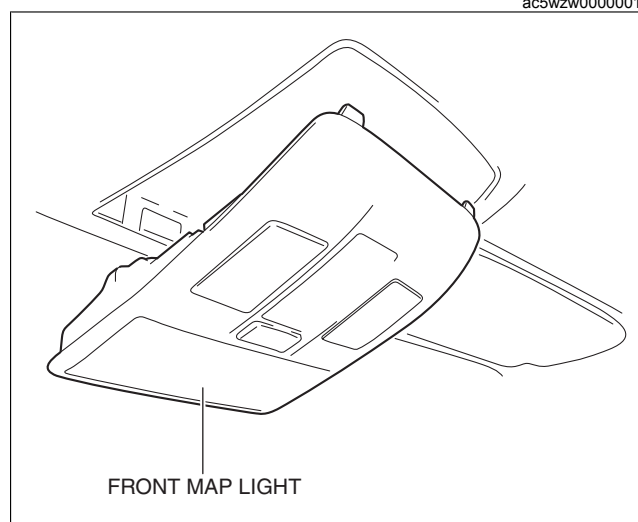


ac5wzw000000417

### Rear Map Light


1. Disconnect the negative battery cable. (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See **NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION** [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Sunroof seaming welt (vehicles with sunroof) (See **SUNROOF UNIT REMOVAL/INSTALLATION**.)
  - (2) A-pillar trim (See **A-PILLAR TRIM REMOVAL/INSTALLATION**.)
  - (3) Sunvisor (See **SUNVISOR REMOVAL/INSTALLATION**.)
  - (4) Front scuff plate (See **FRONT SCUFF PLATE REMOVAL/INSTALLATION**.)
  - (5) Rear scuff plate (See **REAR SCUFF PLATE REMOVAL/INSTALLATION**.)
  - (6) B-pillar lower trim (See **B-PILLAR LOWER TRIM REMOVAL/INSTALLATION**.)
  - (7) Adjust anchor cover (See **FRONT SEAT BELT REMOVAL/INSTALLATION**.)
  - (8) Upper anchor installation bolt on the seat belt (See **FRONT SEAT BELT REMOVAL/INSTALLATION**.)
  - (9) B-pillar upper trim (See **B-PILLAR UPPER TRIM REMOVAL/INSTALLATION**.)
  - (10) Assist handle (See **ASSIST HANDLE REMOVAL/INSTALLATION**.)
  - (11) Trunk board (See **TRUNK BOARD REMOVAL/INSTALLATION**.)
  - (12) Trunk end trim (See **TRUNK END TRIM REMOVAL/INSTALLATION**.)
  - (13) Trunk side trim (See **TRUNK SIDE TRIM REMOVAL/INSTALLATION**.)
  - (14) D-pillar trim (See **D-PILLAR TRIM REMOVAL/INSTALLATION**.)
  - (15) C-pillar trim (See **C-PILLAR TRIM REMOVAL/INSTALLATION**.)
  - (16) Headliner (See **HEADLINER REMOVAL/INSTALLATION**.)

3. Disconnect the connector.

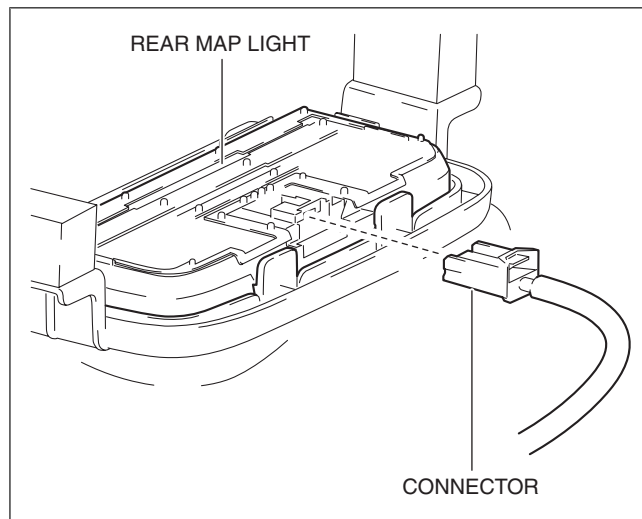

ac5wzw00000418

4. Move the bracket in the direction of the arrow (1) shown in the figure, press the rear map light in the direction of the arrow (2) shown in the figure, and detach the rear map light tab and bracket.

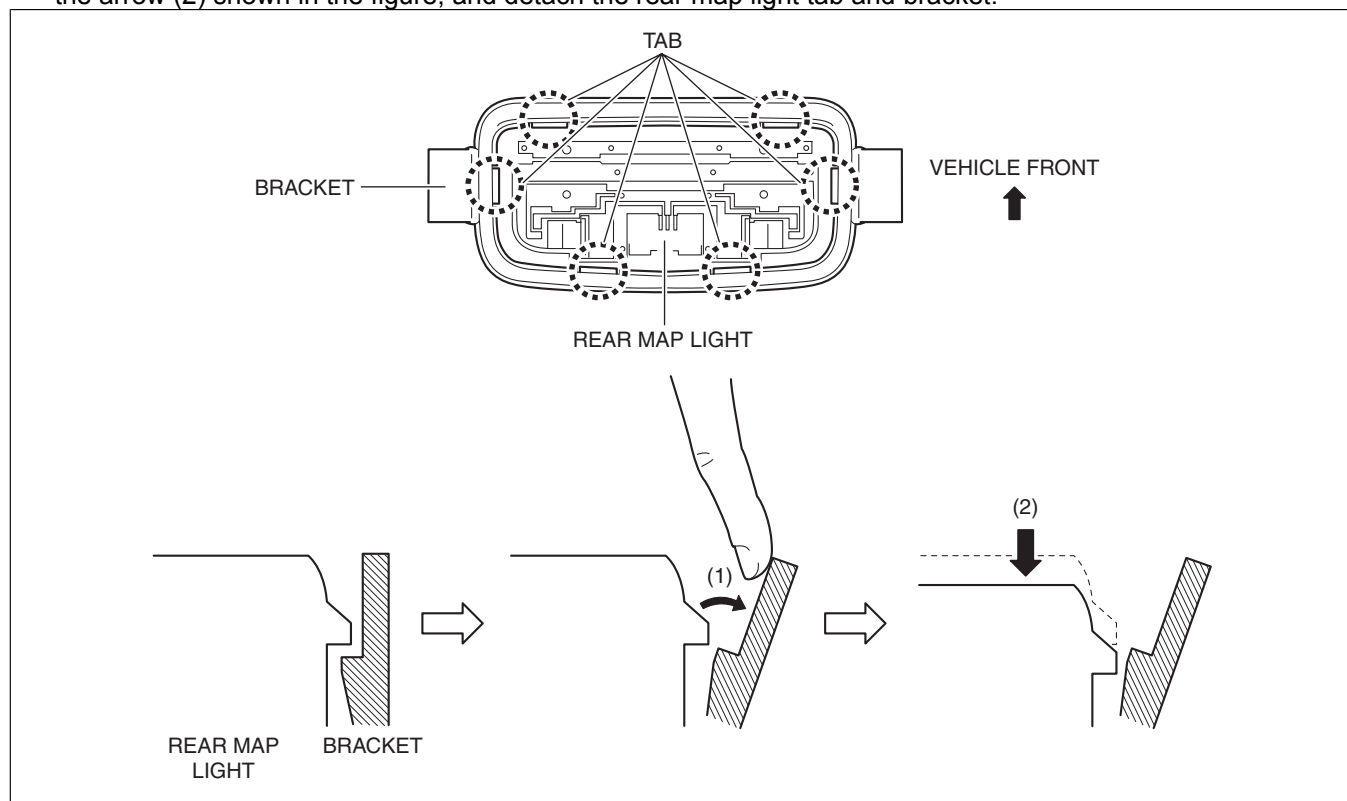


ac5wzw00000419

5. Detach all the rear map light tabs and bracket and remove the rear map light from the bracket.

**Caution**

- If the rear map light is removed from the bracket, the rear map light may fall off and be damaged. When removing the rear map light from the bracket, hold the rear map light on the lens side with a hand during servicing.

6. Install in the reverse order of removal.

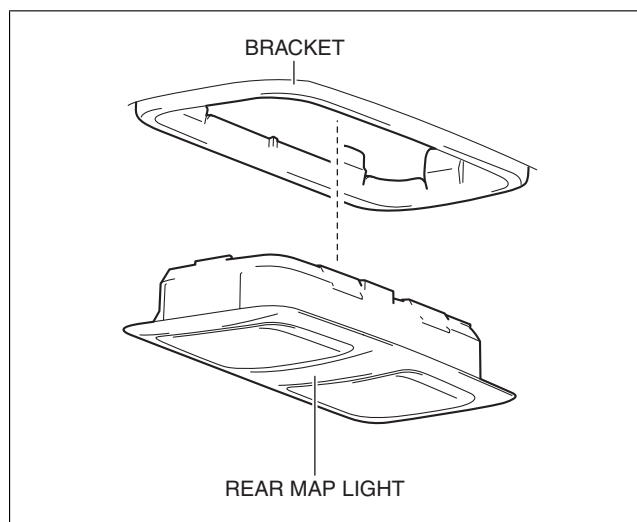

ac5wzw00000420