


POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION


id091200002000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the cover A.

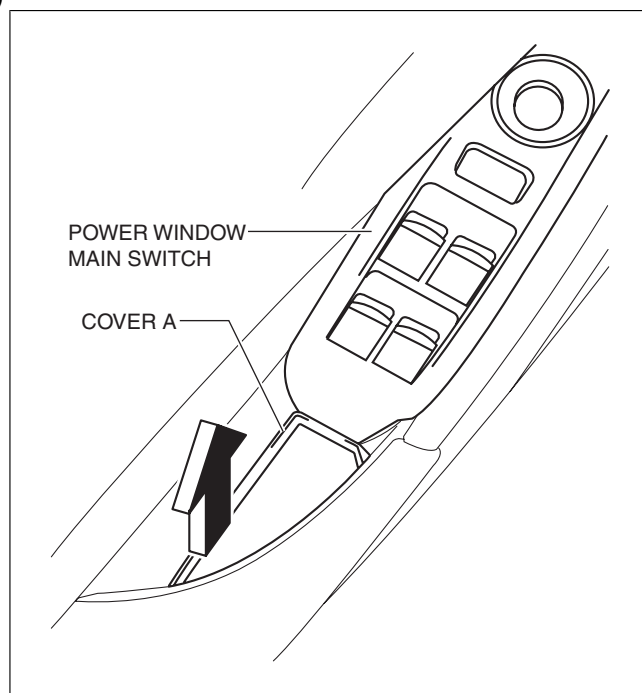


ac5wzw00001238

3. Insert a tape-wrapped flathead screwdriver shown in the figure and remove the tab B in the direction of arrow (1).

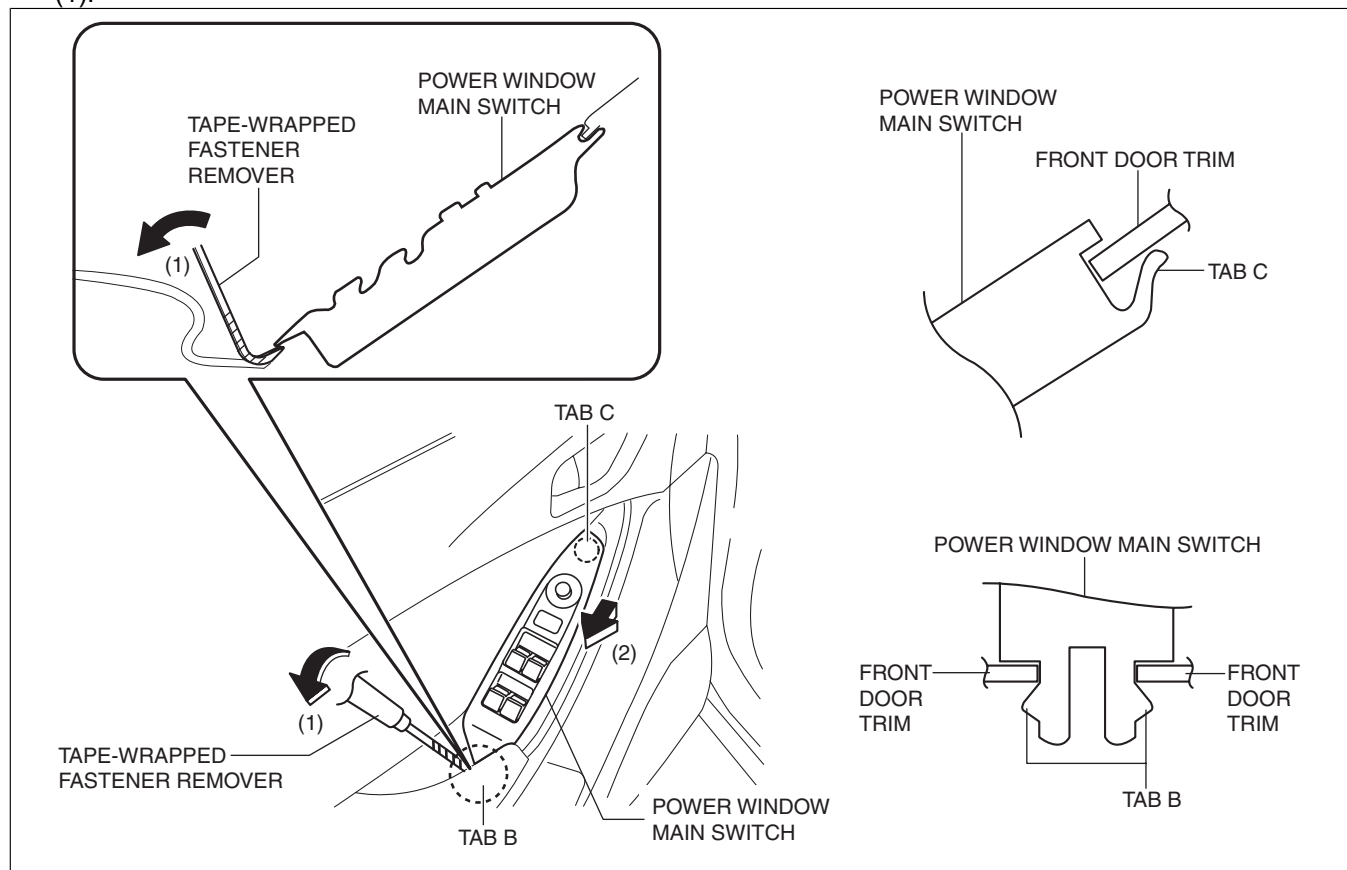

ac5wzw00001558

4. Slide the power window main switch in the direction of the arrow (2) shown in the figure and remove the tab C.
5. Disconnect the power window main switch connector.
6. Pull the edge of power window main switch cover in the direction of arrow (3) and detach tabs D.

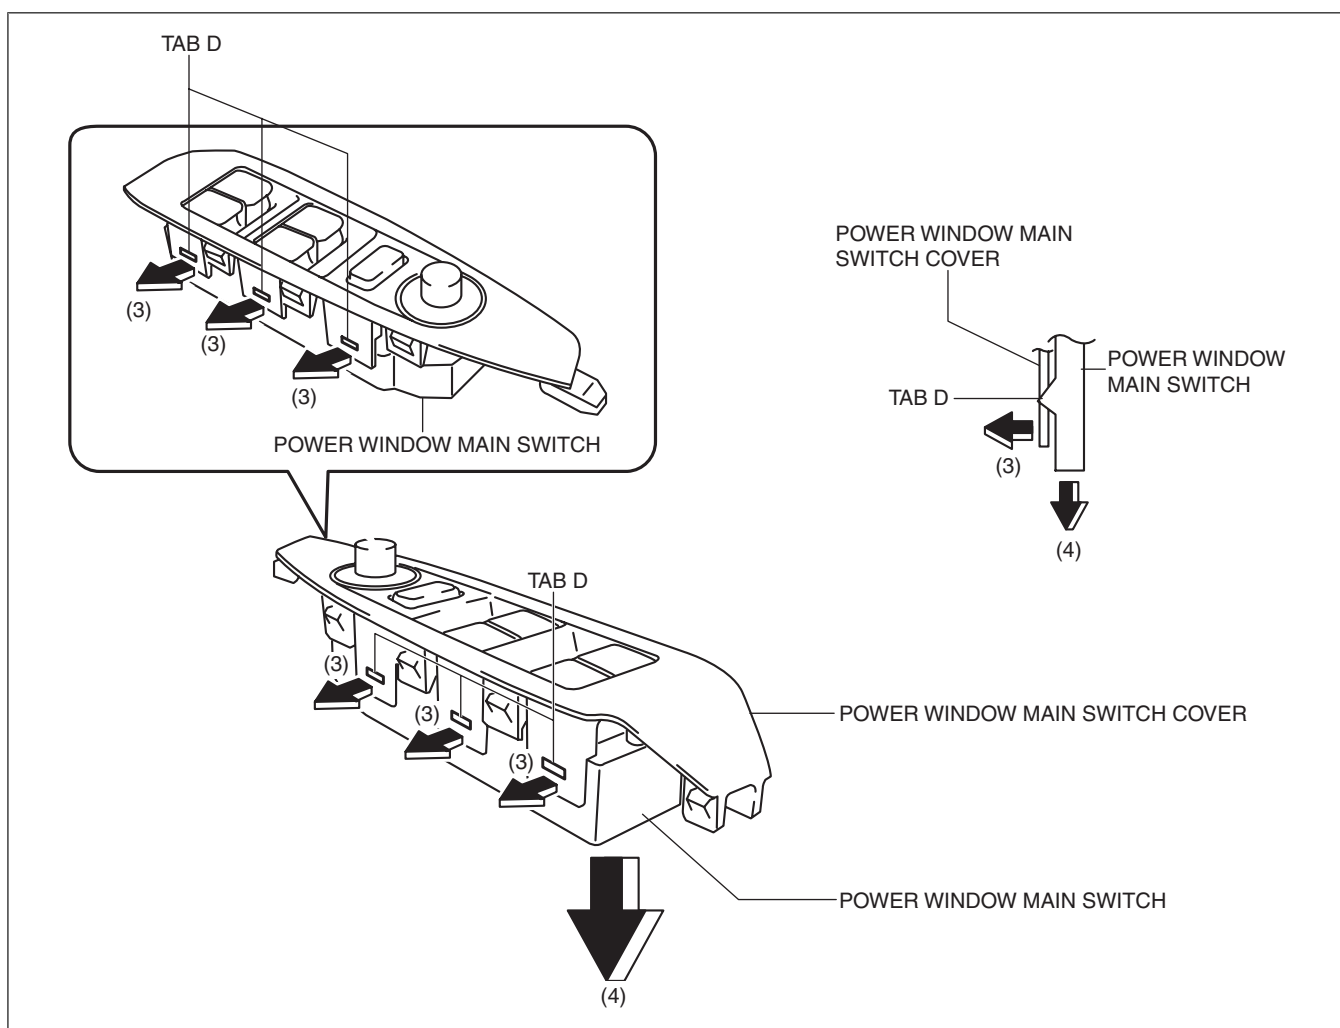

ac5wzw00001240

7. Remove the power window main switch in the direction of arrow (4) shown in the figure.
8. Install in the reverse order of removal.