


POWER SYSTEM LOCATION INDEX

id092100491000

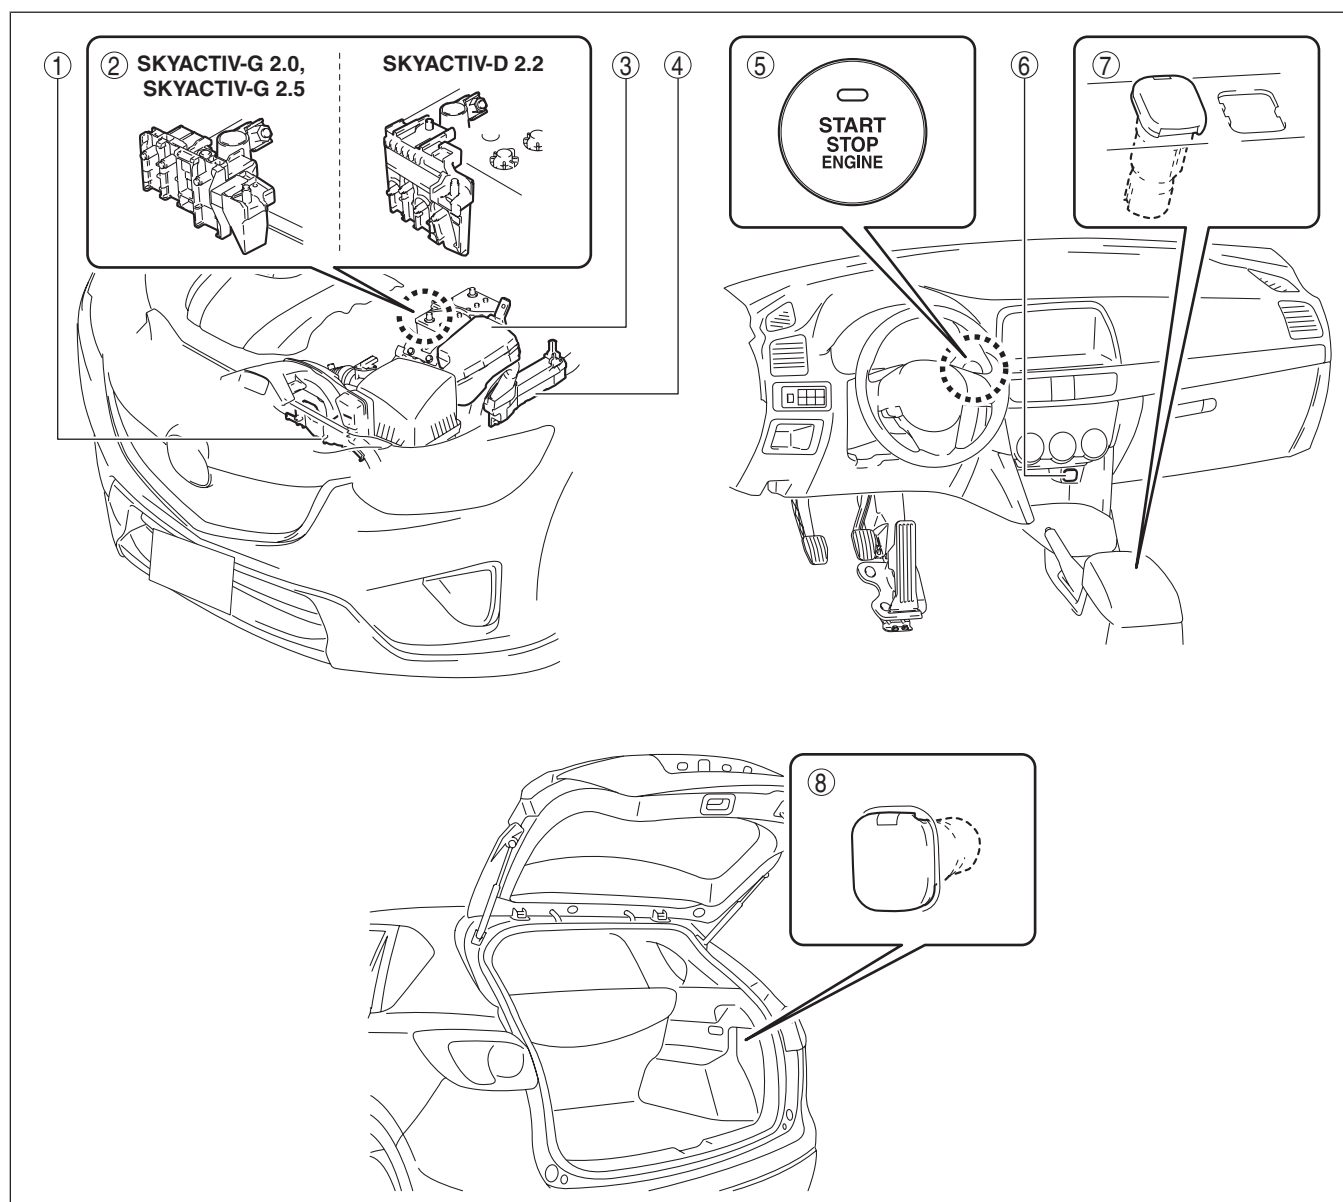

ac5wzw00006234

1	Front wiring harness protector No.1 (See FRONT WIRING HARNESS PROTECTOR REMOVAL/INSTALLATION.)	5	Push button start (See PUSH BUTTON START REMOVAL/INSTALLATION.) (See PUSH BUTTON START INSPECTION.) (See FORCED IGNITION ON.)
2	Main fuse (See MAIN FUSE REMOVAL/INSTALLATION.)	6	Front accessory socket (See FRONT ACCESSORY SOCKET REMOVAL/INSTALLATION.) (See FRONT ACCESSORY SOCKET INSPECTION.)
3	Relay and fuse block (See RELAY AND FUSE BLOCK REMOVAL/INSTALLATION.) (See RELAY AND FUSE BLOCK DISASSEMBLY/ASSEMBLY.) (See RELAY AND FUSE BLOCK MIDDLE COVER DISASSEMBLY/ASSEMBLY.) (See FUSE SERVICE CAUTIONS.) (See RELAY LOCATION.) (See RELAY INSPECTION.)	7	Center accessory socket (See CENTER ACCESSORY SOCKET REMOVAL/INSTALLATION.) (See CENTER ACCESSORY SOCKET INSPECTION.)
4	Front wiring harness protector No.2 (See FRONT WIRING HARNESS PROTECTOR REMOVAL/INSTALLATION.)	8	Rear accessory socket (See REAR ACCESSORY SOCKET REMOVAL/INSTALLATION.) (See REAR ACCESSORY SOCKET INSPECTION.)