

SHIFT POSITION INDICATOR LIGHT [GW6A-EL, GW6AX-EL]


id0517i2361700

Purpose/Function

- The shift position indicator light indicates the selector lever position.

Construction


- The shift position indicator light is built into the instrument cluster.

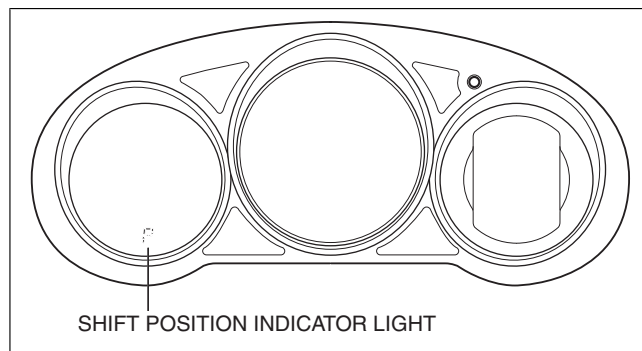

ac5uun00000647

Operation

- The TCM sends a shift position indicator light illumination request signal to the instrument cluster via CAN based on the signal from the integrated transaxle range sensor signal received via CAN.

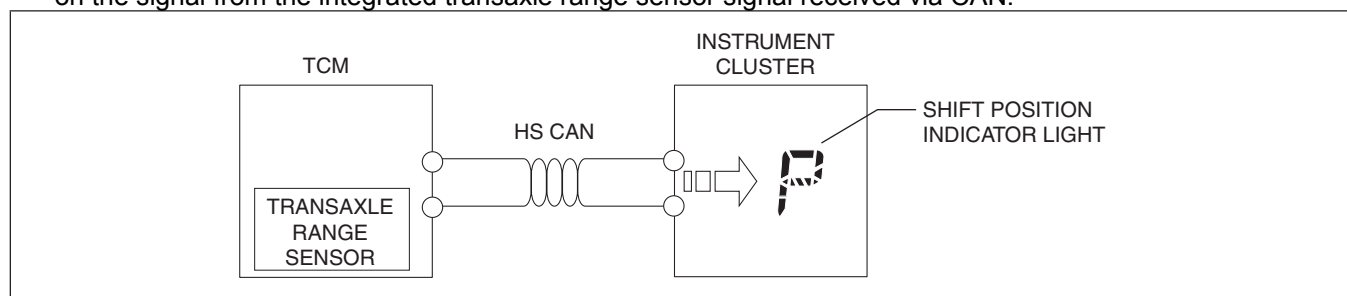

ac5uun00000648