


CLUTCH RELEASE CYLINDER REMOVAL/INSTALLATION [C66M-R, C66MX-R]

id0510mc157100

Caution


- Do not allow clutch fluid to get on a painted surface. Clutch fluid contains properties which can dissolve the paint. If clutch fluid gets on a painted surface, wash it off with water immediately and wipe the area off completely.

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Disconnect the clutch pipe and hose No.2 from clutch release cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
3. Remove the clutch release cylinder.

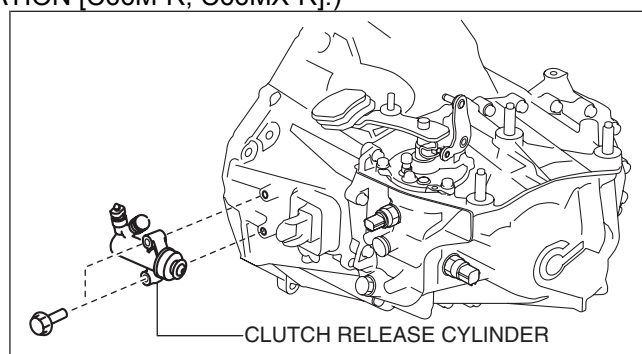

ac5wzw00006154

4. Install the clutch release cylinder.
5. Connect the clutch pipe and hose No.2 from clutch release cylinder, and plug it to avoid clutch fluid leakage. (See CLUTCH PIPE AND HOSE REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
6. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
7. Bleed the air from the clutch system. (See CLUTCH FLUID REPLACEMENT/AIR BLEEDING [C66M-R, C66MX-R].)

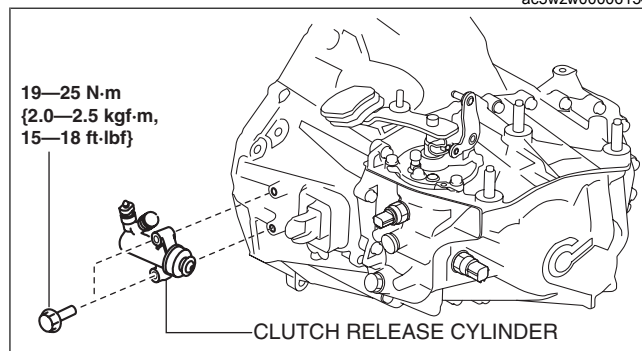

ac5wzw00002829