

OUTPUT GEAR [GW6A-EL, GW6AX-EL]


id0517i2352100

Purpose/Function

- The output gear transmits the drive force transmitted from the primary gear and secondary gear to the differential.

Construction

- The output gear is engaged with the secondary gear and rotates as a single unit.

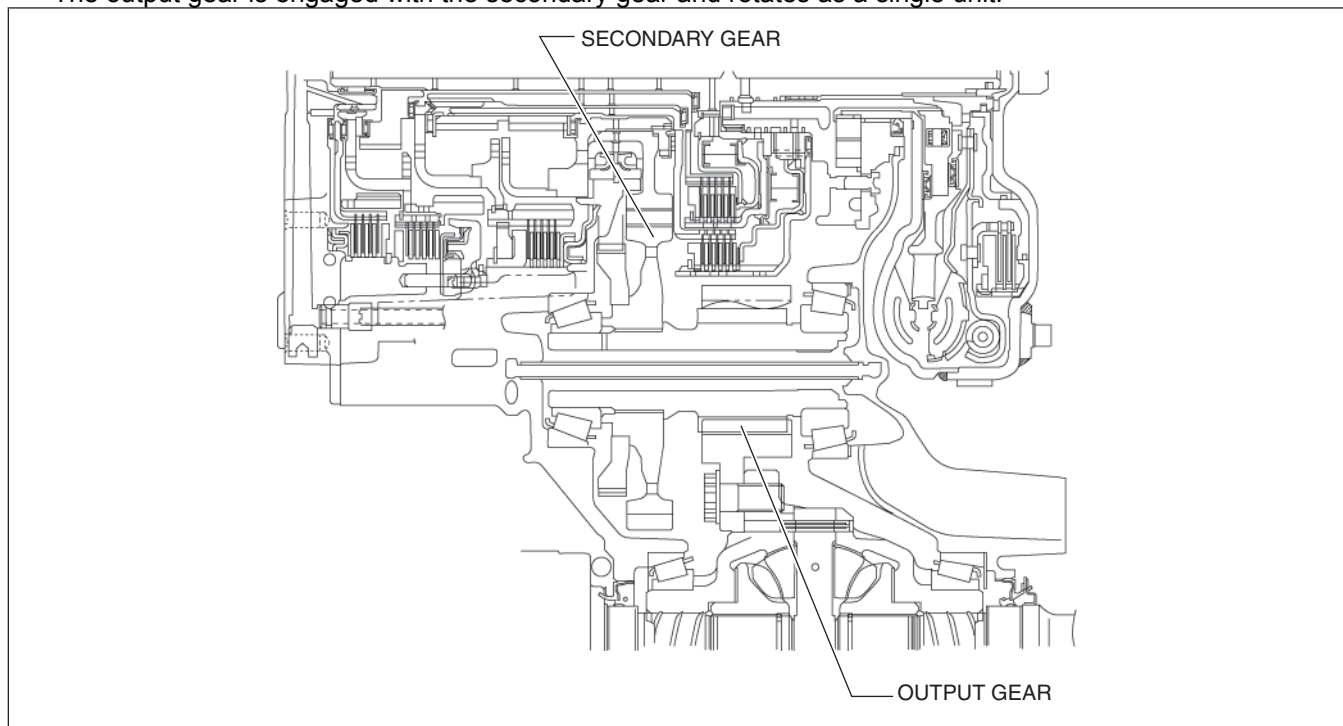

ac5wzn00001707