

## CONNECTING ROD INSPECTION


id011000502800

1. Inspect the connecting rod for bending and distortion using the connecting rod aligner.
  - If it exceeds the maximum specification, replace the connecting rod.

**Maximum connecting rod bending**  
**0.08 mm {0.003 in}**

**Maximum connecting rod distortion**  
**0.08 mm {0.003 in}**

**Connecting rod center-to-center distance**  
**140.6 mm {5.535 in}**

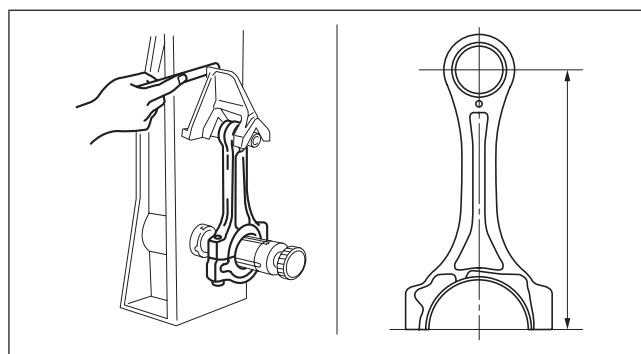

bes2ze00000032