

STARTER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0119i2800300

On-vehicle Inspection

1. Verify that the battery is fully charged.
2. The starter is normal if it rotates smoothly and without any noise when the engine is cranked.
 - If the starter does not operate, inspect the following:
 - Remove the starter, and inspect the starter unit.
 - Inspect the related wiring harnesses, the ignition switch, and the transaxle range switch (ATX) or starter interlock switch (MTX).

No-load Test

1. Verify that the battery is fully charged.
2. Connect the starter, battery, and a tester as shown in the figure.
3. Operate the starter and verify that it rotates smoothly.
 - If the starter does not rotate smoothly, inspect the starter unit.
4. Measure the voltage and current while the starter is operating.
 - If not within specification, replace the starter.


Starter no-load test voltage

11 V

Starter no-load test current

Vehicle with i-stop: 90 A or less

Vehicle without i-stop: 95 A or less

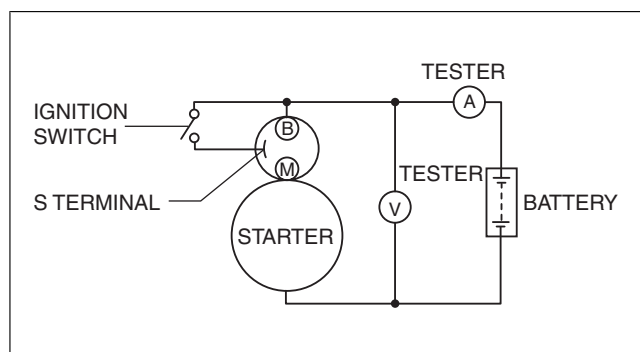

am6xuw00002343


Magnetic Switch Operation Inspection (Vehicle Without i-stop)

Pull-out test

Note

- Depending on the battery charge condition, the starter motor pinion may rotate while in an extended state. This is due to current flowing to the starter motor through the pull-in coil to turn the starter motor, and does not indicate an abnormality.

1. Verify that the starter motor pinion is extended while battery positive voltage is connected to terminal S and the starter body is grounded.
 - If the starter motor pinion is not extended, repair or replace the starter.

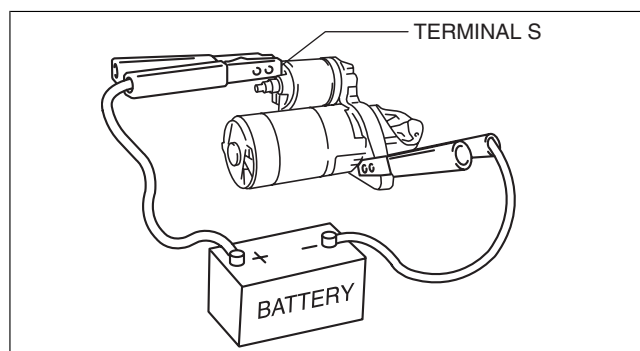


am6xuw00002344

Return test

1. Disconnect the motor wire from terminal M.

2. Connect battery positive voltage to terminal M and ground the starter body.
3. Pull out the drive pinion with a screwdriver. Verify that it returns to its original position when released.
 - If it does not return, repair or replace the starter.

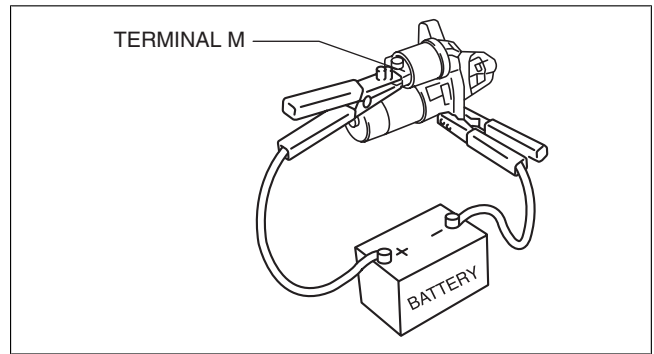


am6xuw00002345

Pinion Gap Inspection (Vehicle Without i-stop)

1. Pull out the drive pinion with the battery positive voltage connected to terminal S and the starter body grounded.

Caution

- Applying power for more than 10 s can damage the starter. Do not apply power for more than 10 s.

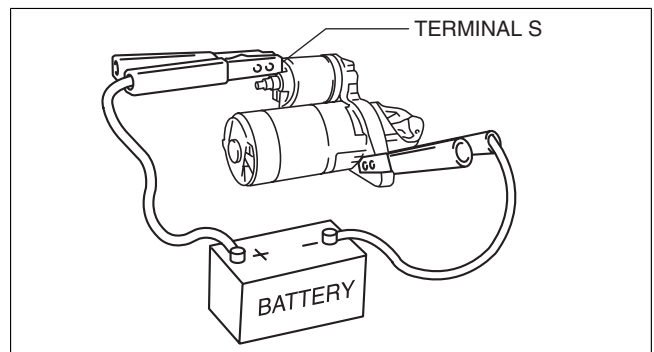


am6xuw00002344

2. Measure the pinion gap while the drive pinion is extended.
 - If not as specified, adjust with an adjustment washer (between drive housing front cover and magnetic switch).

Starter pinion gap


0.5—2.0 mm {0.02—0.07 in}

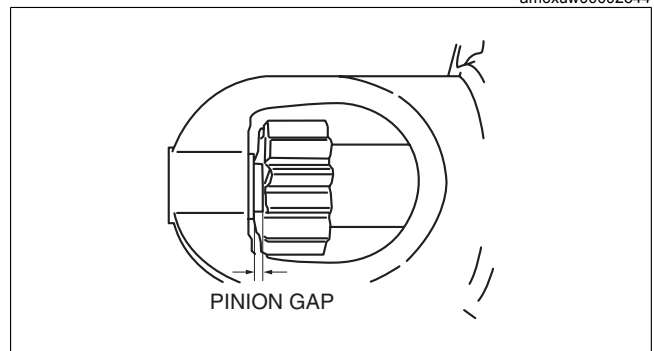

am6zzw00002377


Starter Inner Parts Inspection (Vehicle Without i-stop) Armature

1. Verify that there is no continuity between the commutator and the core at each segment using a tester.
 - If there is continuity, replace the armature.

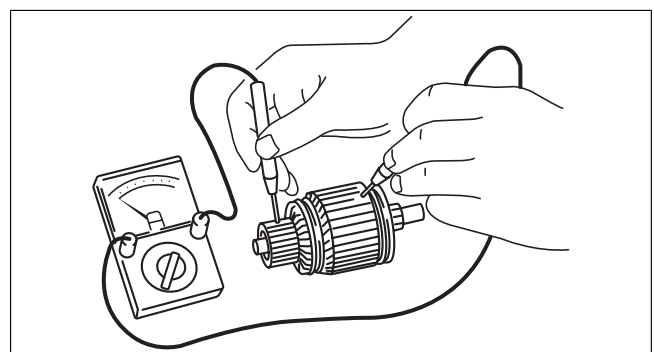

am6zzw00002378


2. Verify that there is no continuity between the commutator and the shaft using a tester.
 - If there is continuity, replace the armature.

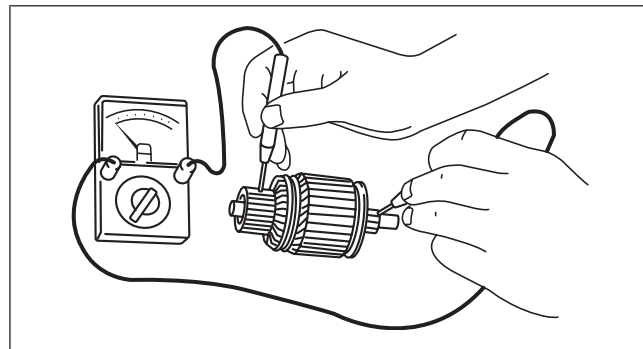

am6zzw00002379

3. Place the armature on V-blocks, and measure the runout using a dial indicator.
 - If not within specification, replace the armature.


Starter armature runout
0.1 mm {0.004 in} max.

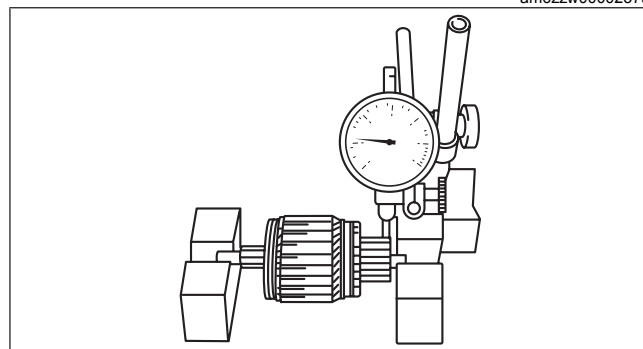

am6zzw00002380

4. Measure the commutator diameter.
 - If not within the minimum specification, replace the armature.


Starter commutator diameter
Standard: 29.4 mm {1.16 in}
Minimum: 28.8 mm {1.13 in}

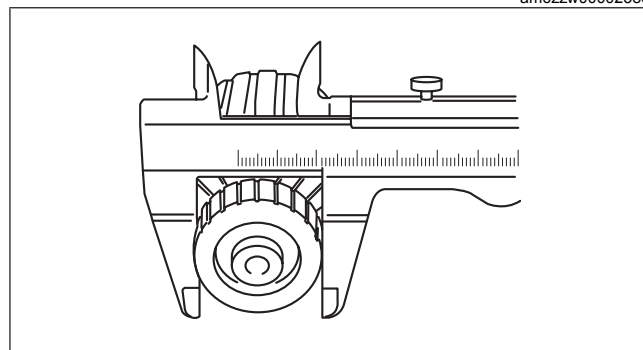

am6zzw00002381

5. Measure the segment groove depth of the commutator.
 - If not within the minimum specification, undercut the grooves to the standard depth.


Segment groove depth of starter commutator
Standard: 0.5 mm {0.02 in}
Minimum: 0.2 mm {0.008 in}

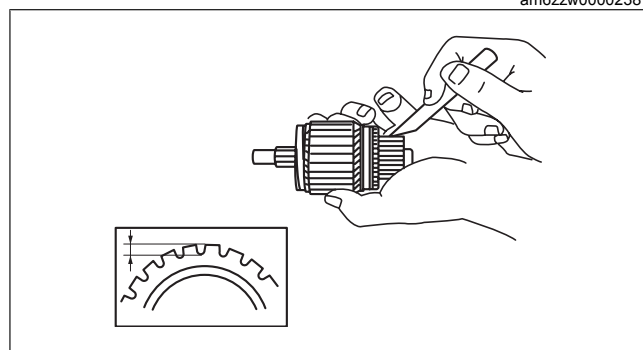

am6zzw00002382


Magnetic switch

1. Inspect for continuity between terminals S and M using a tester.
 - If there is no continuity, replace the magnetic switch.

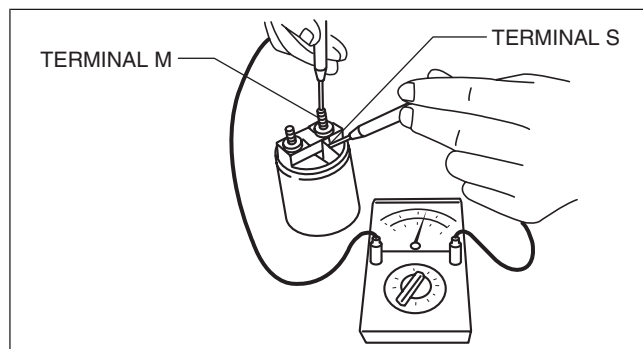


am6xuw00002346

2. Inspect for continuity between terminal S and the body using a tester.
 - If there is no continuity, replace the magnetic switch.

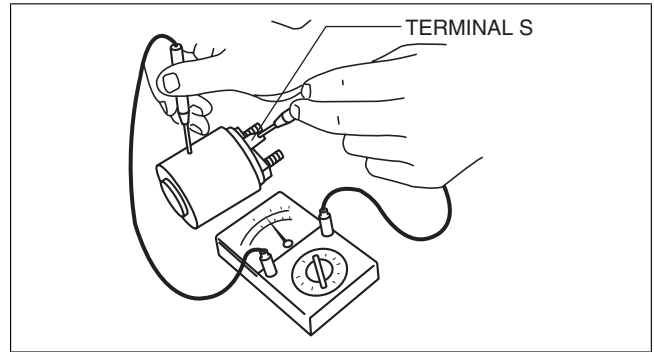

am6xuw00002347


3. Verify that there is no continuity between terminals M and B using a tester.
 - If there is continuity, replace the magnetic switch.

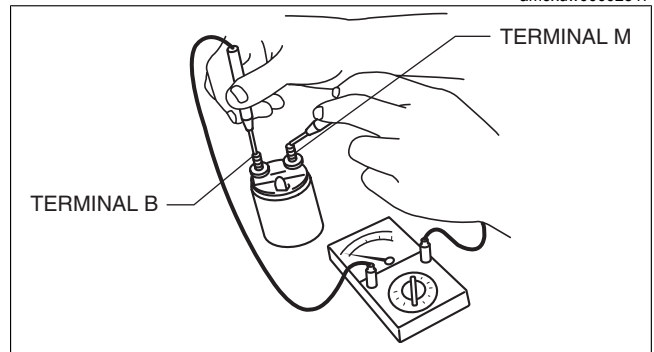

am6xuw00002348

Brush and brush holder

1. Verify that there is no continuity between each insulated brush and plate using a tester.
 - If there is continuity, replace the brush holder.

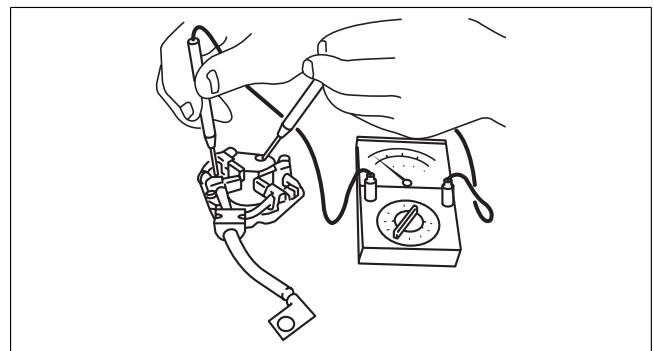


am6zzw00002386

2. Measure the brush length.
 - If any brush is worn almost to or beyond the minimum specification, replace all of the brushes.

Starter brush length

Standard: 12.3 mm {0.484 in}
Minimum: 5.5 mm {0.22 in}

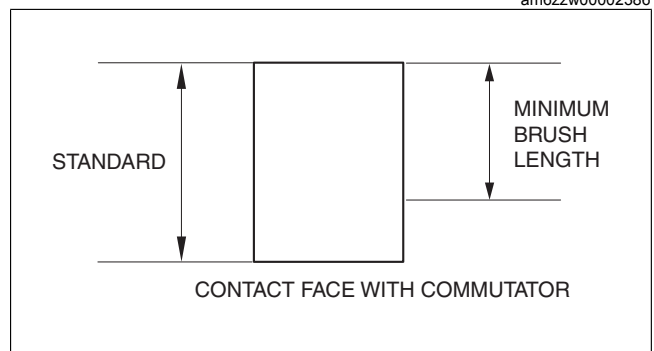


ac5uuw00002441

3. Measure the brush spring force using a spring balance.
 - If not within the minimum specification, replace the brush and brush holder component.

Starter brush spring force

Standard: 15.1—20.4 N {1.54—2.08 kgf, 3.40—4.58 lbf}
Minimum: 2.75 N {0.280 kgf, 0.618 lbf}

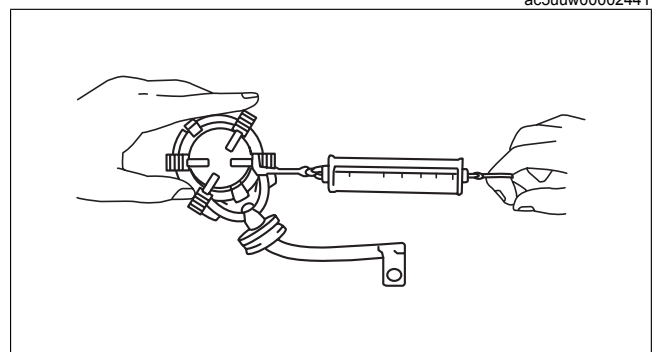

am6zzw00002388