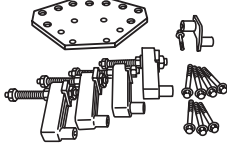
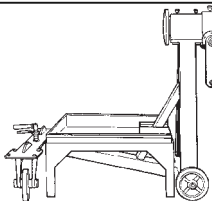


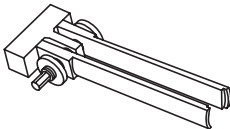
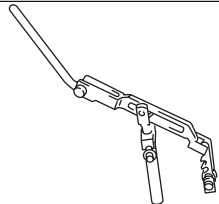


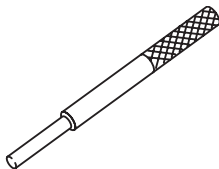

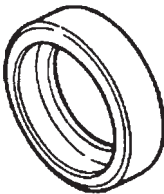

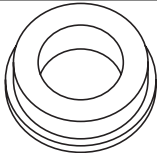


ENGINE SST

id016000119200

<p>49 L010 1A0 Engine hanger set</p> 	<p>49 0107 680A Engine stand</p> 	<p>49 E011 1A0 Ring gear brake set</p> 
<p>49 0636 100B Valve spring lifter arm</p> 	<p>49 B012 0A2A Pivot</p> 	<p>49 JE02 0A2 Universal valve tool (Europe only)</p> 
<p>49 S120 170 Valve seal remover</p> 	<p>49 1285 071 Bearing puller</p> 	<p>49 B012 015 Valve guide installer</p> 
<p>49 E033 101 Dust cover installer</p> 	<p>49 S033 101 Dust cover installer</p> 	<p>49 B012 016 Attachment</p> 
<p>49 G028 205 Oil seal installer</p> 	<p>—</p>	<p>—</p>