

RESONANCE CHAMBER [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0113z9003400

Purpose, Function

- Pulsation of intake air is controlled and intake air noise is reduced by adding an intake air passage.

Construction

- The resonance chamber is installed to fresh-air duct.

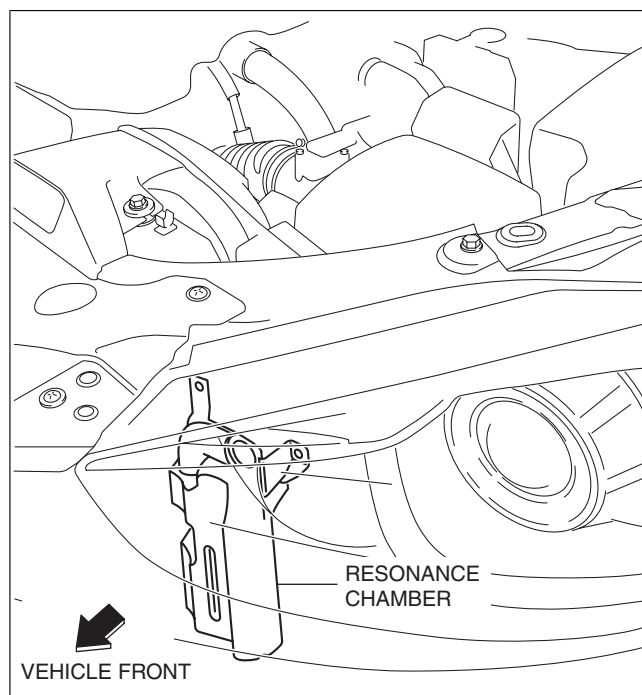

ac5uun00000025