

SECURITY INDICATOR LIGHT

id091400603300

Purpose


- Notifies the driver that the immobilizer system is operating.

Function

- If a malfunction is detected in the immobilizer system, the DTC can be verified by the flashing pattern of the security indicator light.

Construction


- The security indicator light is built into the instrument cluster.

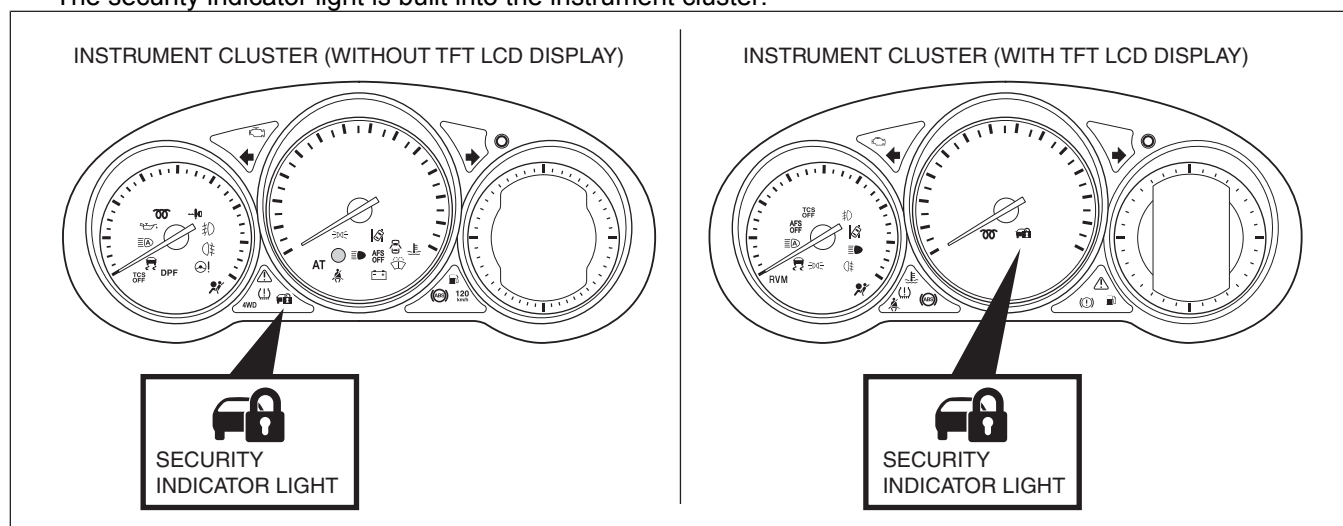

ac5wzn00000554


Operation

- When the immobilizer system is operating, it illuminates for **0.1 s every approx. 2 s**.

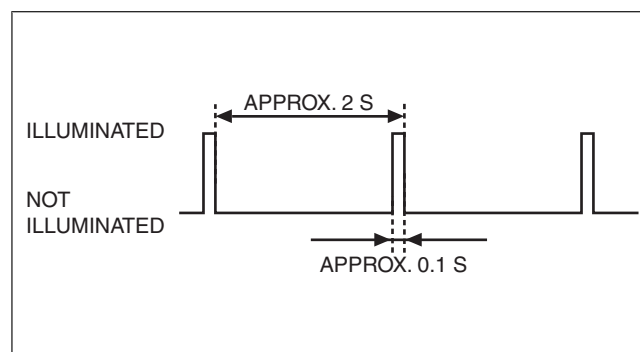

ac5wzn00000555

- If the immobilizer system is normal, the security indicator light illuminates for **approx. 3 s** and then turns off after the push button start is pressed.

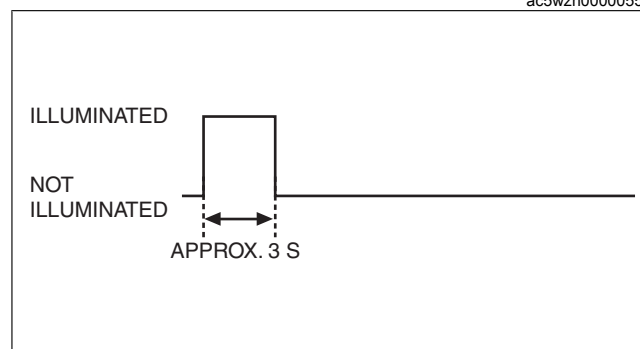

ac5wzn00000556

Fail-safe

- Function not equipped.