


TORQUE CONVERTER INSPECTION

id051700661800


Caution

- For the torque converter inspection, only an inspection for burning or seizure of the TCC clutch can be performed. For other malfunctions, on-vehicle inspection is required.

1. Assemble the turbine shaft to the torque converter.

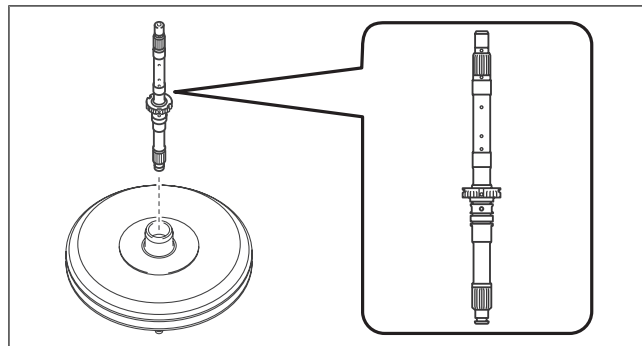

azzjw00001069

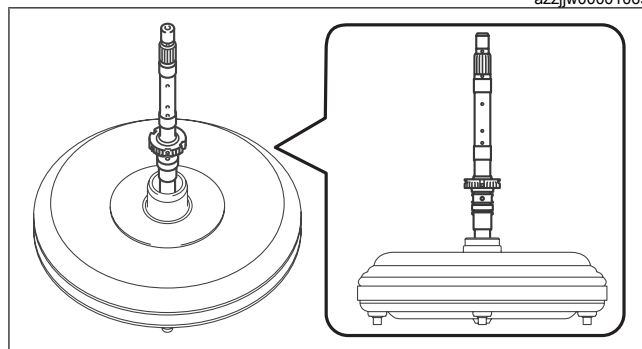

azzjw00001070


2. With the torque converter secured by hand, rotate the turbine shaft.

Note

- When rotating the turbine shaft, a little force is required depending on the amount of ATF in the torque converter.


A : Secure by hand

- If the turbine shaft cannot be rotated, burning or seizure of the TCC clutch can be considered, therefore replace the torque converter with a new one.

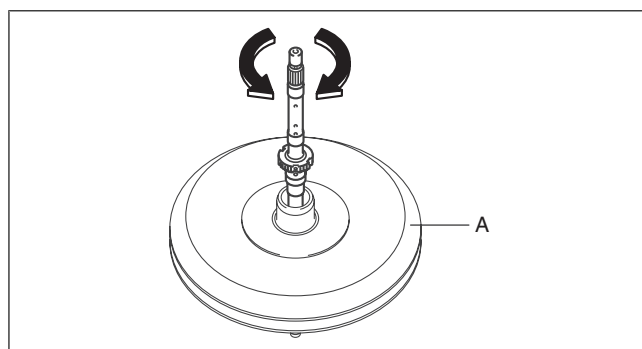

azzjw00001071

3. Remove the turbine shaft.

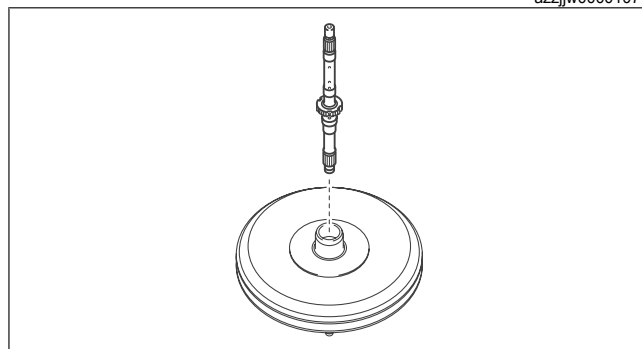

azzjw00001072