


## PARKING BRAKE SWITCH INSPECTION

id041200800700

1. Disconnect the parking brake switch connector.
2. Verify that the continuity is as indicated in the table.

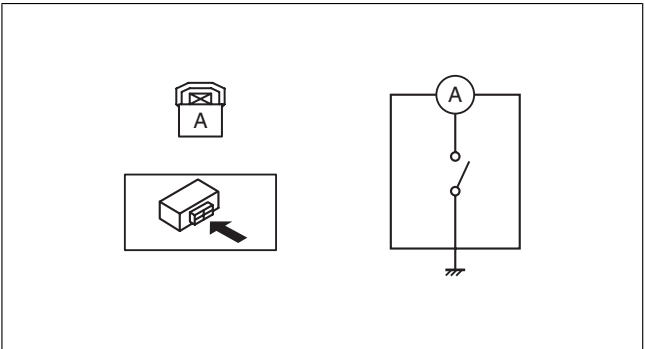

ac5wzw00000237

- If not as indicated in the table, replace the parking brake switch.

○—○ : Continuity

Condition	Terminal	
	A	Body ground
Parking brake lever pulled	○—○	○—○
Parking brake lever released		

am5ezw00004333