


## MANUAL TRANSAXLE OIL REPLACEMENT [D66M-R, D66MX-R]

id0515md159700

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the drain plug and gasket, and drain the manual transaxle oil.
4. Install a new gasket and the drain plug.

### Tightening torque

39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

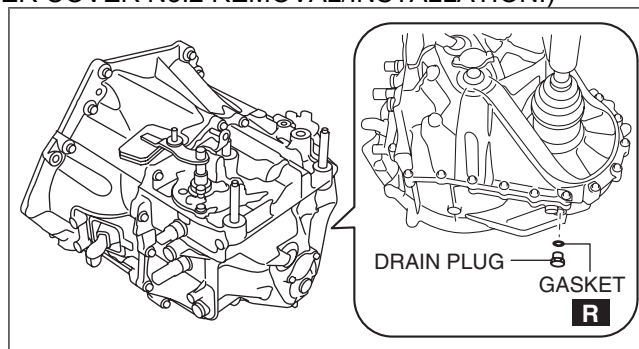

ac5wzw00003434

5. Remove the oil level plug and gasket.
6. Add the specified manual transaxle oil through the oil level plug port.

### Manual transaxle oil grade

API service GL-4

### Manual transaxle oil viscosity

SAE 75W-80

### Manual transaxle oil capacity (approx. quantity)


2.40 L {2.54 US qt, 2.11 Imp qt}

7. Install a new gasket and the oil level plug.

### Tightening torque

39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

8. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

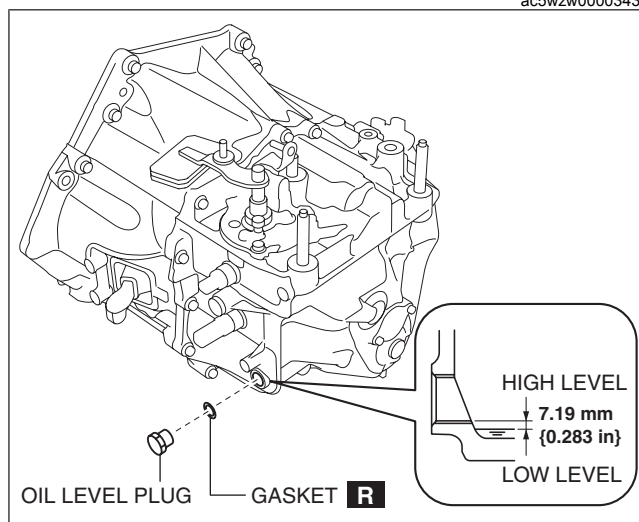

ac5wzw00003435