

WASHER MOTOR INSPECTION


id091900805100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Disconnect the washer motor connector from the washer motor.
6. Disconnect the windshield washer hose from the washer motor.
7. Disconnect the rear washer hose from the washer motor.

Warning


- **Water sprayed on the battery and ground could cause electrocution. When performing the washer motor inspection, prepare a container to collect washer fluid and be careful not to spray washer fluid.**

8. After connecting washer motor terminal A to the positive battery terminal, and terminal B to ground, verify that washer fluid sprays from the front side of the washer motor.

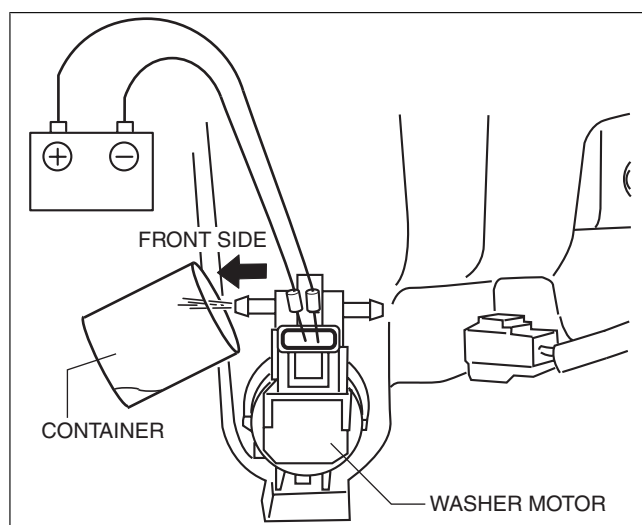


ac5wzw00002204

- If there is any malfunction, replace the washer motor. (See WASHER MOTOR REMOVAL/INSTALLATION.)

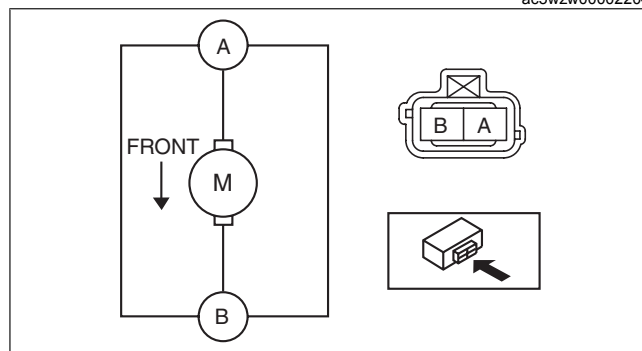


ac5uuw00000827

9. After connecting washer motor terminal B to the positive battery terminal, and washer motor terminal A to ground, verify that washer fluid sprays from the rear side of the washer motor.

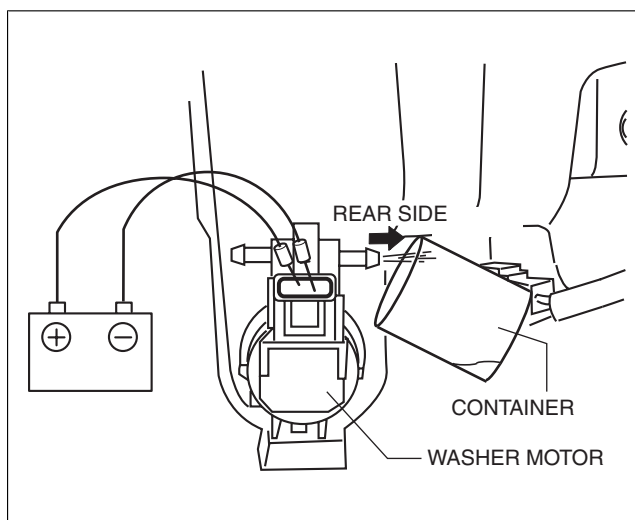

ac5wzw00002205

- If there is any malfunction, replace the washer motor. (See WASHER MOTOR REMOVAL/INSTALLATION.)

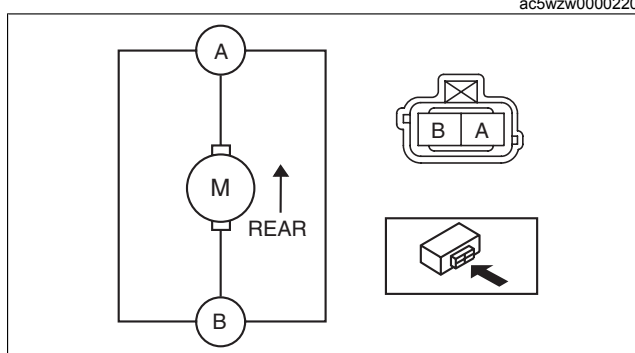

ac5uuw00000829