
CLUTCH RELEASE COLLAR INSPECTION [C66M-R, C66MX-R]


id0510mc157300

Caution

- Do not clean the clutch release collar with cleaning fluids or a steam cleaner because it is filled with grease.

Operation Inspection

1. Turn the collar while applying force in the axial direction, and inspect for sticking, excessive resistance, and an abnormal noise.
 - If there is any malfunction, replace the clutch release collar. (See CLUTCH UNIT REMOVAL/ INSTALLATION [C66M-R, C66MX-R].)

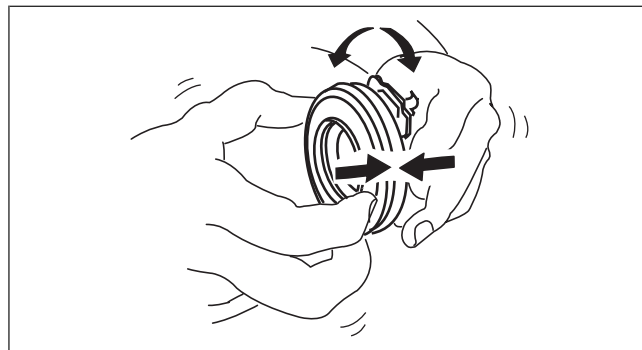

am3uuw00002097