


## CHECK VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0116zb189900

1. Remove the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2. Verify that there is no airflow when positive pressure is applied to port A.
  - If there is airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3. Verify that there is no airflow when negative pressure is applied to port A.
  - If there is no airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

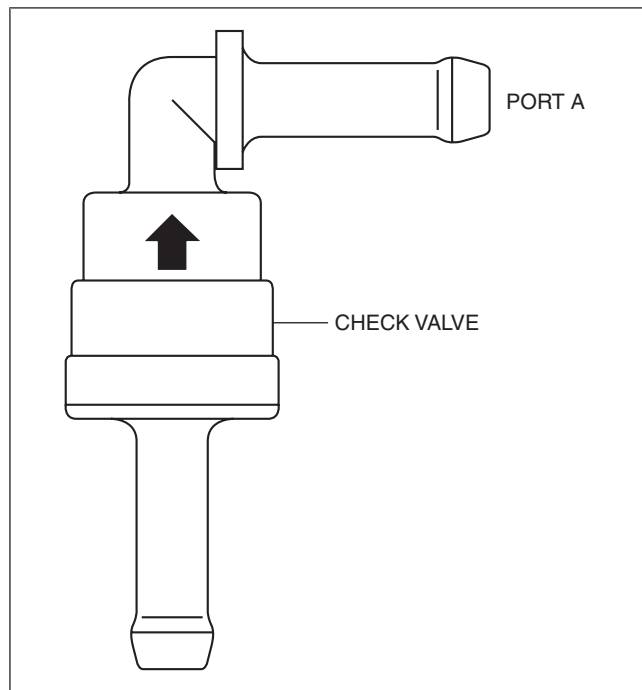

ac5wzw00001377