


id091800802900

Vehicles with auto light system

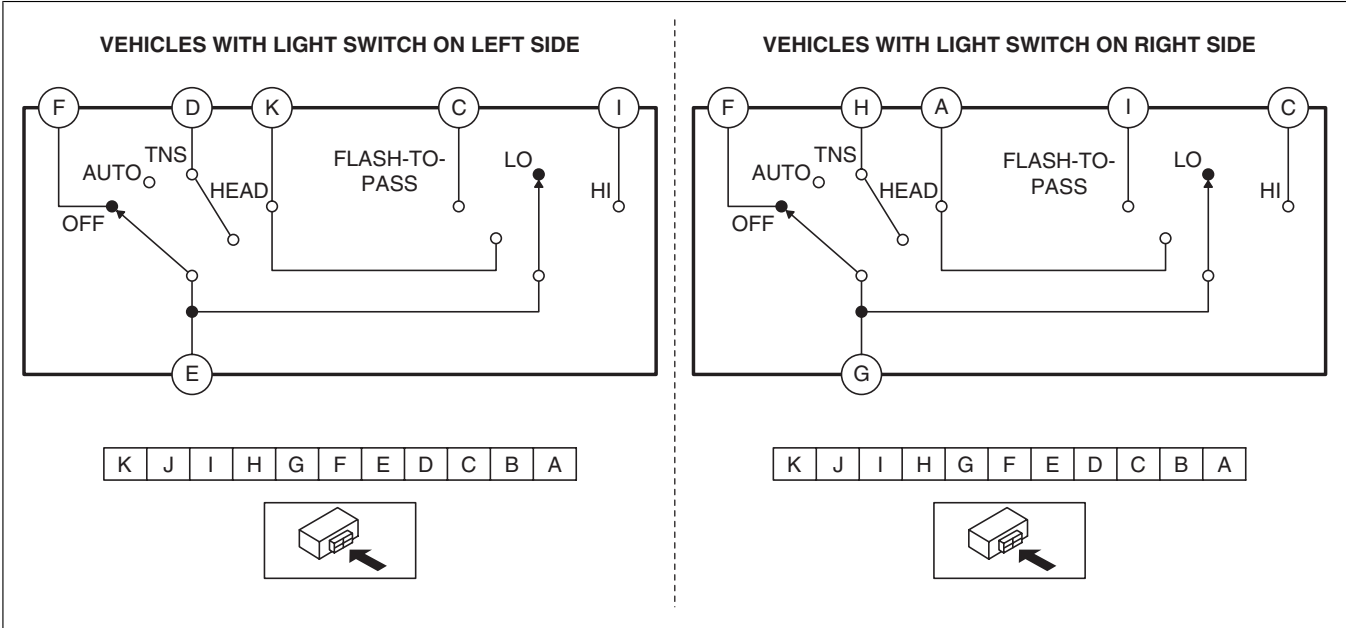

ac5wzw0000031

Vehicles with light switch on left side

○—○ : Continuity

Switch position			Terminal						
Light	Dimmer	FLASH-TO-PASS	C	D	E	F	I	K	
OFF	—	Off			○—○				
		On	○—○		○—○	○—○		○—○	
AUTO	LO	Off							
		On	○—○		○—○			○—○	
TNS	—	Off		○—○					
		On	○—○	○—○	○—○			○—○	
HEAD	LO	Off		○—○	○—○			○—○	
		On	○—○	○—○	○—○			○—○	
	HI	—		○—○	○—○		○—○	○—○	
		—		○—○	○—○		○—○	○—○	

Vehicles with light switch on right side


○—○ : Continuity

Switch position			Terminal					
Light	Dimmer	FLASH-TO-PASS	A	C	F	G	H	I
OFF	—	Off			○—○			
		On	○—○		○—○	○—○		○—○
AUTO	LO	Off						
		On	○—○			○—○		○—○
TNS	—	Off				○—○	○—○	
		On	○—○			○—○	○—○	○—○
HEAD	LO	Off	○—○			○—○	○—○	
		On	○—○			○—○	○—○	○—○
	HI	—	○—○	○—○		○—○	○—○	


ac5wzw00003040

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
- Turn Switch**
- Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
  - Verify that the continuity between the light switch terminals is as indicated in the table.


# VEHICLES WITH LIGHT SWITCH ON LEFT SIDE

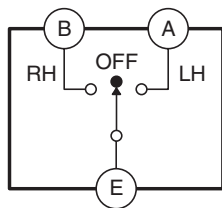


K J I H G F E D C B A



# VEHICLES WITH LIGHT SWITCH ON RIGHT SIDE

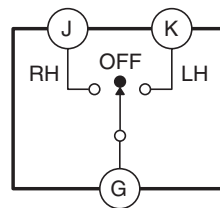

K J I H G F E D C B A



ac5wzw00000032

## Vehicles with light switch on left side

○—○ : Continuity

Switch position	Terminal		
	A	B	E
RH		○—○	
OFF			
LH	○—○		

## Vehicles with light switch on right side

○—○ : Continuity

Switch position	Terminal		
	G	J	K
RH	○—○		
OFF			
LH	○—○		

ac5wzw000000445

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)