


LUBRICATION SYSTEM LOCATION INDEX [SKYACTIV-D 2.2]

id0111s6800100

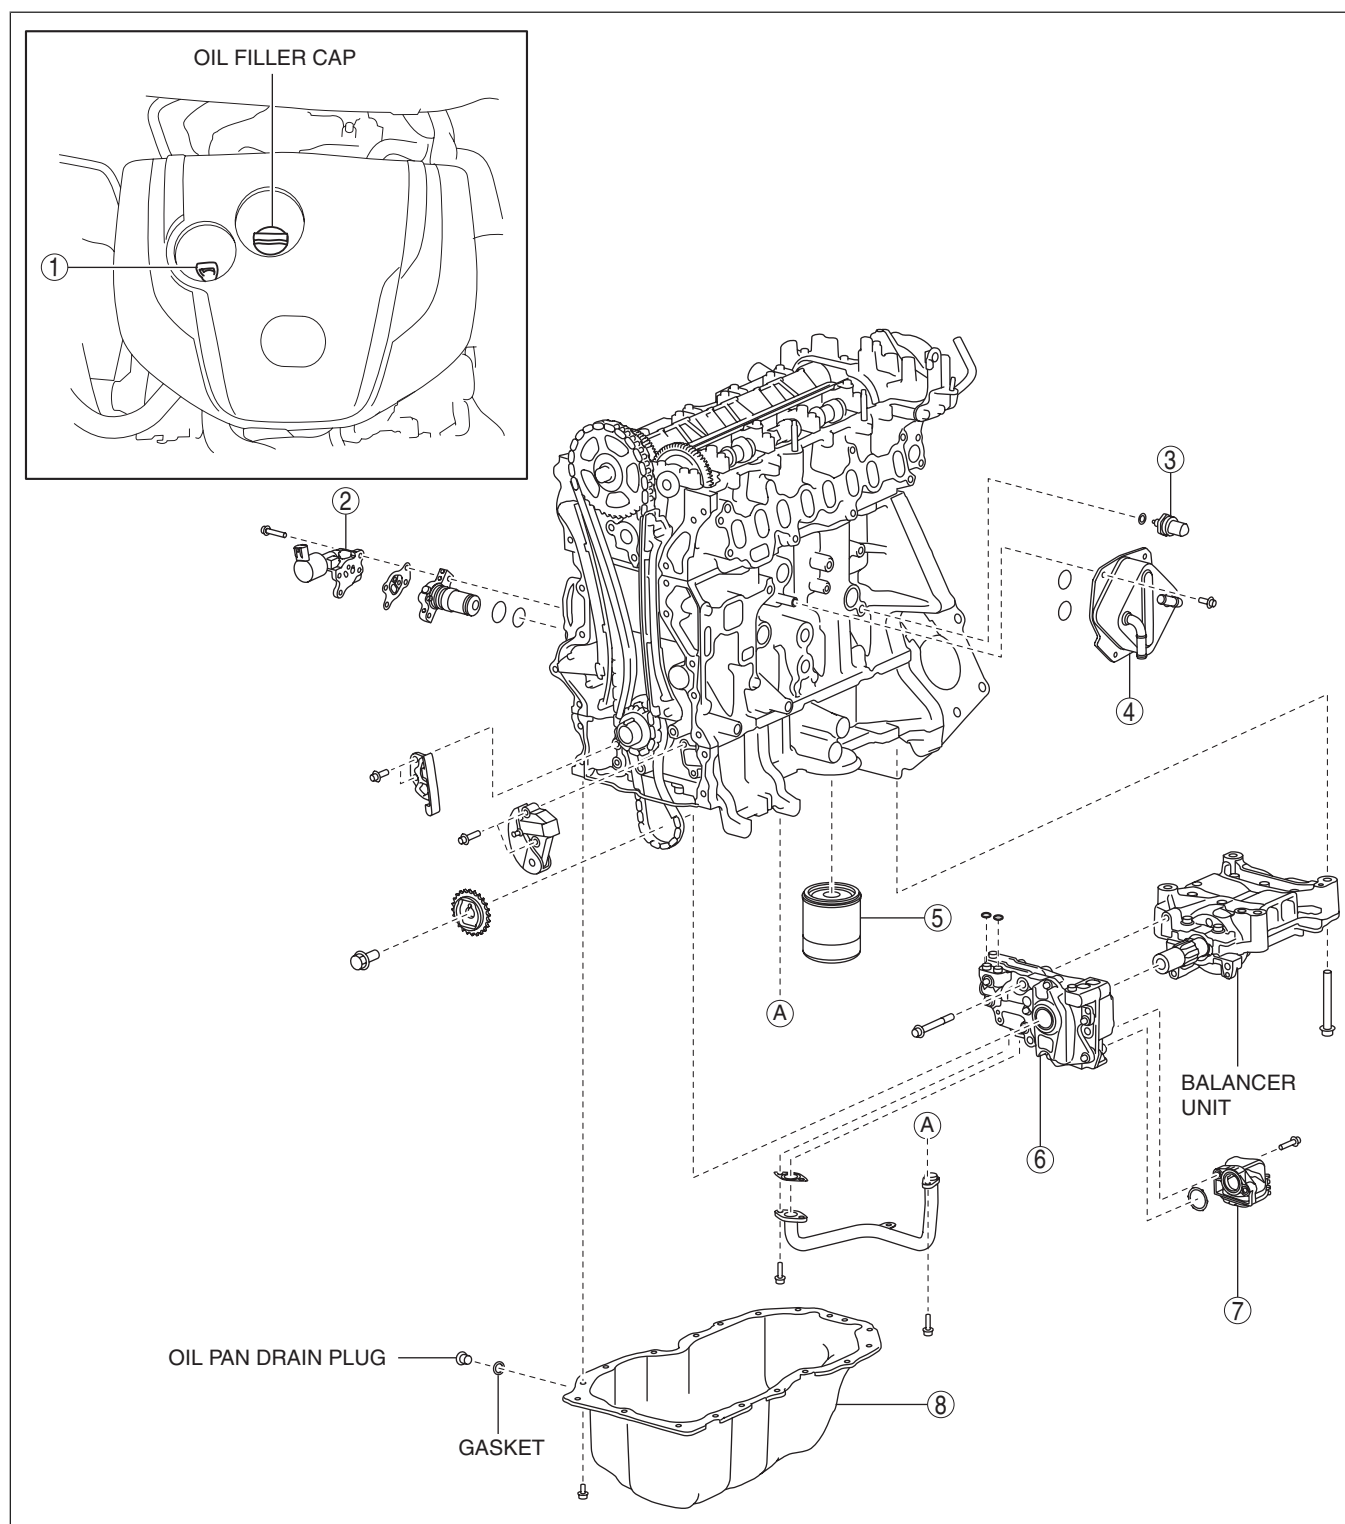

1	Dipstick (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-D 2.2].) (See ENGINE OIL REPLACEMENT [SKYACTIV-D 2.2].)
2	Engine oil solenoid valve (See ENGINE OIL SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) (See ENGINE OIL SOLENOID VALVE INSPECTION [SKYACTIV-D 2.2].)

3	Engine oil temperature sensor/engine oil pressure sensor (See OIL PRESSURE INSPECTION [SKYACTIV-D 2.2].)
4	Oil cooler (See OIL COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
5	Oil filter (See OIL FILTER REPLACEMENT [SKYACTIV-D 2.2].)

ac5wzw00005185

6	Oil pump (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
7	Oil strainer (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

8	Oil pan (See OIL PAN REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
---	--