

WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION

id091900802100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Remove the mudguard (RH). (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
5. Disconnect the windshield washer hose A from the washer motor.
6. Remove the windshield washer hose A from the washer tank hook.
7. Remove the windshield washer hose A from clips A.
8. Disconnect the windshield washer hose A from the joint pipe A and remove it.

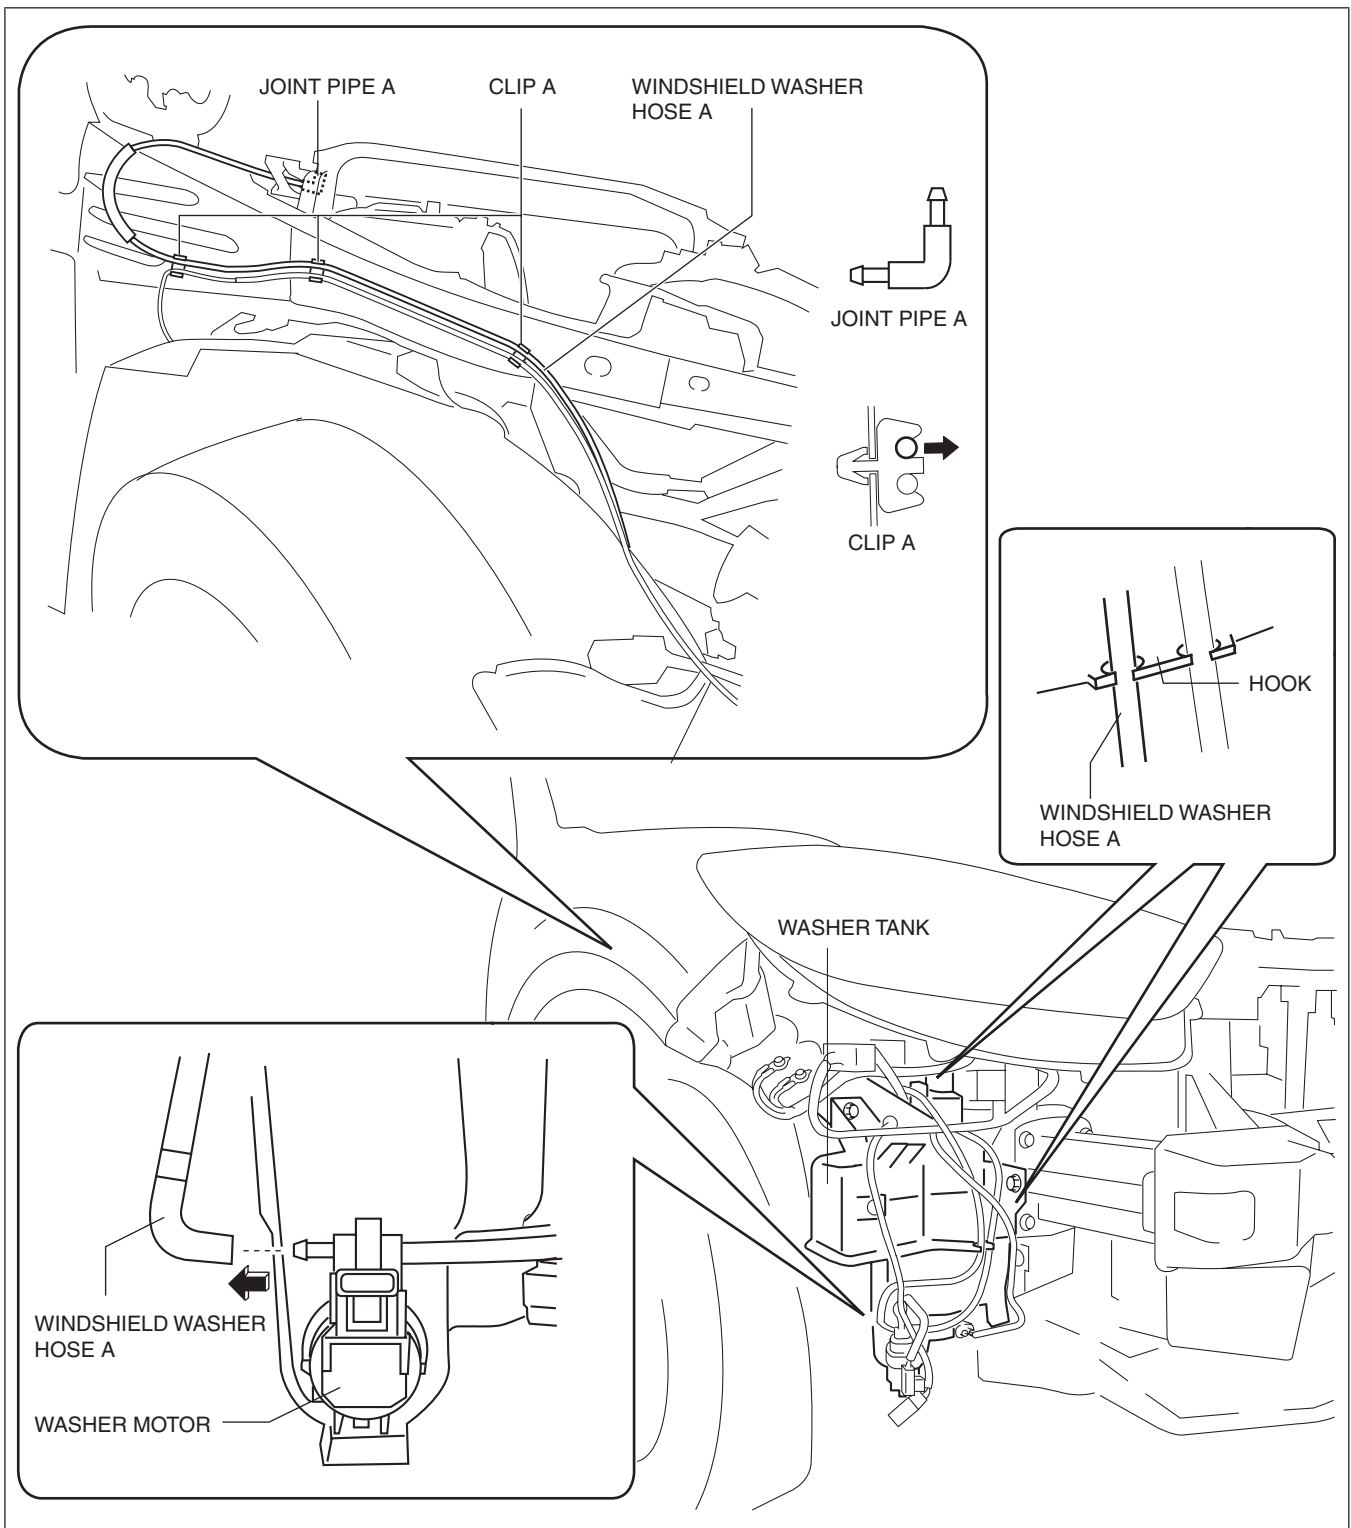


ac5wzw00002489

9. Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)

10. For L.H.D., perform the following procedure:

- (1) Disconnect the windshield washer hose B from the joint pipe A.
- (2) Disconnect the windshield washer hose B from the joint pipe B and remove it.
- (3) Disconnect the windshield washer hose C from the windshield washer nozzle A.
- (4) Disconnect the windshield washer hose C from the joint pipe B and remove it.
- (5) Disconnect the windshield washer hose D from the joint pipe B.
- (6) Disconnect the windshield washer hose D from the joint pipe C and remove it.
- (7) Disconnect the windshield washer hose E from the windshield washer nozzle B.
- (8) Disconnect the windshield washer hose E from the joint pipe C and remove it.

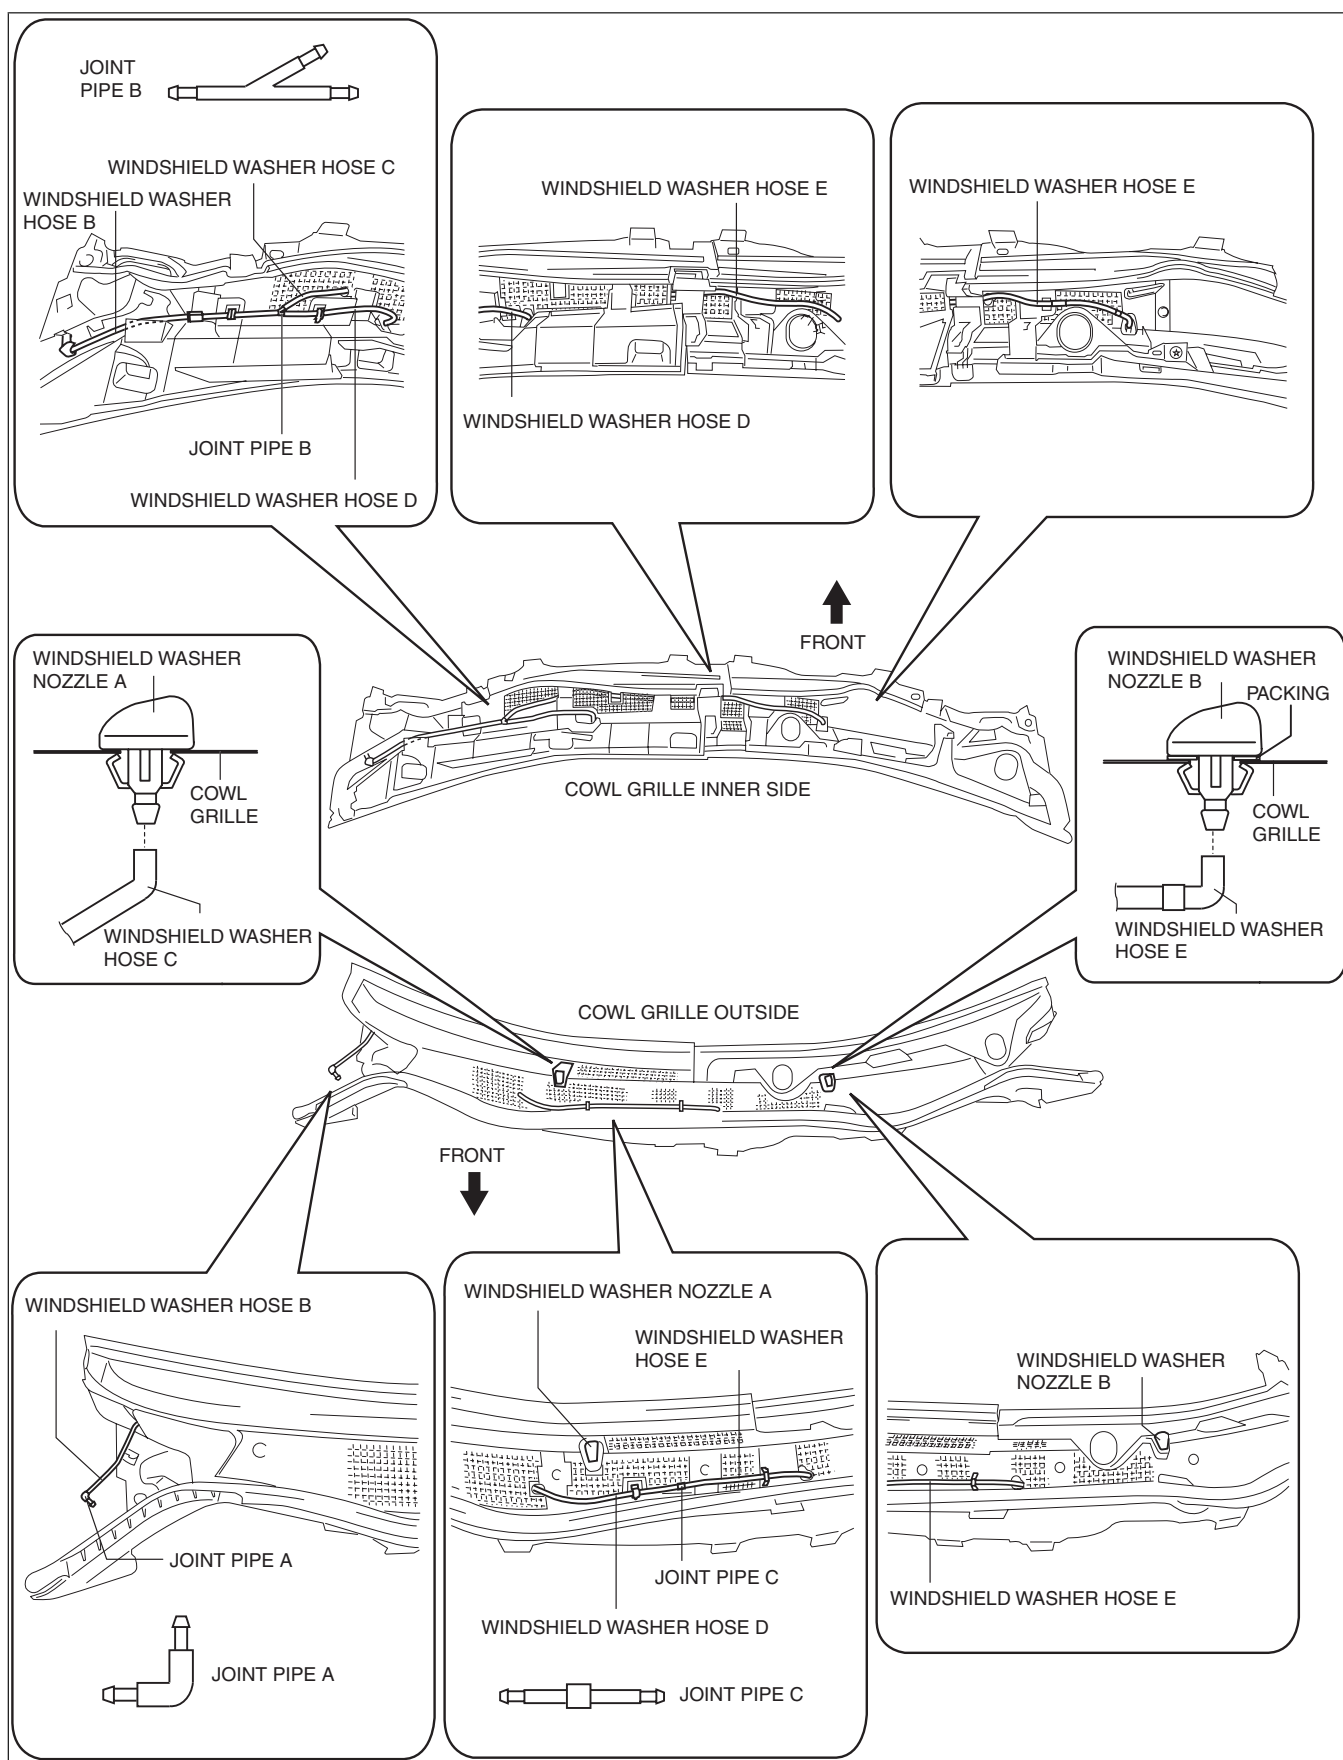


ac5wzw00002979

11. For R.H.D., perform the following procedure:

- (1) Disconnect the windshield washer hose B from the joint pipe A.
- (2) Disconnect the windshield washer hose B from the joint pipe B and remove it.
- (3) Disconnect the windshield washer hose C from the joint pipe B.
- (4) Disconnect the windshield washer hose C from the joint pipe C and remove it.

- (5) Disconnect the windshield washer hose D from the joint pipe C.
- (6) Disconnect the windshield washer hose D from the joint pipe D and remove it.
- (7) Disconnect the windshield washer hose E from the joint pipe D.
- (8) Disconnect the windshield washer hose E from the joint pipe E and remove it.
- (9) Disconnect the windshield washer hose F from the windshield washer nozzle A.
- (10) Disconnect the windshield washer hose F from the joint pipe E and remove it.
- (11) Disconnect the windshield washer hose G from the windshield washer nozzle B.
- (12) Disconnect the windshield washer hose G from the joint pipe C and remove it.

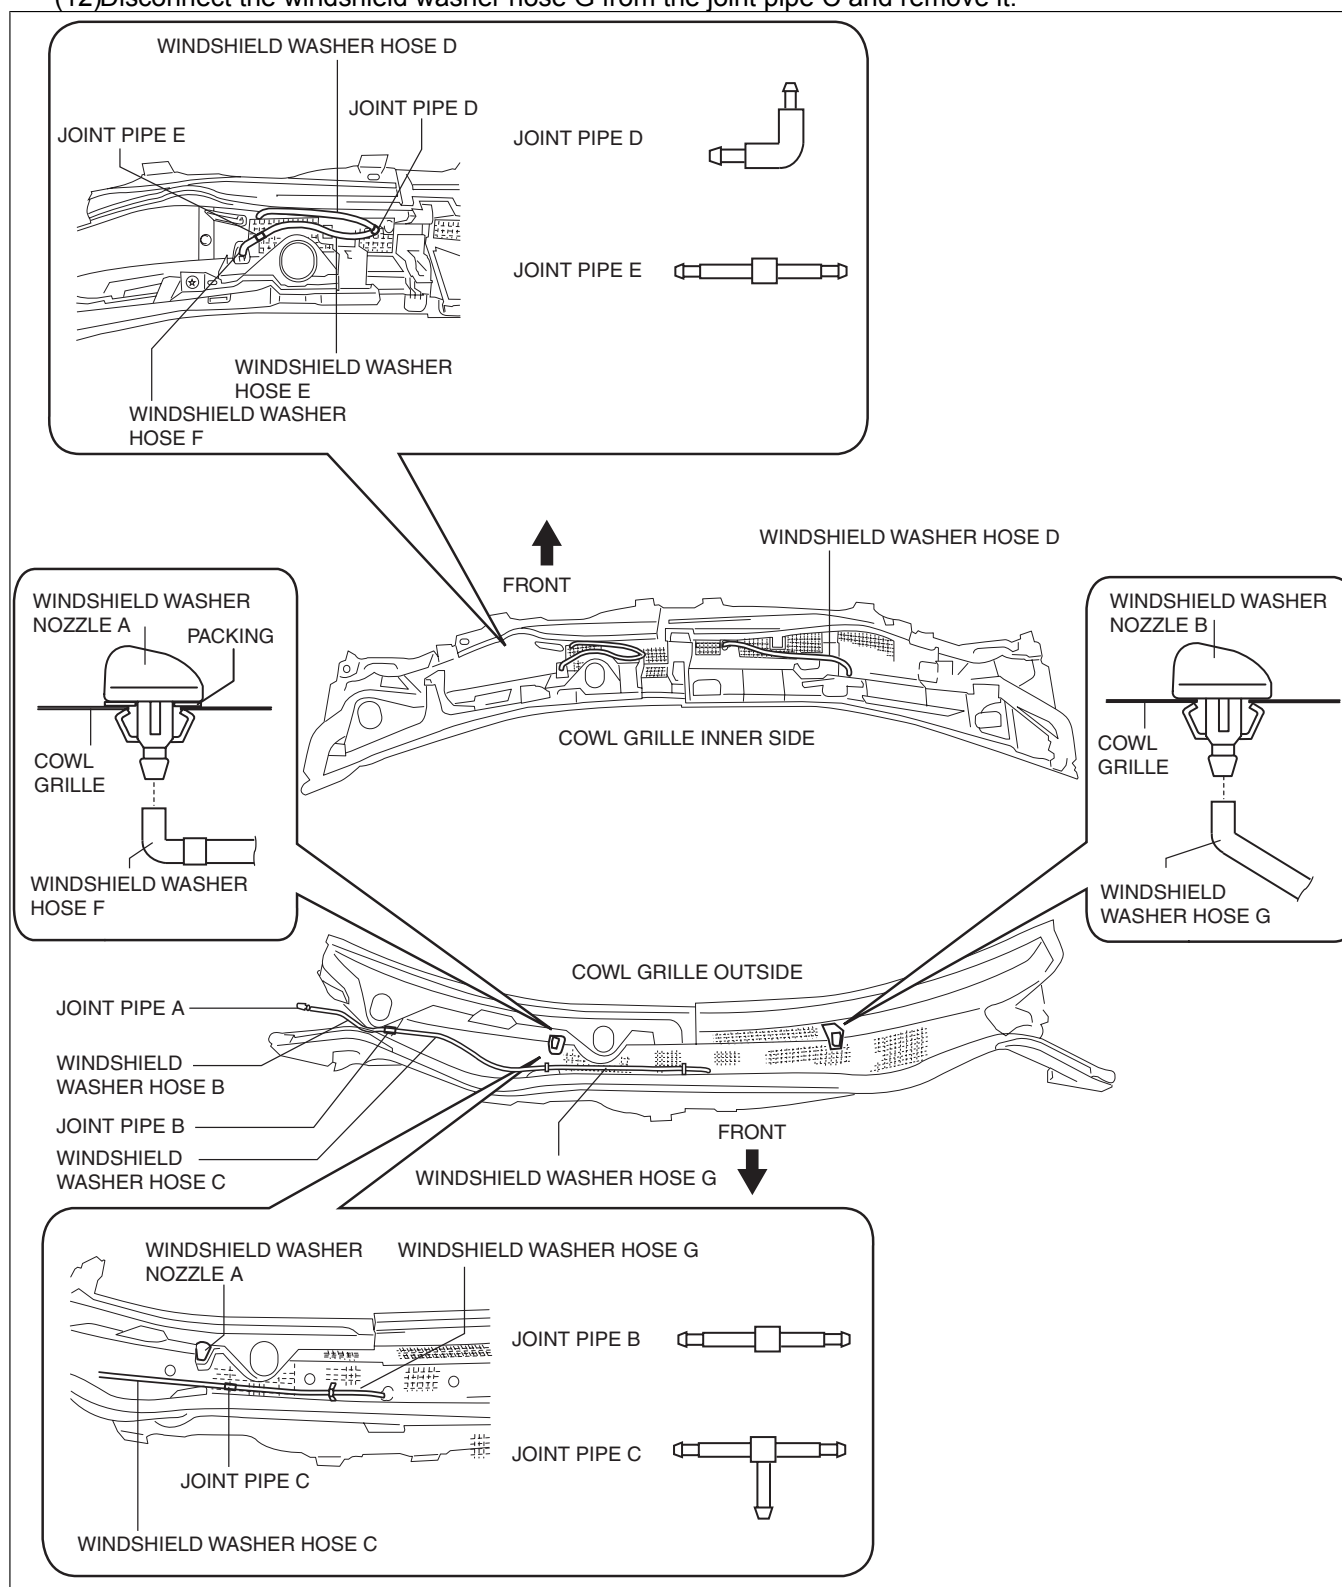

12. Install in the reverse order of removal.