


## CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER]

id0740a2807400

### L.H.D.

#### Removal


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
  - (2) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
  - (3) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (4) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (6) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (7) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (8) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (9) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. Press the tab down, then slide the wire off the link.
4. Remove the wire from the wire clamp.

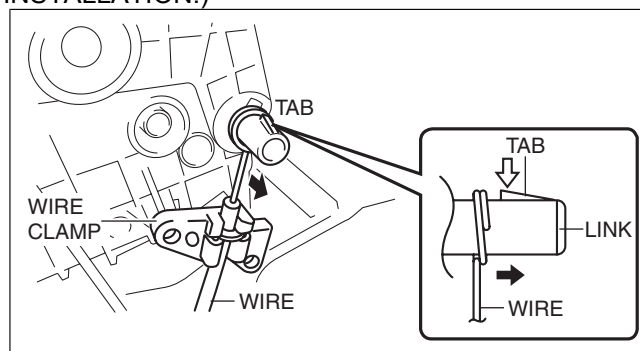

ac5wzw00001928


5. Remove in the order indicated in the table.

|   |                      |
|---|----------------------|
| 1 | Screw                |
| 2 | Connector            |
| 3 | Climate control unit |

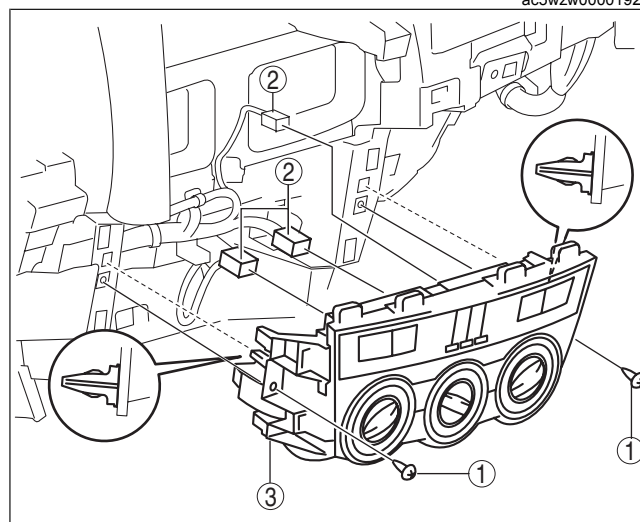

ac5wzw00001929


6. Pull out the air mix wire and airflow mode wire from the dashboard.

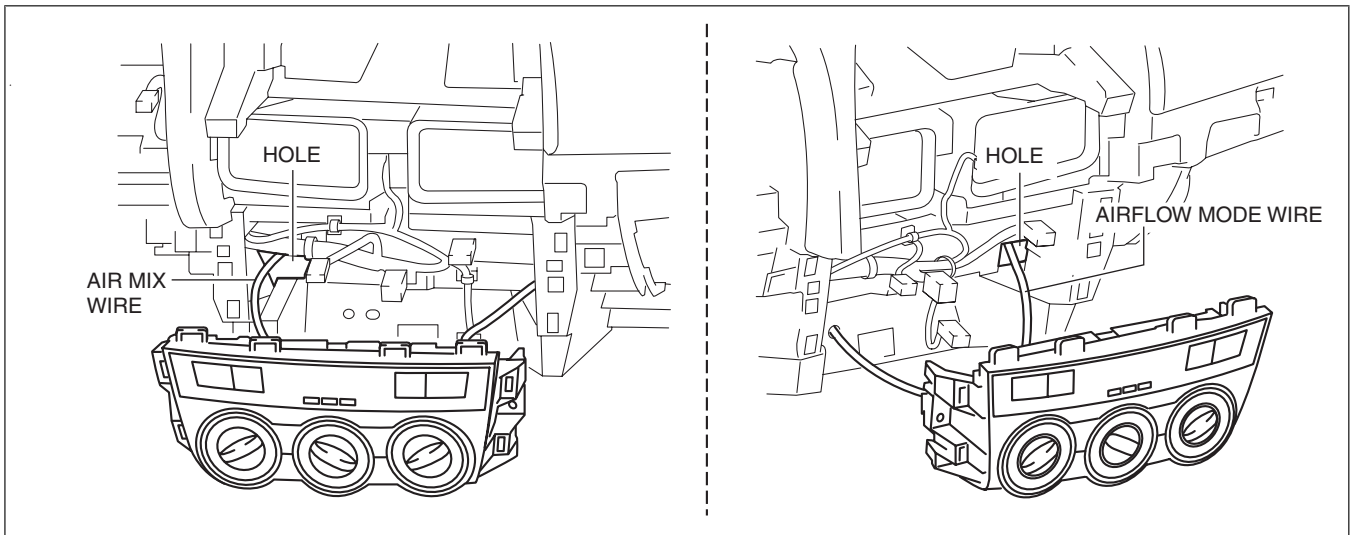

ac5wzw00001930


## Install

1. Pass each wire through the hole on the dashboard as shown in the figure.

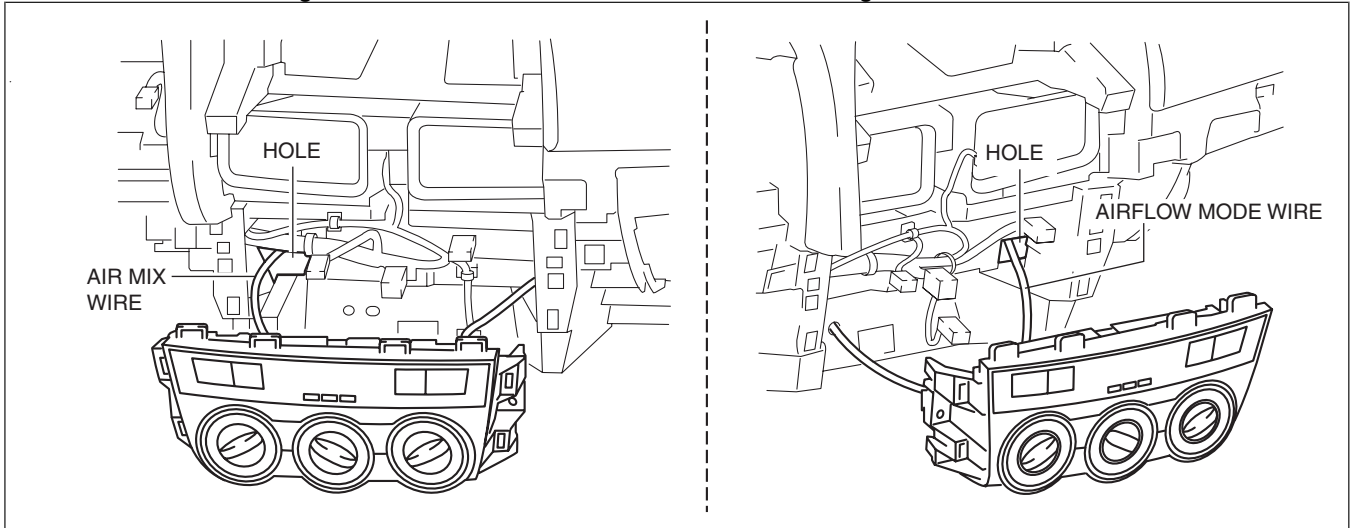

ac5wzw00001930


2. Route each wire as shown in the figure.

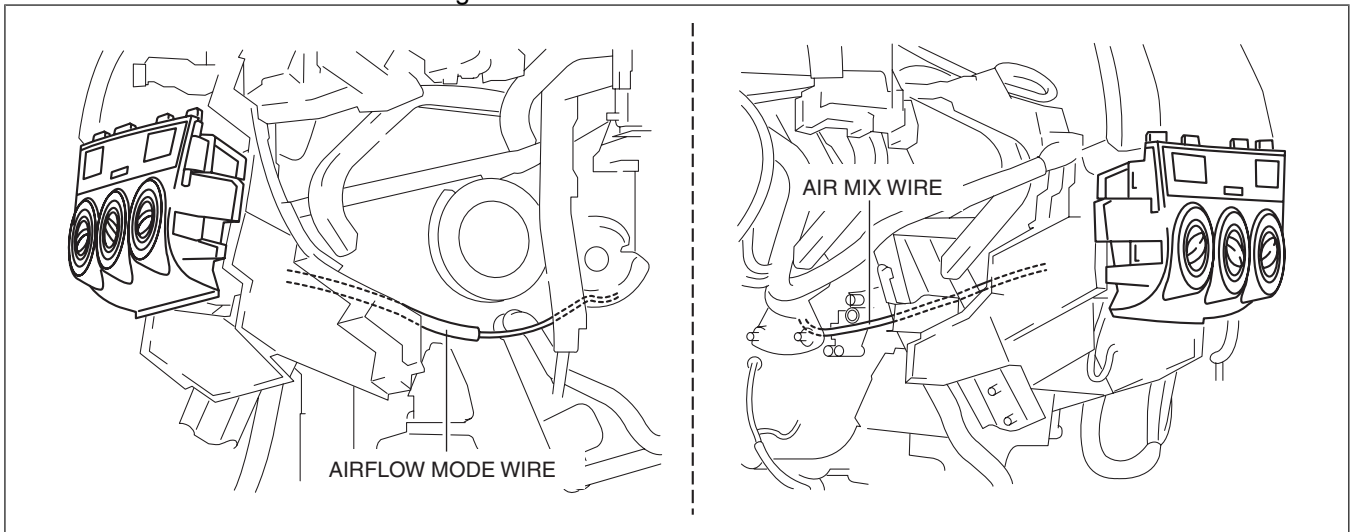

ac5wzw00001931


3. Install in the order indicated in the table.

|   |                      |
|---|----------------------|
| 1 | Connector            |
| 2 | Climate control unit |
| 3 | Screw                |

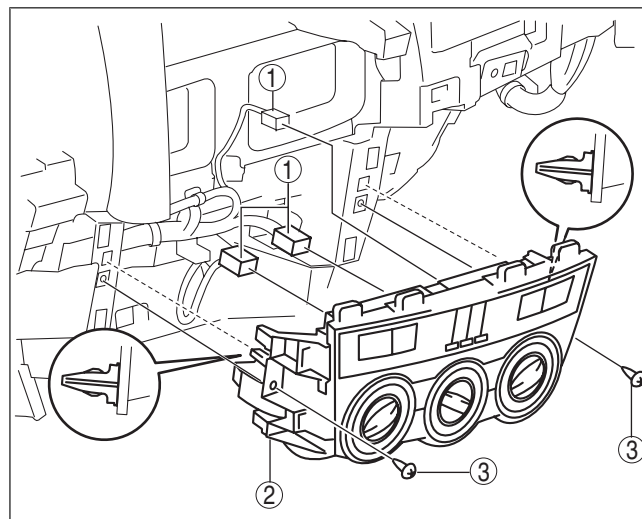

ac5wzw00001932

4. Connect each wire to links and install it to the wire clamps.
5. Verify that the dial operation is correct by fully turning each of the dials from one end to the other.
6. Install the following parts:
  - (1) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
  - (2) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (3) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (4) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (7) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (8) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
  - (9) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
7. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

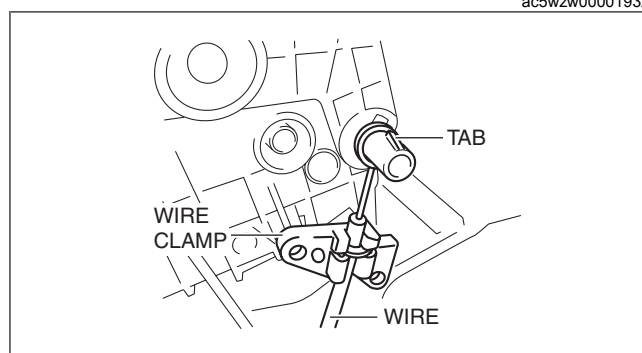


ac5wzw00001933

## R.H.D.

### Removal

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
  - (2) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
  - (3) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (4) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (6) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (7) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (8) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (9) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)


3. Press the tab down, then slide the wire off the link.
4. Remove the wire from the wire clamp.

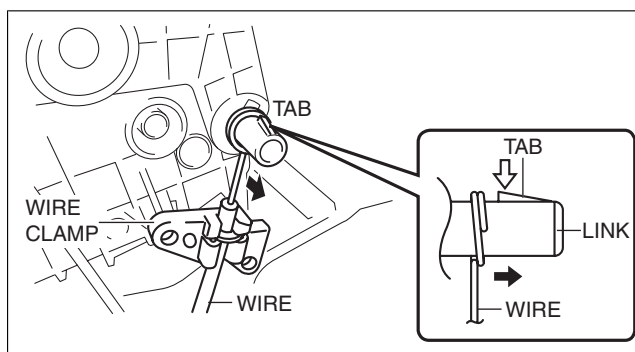

ac5wzw00001928


5. Remove in the order indicated in the table.

|   |                      |
|---|----------------------|
| 1 | Screw                |
| 2 | Connector            |
| 3 | Climate control unit |

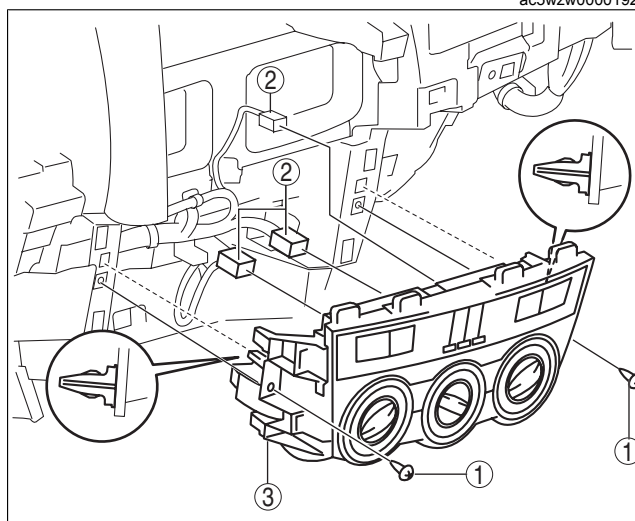

ac5wzw00001929


6. Pull out the air mix wire and airflow mode wire from the dashboard.

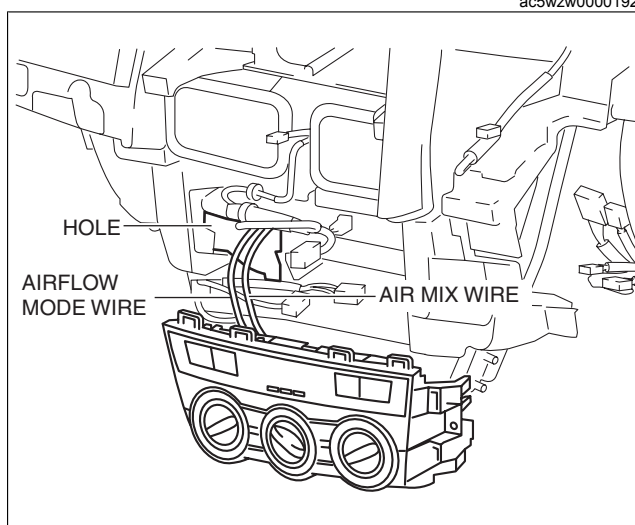

ac5wzw00001934


## Install

1. Pass each wire through the hole on the dashboard as shown in the figure.

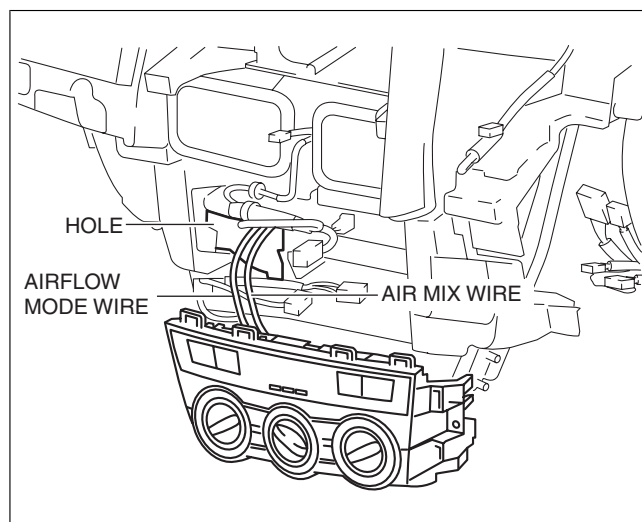

ac5wzw00001934


2. Route each wire as shown in the figure.

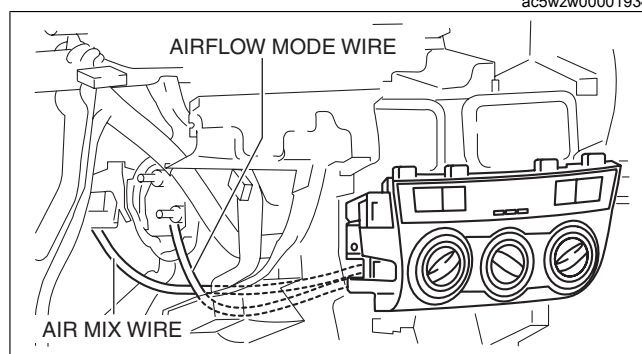

ac5wzw00001935


3. Install in the order indicated in the table.

|   |                      |
|---|----------------------|
| 1 | Connector            |
| 2 | Climate control unit |
| 3 | Screw                |

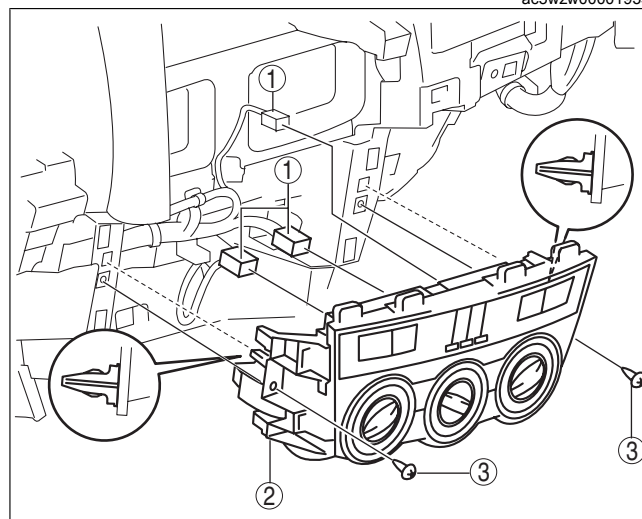

ac5wzw00001932

4. Connect each wire to links and install it to the wire clamps.
5. Verify that the dial operation is correct by fully turning each of the dials from one end to the other.
6. Install the following parts:
  - (1) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
  - (2) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (3) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (4) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)

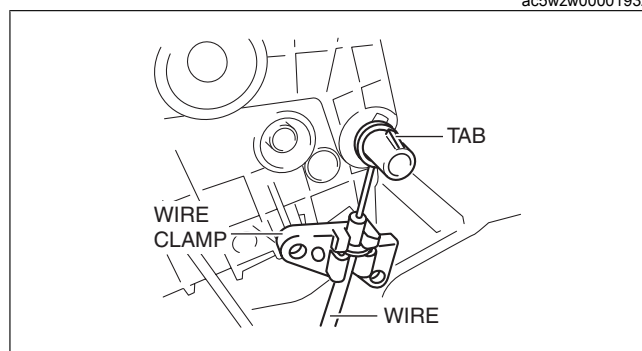

ac5wzw00001933

- 
- (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (7) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (8) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
  - (9) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
7. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)