


HVAC CONTROL SYSTEM LOCATION INDEX [FULL-AUTO AIR CONDITIONER]

id0740a1803600

L.H.D.

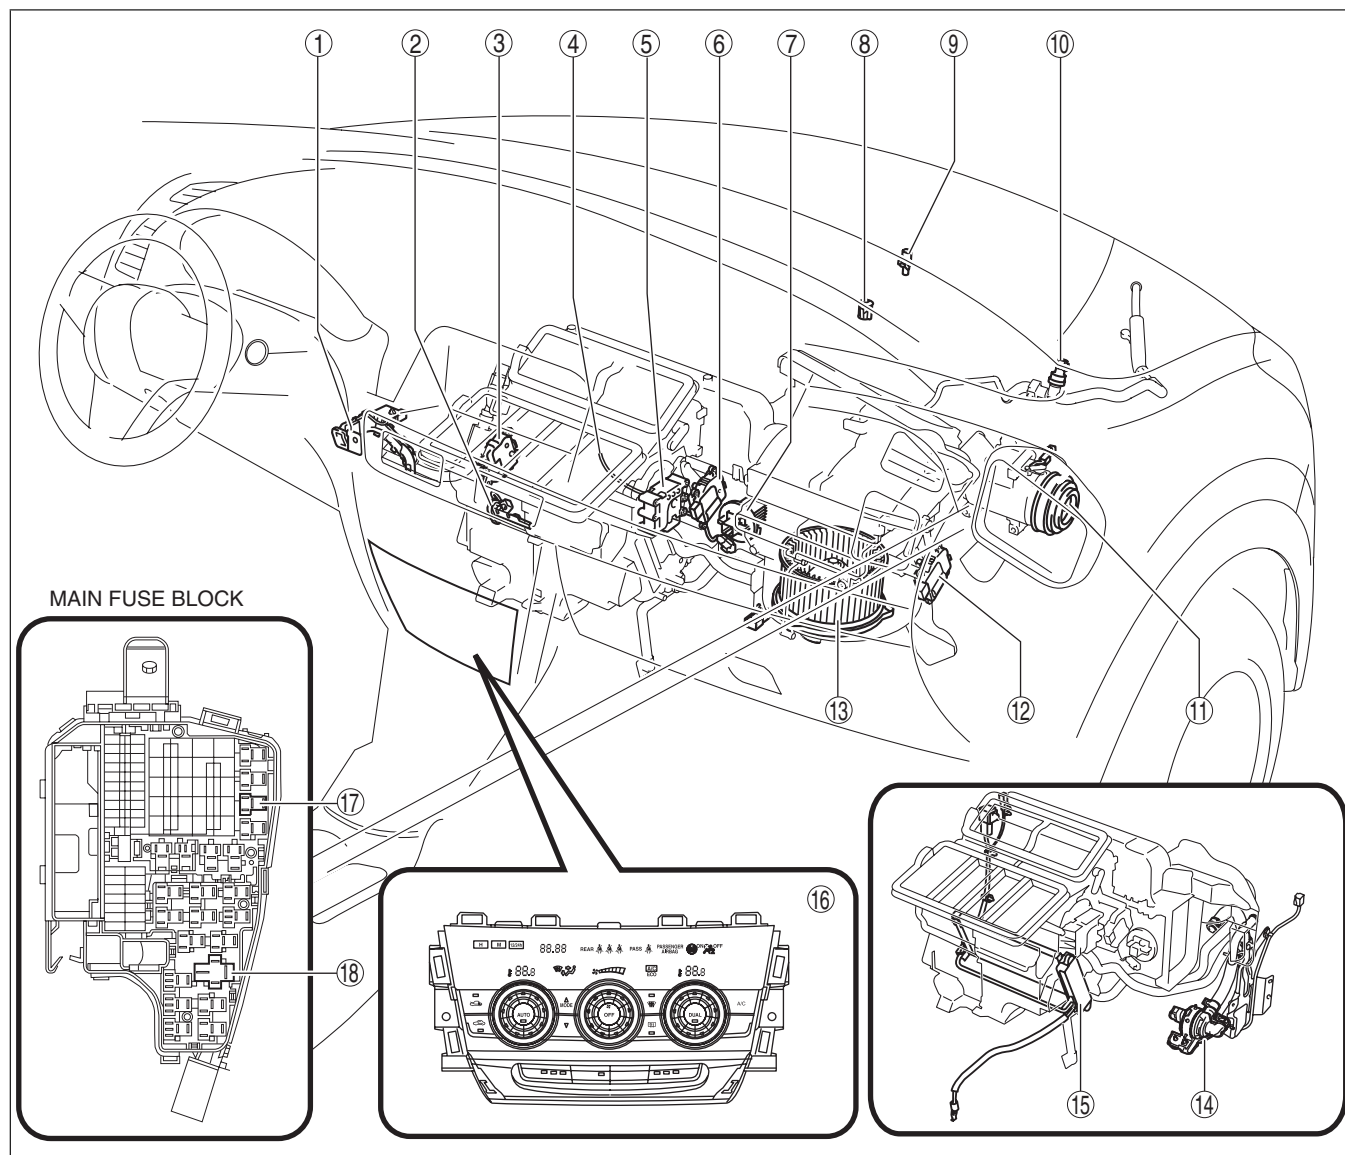


ac5wzw00001870

1	Cabin temperature sensor (See CABIN TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CABIN TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
2	Heater core temperature sensor (with heater core temperature sensor) (See HEATER CORE TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See HEATER CORE TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
3	Driver-side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL- AUTO AIR CONDITIONER].)

4	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
5	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
6	Passenger-side air mix actuator (See AIR MIX ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
7	Power MOS FET (See POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) INSPECTION [FULL-AUTO AIR CONDITIONER].)
8	Solar radiation sensor (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
9	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
10	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
11	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ASSEMBLY [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [FULL-AUTO AIR CONDITIONER].)
12	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
13	Blower motor (See BLOWER MOTOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [FULL-AUTO AIR CONDITIONER].)

14	Water pump (with water pump) (See WATER PUMP REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See WATER PUMP INSPECTION [FULL-AUTO AIR CONDITIONER].)
15	PTC heater (with PTC heater) (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER INSPECTION [FULL-AUTO AIR CONDITIONER].)
16	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER].)
17	A/C relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
18	Blower relay (See RELAY LOCATION.) (See RELAY INSPECTION.)

R.H.D.

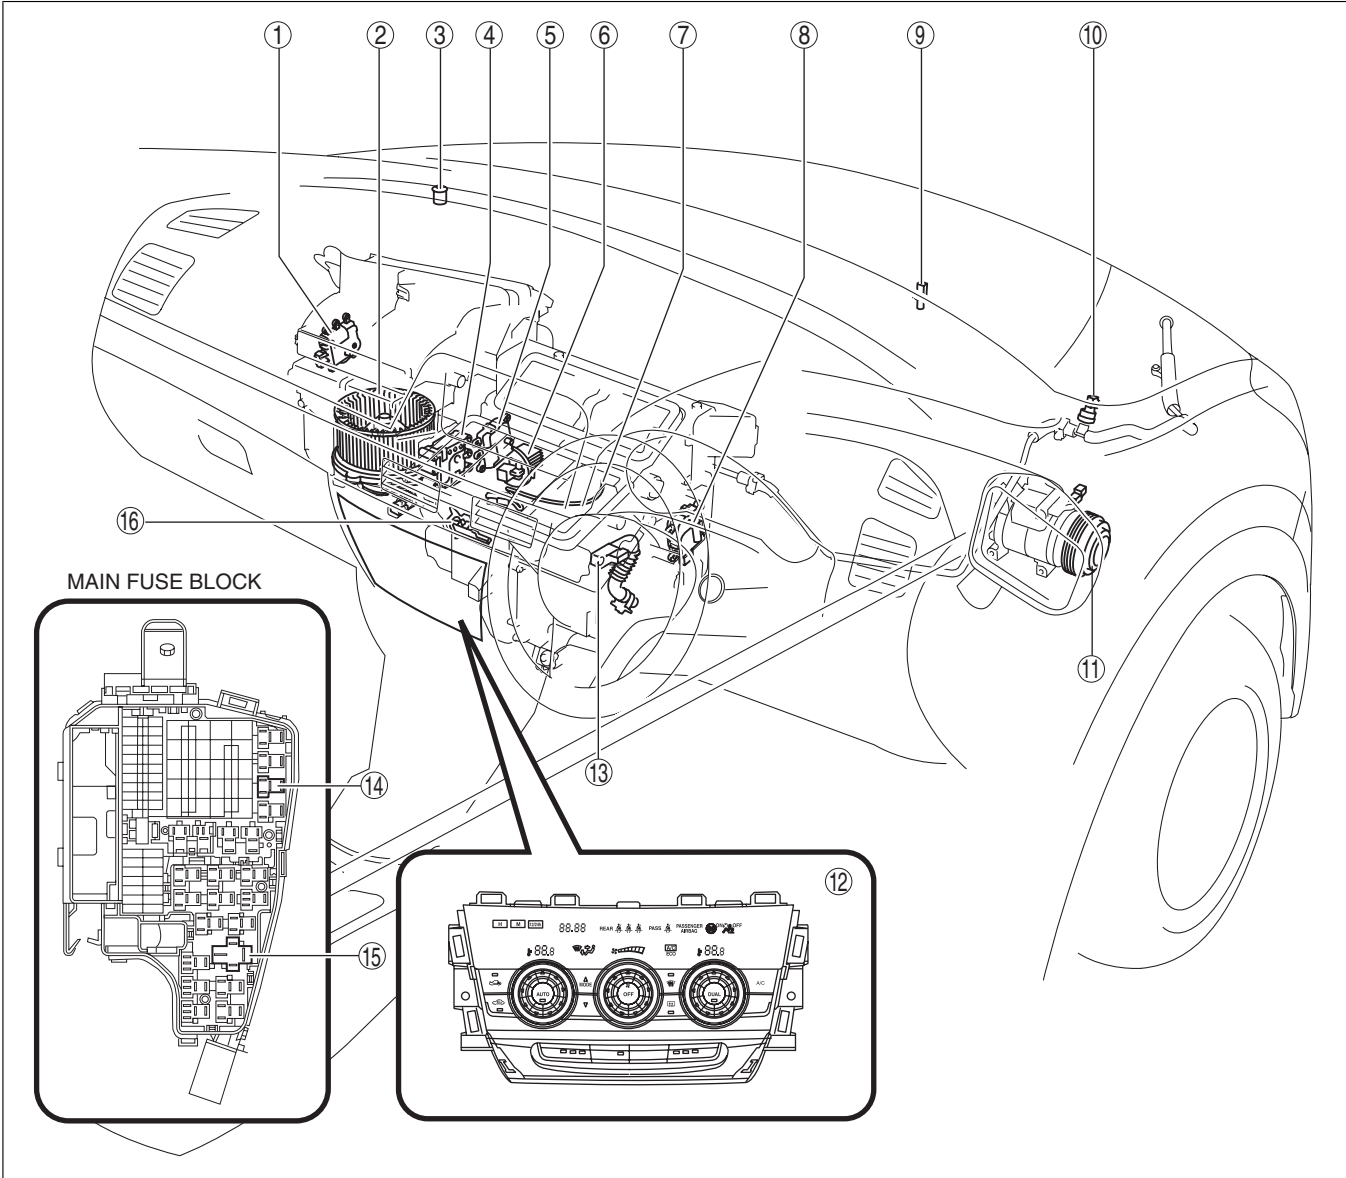

ac5wzw00001871

1	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
2	Blower motor (See BLOWER MOTOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
3	Solar radiation sensor (See SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)

4	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
5	Passenger-side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL- AUTO AIR CONDITIONER].)
6	Power MOS FET (See POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) INSPECTION [FULL-AUTO AIR CONDITIONER].)
7	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
8	Driver-side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL- AUTO AIR CONDITIONER].)
9	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
10	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
11	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [FULL- AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [FULL- AUTO AIR CONDITIONER].)
12	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER].)
13	Cabin temperature sensor (See CABIN TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CABIN TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)

14	A/C relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
15	Blower relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
16	Heater core temperature sensor (with heater core temperature sensor) (See HEATER CORE TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See HEATER CORE TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)