


## REAR VEHICLE MONITORING BRACKET REMOVAL/INSTALLATION

id092200014900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Rear combination lights (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
  - (2) Rear bumper (See REAR BUMPER REMOVAL/INSTALLATION.)
  - (3) Rear vehicle monitoring control module (See REAR VEHICLE MONITORING CONTROL MODULE REMOVAL/INSTALLATION.)
3. Remove the nuts from the rear vehicle monitoring bracket.

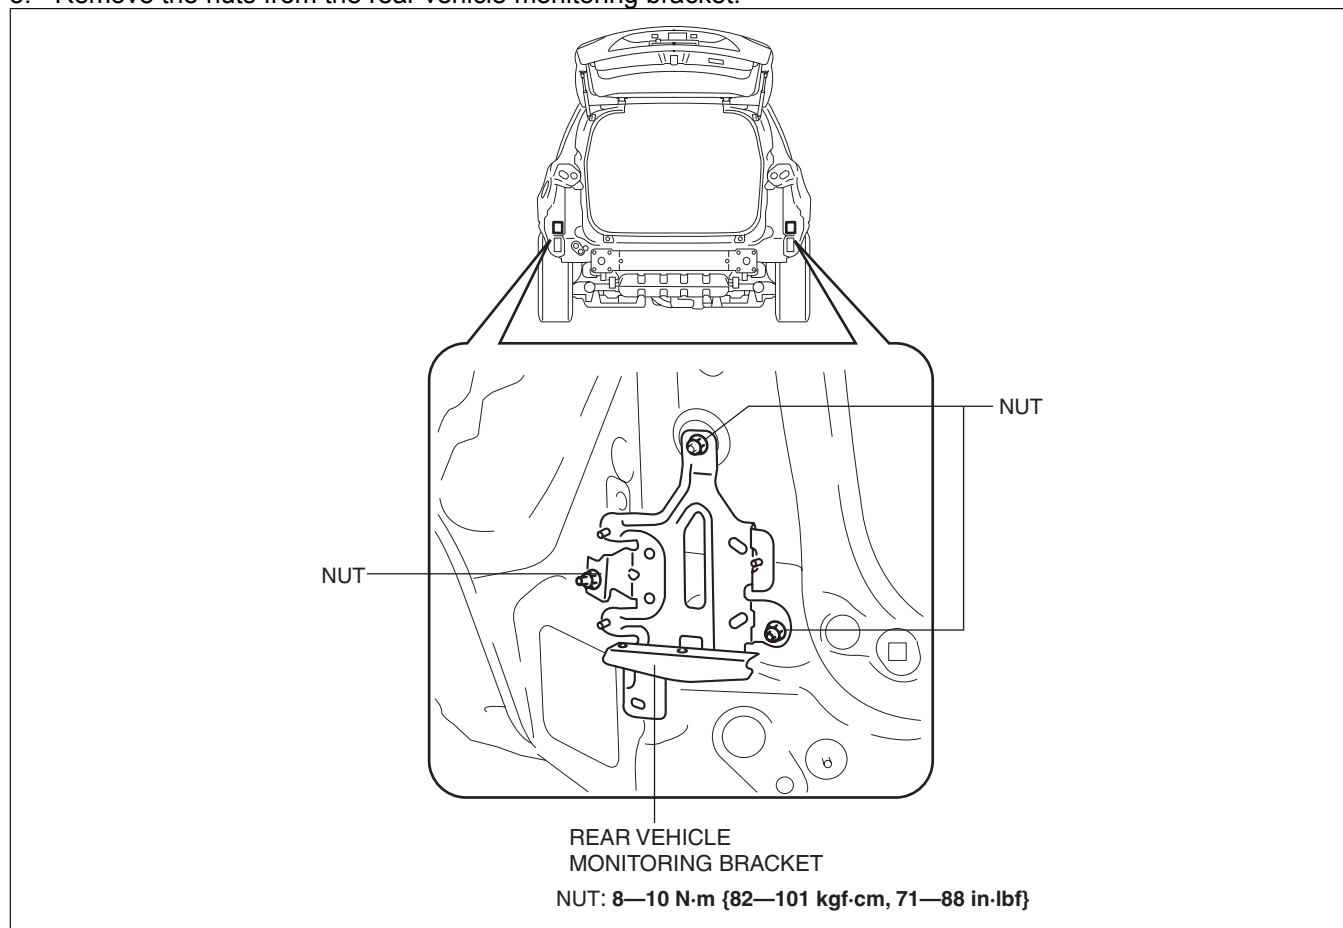

ac5wzw00002923

4. Remove the rear vehicle monitoring bracket.
5. Install in the reverse order of removal.
6. Perform the rear vehicle monitoring radar aiming procedure. (See REAR VEHICLE MONITORING RADAR AIMING.)

### Caution

- If a rear vehicle monitoring bracket is replaced, not performing the rear vehicle monitoring radar aiming procedure will cause a deviation in the the radar emission angle which could result in the system not detecting a vehicle approaching from the rear correctly. If a rear vehicle monitoring bracket is replaced, perform the rear vehicle monitoring radar aiming.