


CABIN TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1807800


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (driver-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (driver-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (6) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (7) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (8) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (9) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (10) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (12) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
 - (13) Lower panel (driver-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the aspirator. (See Aspirator Removal Note.)
4. Remove the screw.

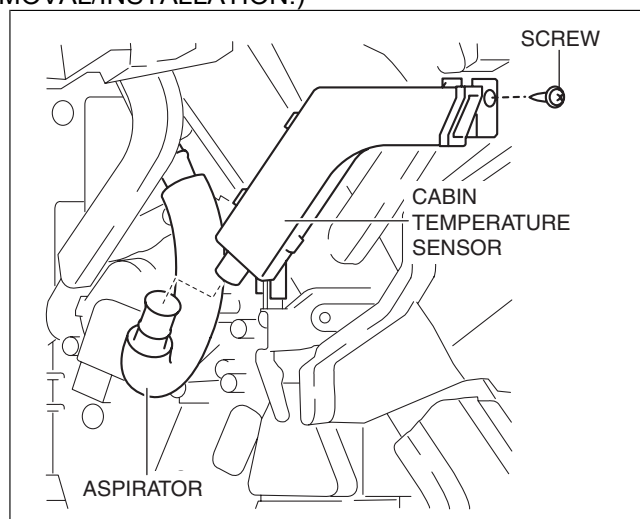

ac5wzw00001878

5. Disconnect the connector.
6. Remove the cabin temperature sensor.
7. Install in the reverse order of removal.

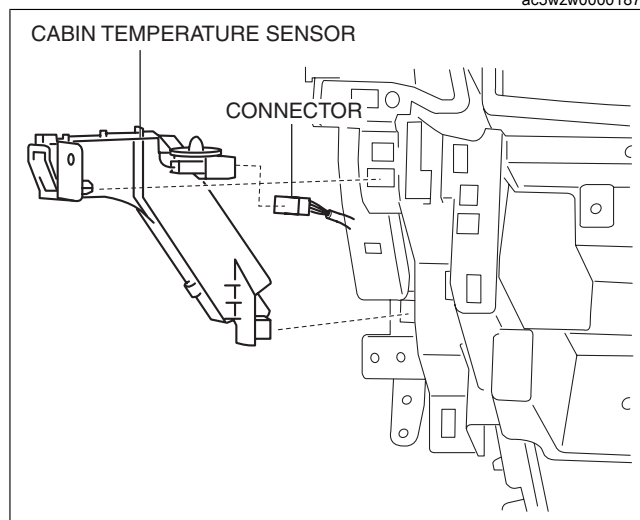


ac5wzw00001879

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

2. Remove the following parts:
 - (1) Front scuff plate (driver-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (driver-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (6) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (7) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (8) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (9) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (10) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (12) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
 - (13) Lower panel (driver-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the aspirator. (See Aspirator Removal Note.)
4. Disconnect the connector.
5. Detach the tab.
6. Remove the cabin temperature sensor.

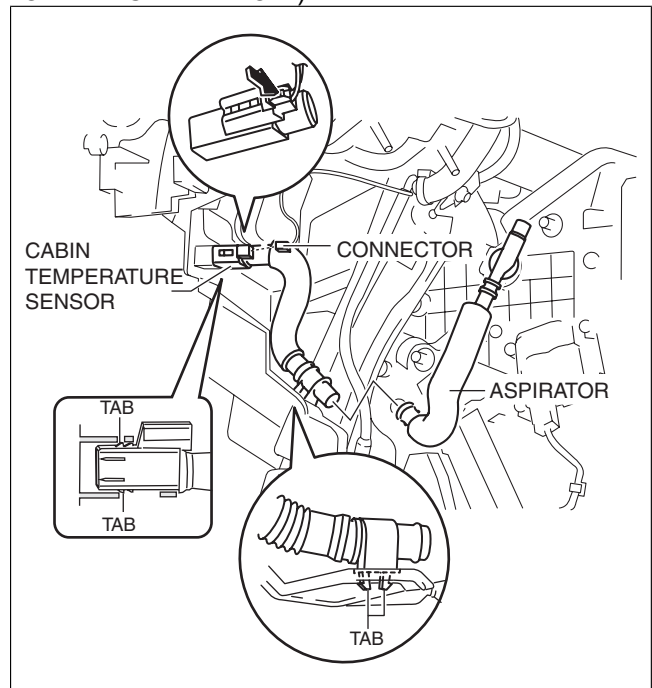

ac5wzw00001880

7. Remove the hose and duct.
8. Install in the reverse order of removal.

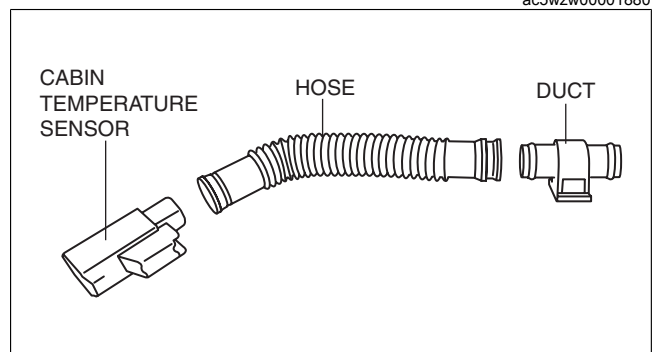


ac5wzw00001881

Aspirator Removal Note


1. Remove the aspirator as shown in the figure.

L.H.D.

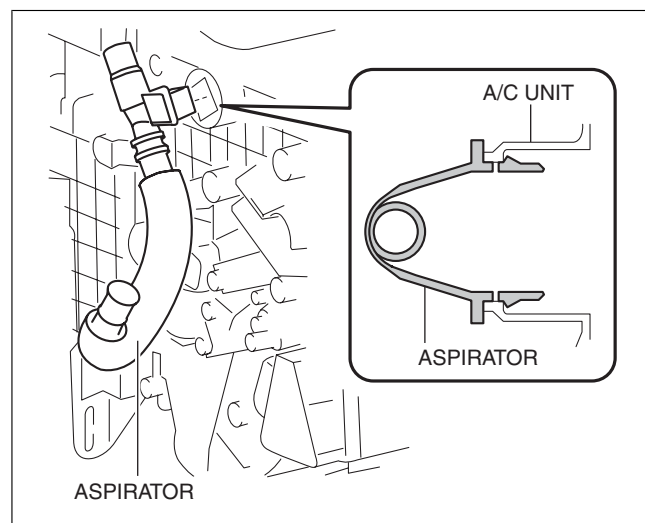

ac5wzw00001882

R.H.D.

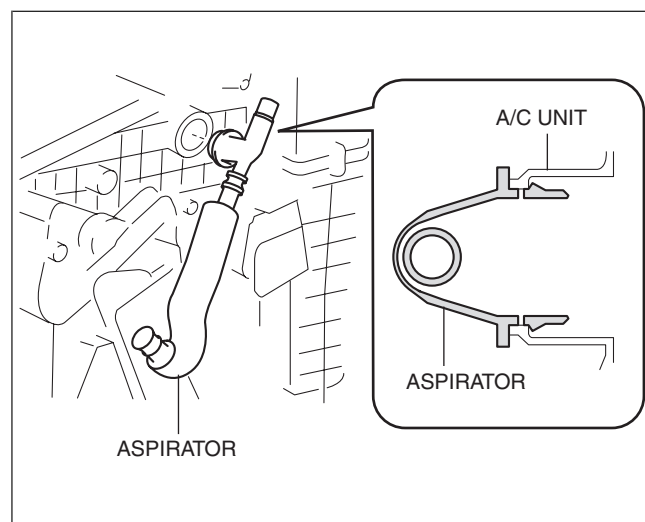

ac5wzw00001883