


REAR FOG LIGHT SWITCH INSPECTION


id091800804700

1. Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
2. Verify that the continuity between the rear fog light switch terminals is as indicated in the table.


VEHICLES WITH LIGHT SWITCH ON LEFT SIDE

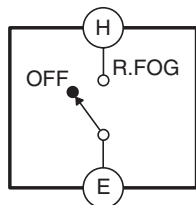


K J I H G F E D C B A



VEHICLES WITH LIGHT SWITCH ON RIGHT SIDE

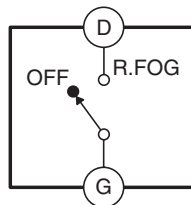

K J I H G F E D C B A



ac5wzw0000038

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)

Vehicles with light switch on left side

○—○ : Continuity

Switch position	Terminal	
	E	H
R.FOG	○—○	○—○
OFF		

Vehicles with light switch on right side

○—○ : Continuity

Switch position	Terminal	
	D	G
R.FOG	○—○	○—○
OFF		

ac5wzw00000452