

CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0116e1189700


1. Perform the following procedure.

6:4 split type seat

1. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)


4:2:4 split type seat

1. Set the rear seat aside as shown in the figure.
(See REAR SEAT REMOVAL/
INSTALLATION.)

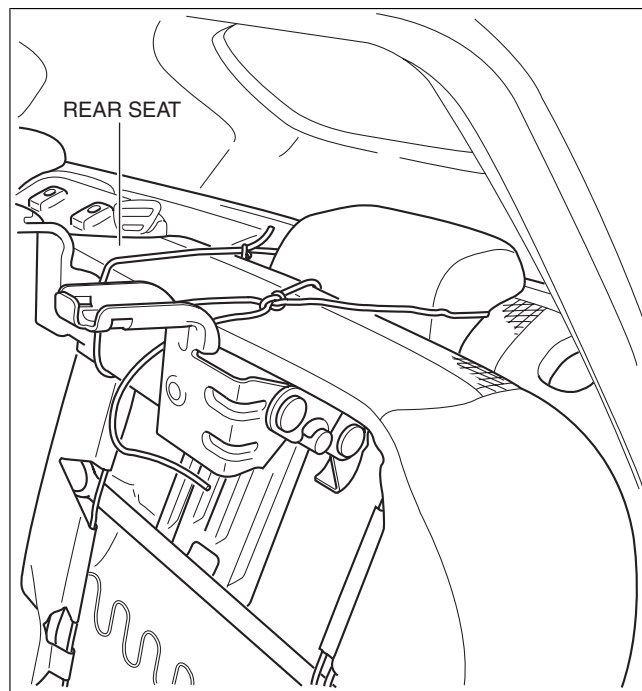


ac5wzw00004828

2. Partially peel back the floor mat as shown in the figure.

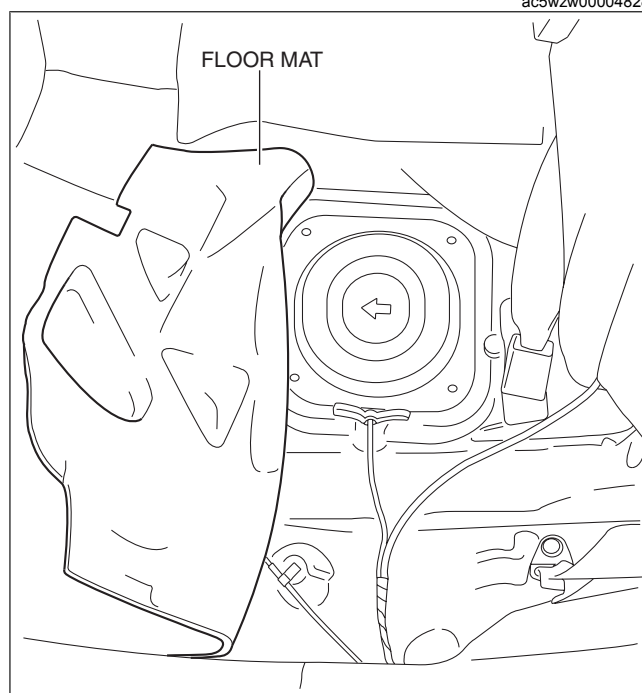

ac5wzw00004829

3. Remove the service hole cover.

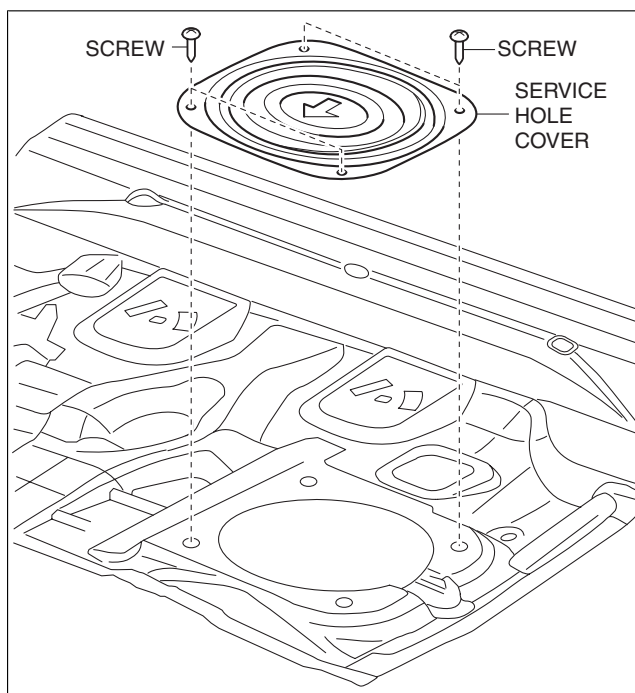


ac5wzw00004830

4. Remove in the order shown in the figure.

1	Evaporative hose
2	Check valve

5. Install in the reverse order of removal.

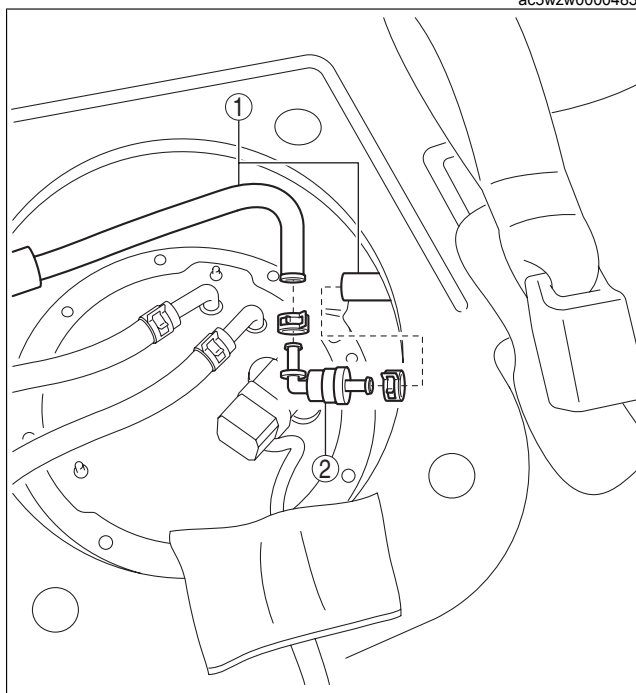

ac5jjw00003605