


ON-BOARD DIAGNOSTIC SYSTEM MALFUNCTION INDICATION FUNCTION [FW6A-EL, FW6AX-EL]

id050227280400

Purpose/Function

- The on-board diagnostic system malfunction indication function notifies the driver of a transaxle malfunction.
- The malfunction indication function notifies the driver of a transaxle malfunction by illuminating the check engine light and automatic transaxle warning light.

Construction/Operation

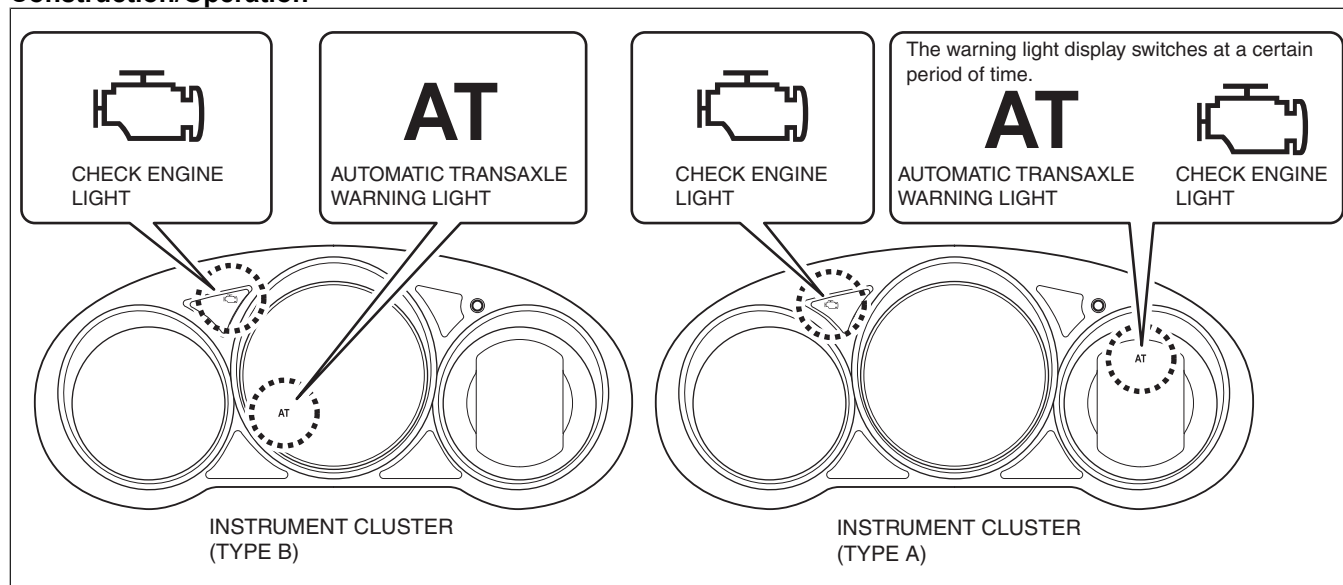

am6zzn00002201