


GENERATOR DISASSEMBLY/ASSEMBLY [SKYACTIV-D 2.2]

id0117h6800400

Caution

- Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

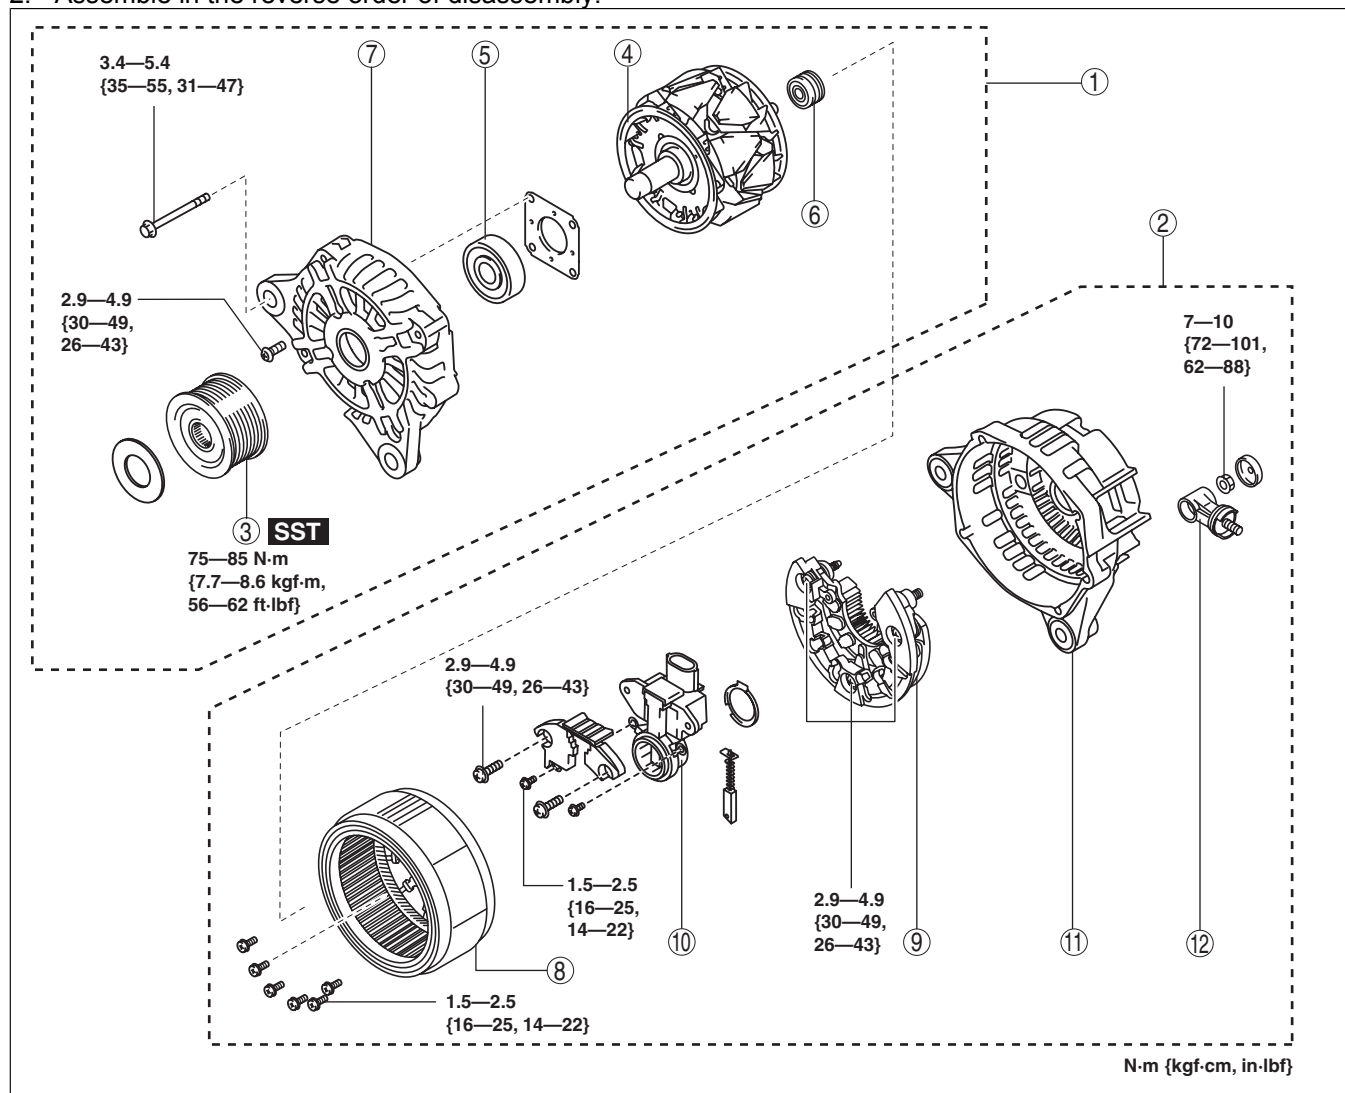

ac5wzw00005331

1	Rotor component
2	Stator coil component
3	Pulley (See Pulley Disassembly/Assembly Note.)
4	Rotor
5	Front bearing
6	Rear bearing


7	Front cover
8	Stator coil
9	Rectifier
10	Regulator component
11	Rear cover
12	Terminal B component

Pulley Disassembly/Assembly Note

1. Disassemble/assemble the pulley using the **SST**.

Tightening torque

75—85 N·m {7.7—8.6 kgf·m, 56—62 ft·lbf}

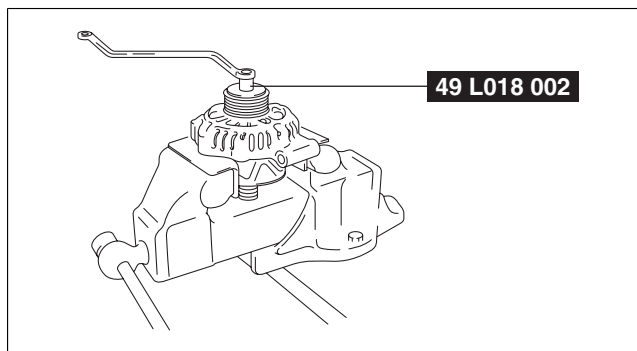

am3uuw00006095