

STARTER RELAY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0119i2112500

Purpose, Function

- The starter relay supplies power to the starter by receiving the signal from the PCM.

Construction


- The starter relay is installed to the relay and fuse block.

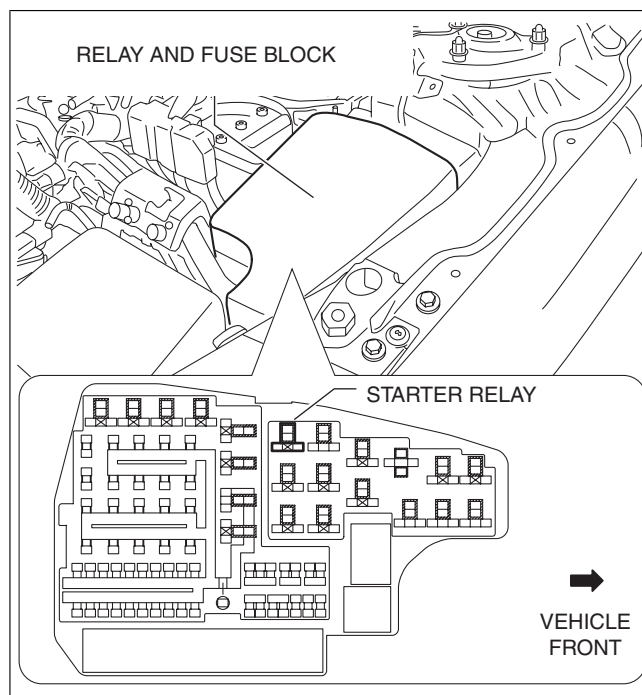

ac5wzn00002160

Operation

- The contact point is on when the voltage is supplied to the coil based on the signal from the start stop unit, and the battery voltage is supplied to the starter.

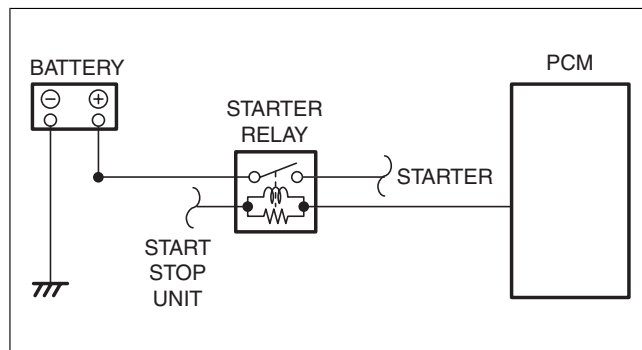

ac5wzn00002161

Fail-safe

DTC	Fail-safe
P0A0F:00	• Inhibits engine-stop by operating the i-stop function.