

A/C RELAY [SKYACTIV-D 2.2]


id0140z7256300

Purpose/Function

- Supplies power to magnetic clutch.
- Supplies battery voltage to magnetic clutch based on the signals from the PCM.

Construction


- Installed to the relay and fuse block.

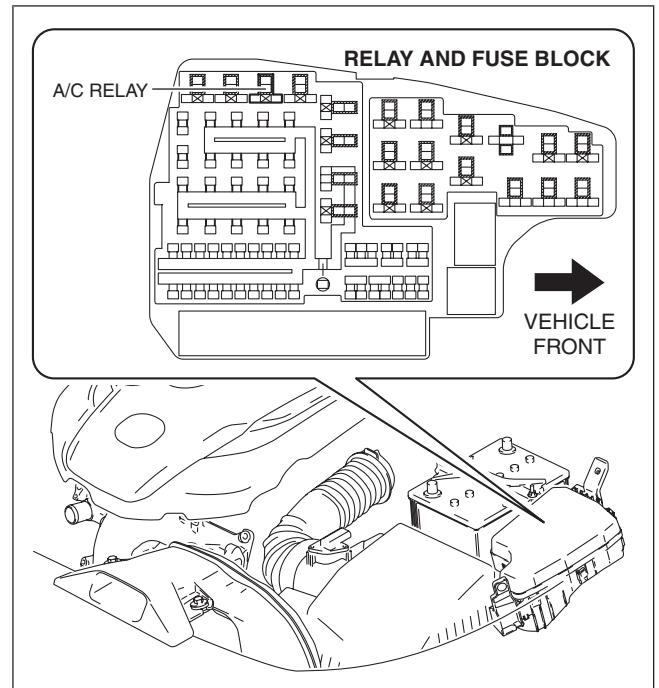

ac5wzn00001636

Operation

- The contact point is on when the battery voltage is supplied to the coil based on the signal from the PCM, and the battery voltage is supplied to the magnetic clutch.

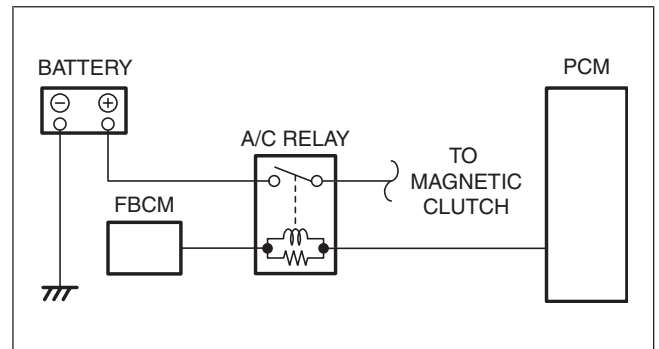

ac5wzn00002468

Fail-safe

- Function not equipped.