


FRONT BUCKLE REMOVAL/INSTALLATION


id081100800400

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
4. Disconnect the front buckle connector. (with buckle switch)

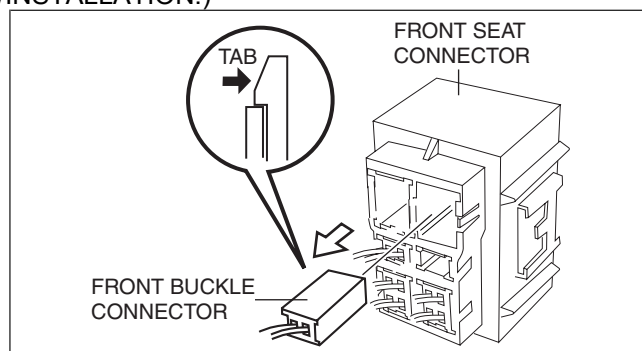

ac5wzw00002061

5. Remove the bolt.
6. Remove the front buckle.
7. Install in the reverse order of removal.

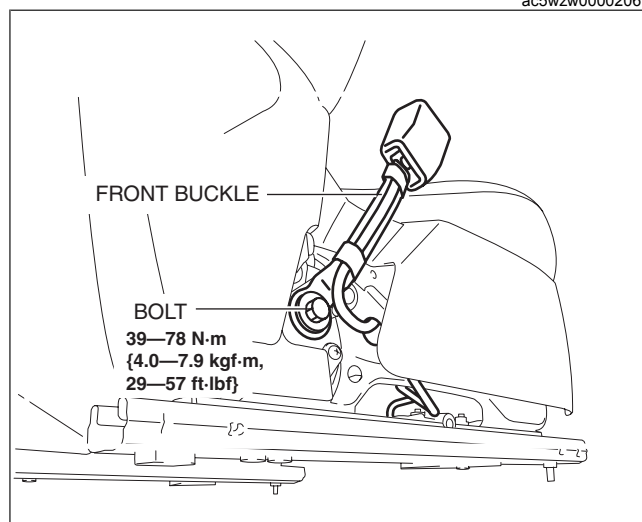

ac5wzw00002062