


## CABIN TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1807700

1. Measure the temperature around the cabin temperature sensor and measure the resistance between cabin temperature sensor terminals A and B.
  - If the characteristics of the cabin temperature sensor are not as shown in the graph, replace the cabin temperature sensor.

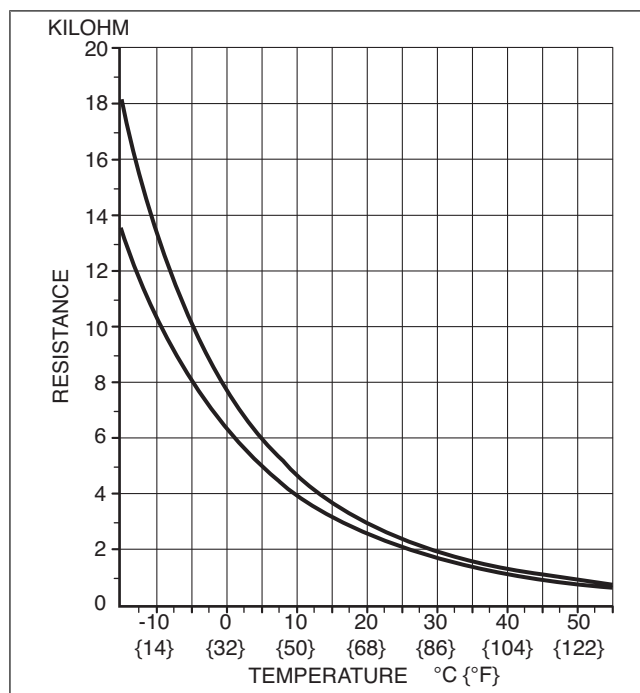

am3uuw00004053