


PILOT BEARING INSPECTION [C66M-R, C66MX-R]

id0510mc157600

1. Without removing the pilot bearing, turn the bearing while applying force in the axial direction.
 - If there is any malfunction, replace the pilot bearing. (See CLUTCH UNIT REMOVAL/ INSTALLATION [C66M-R, C66MX-R].)

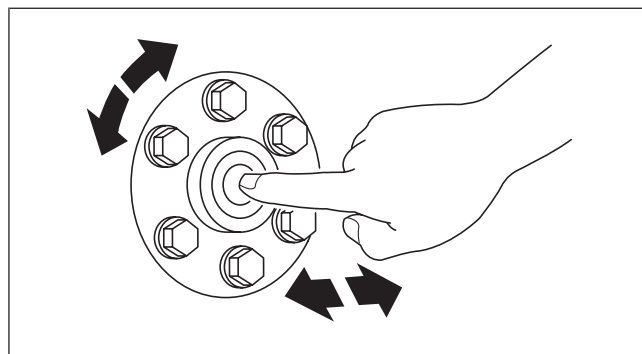

am3uuw00002078