


BRAKE FLUID LEVEL SENSOR INSPECTION

id041100801400

1. Disconnect the brake fluid level sensor connector from the master cylinder.
2. Inspect for continuity according to fluid level between the brake fluid level sensor terminals.
 - If not as indicated in the table, replace the reserve tank. (See MASTER CYLINDER REMOVAL/INSTALLATION.)

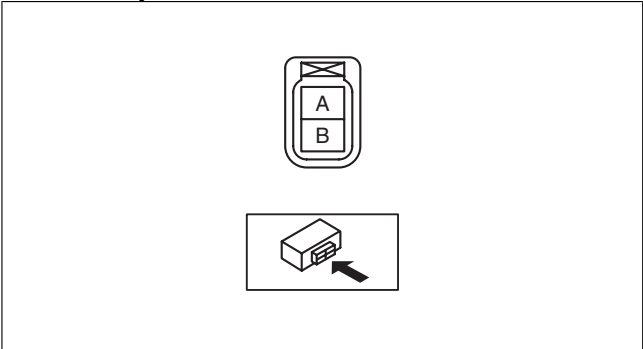

ac5wzw00000247

○—○: Continuity

Condition	Terminal	
	A	B
Above MIN	○—○	○—○
Below MIN		

acxuuv00003731