

BATTERY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0117i0185200

Purpose, Function

- The battery stores electricity generated by the generator. In addition, it supplies power to electronic devices if necessary.

Construction

- The battery is installed in the engine compartment. (vehicle left)

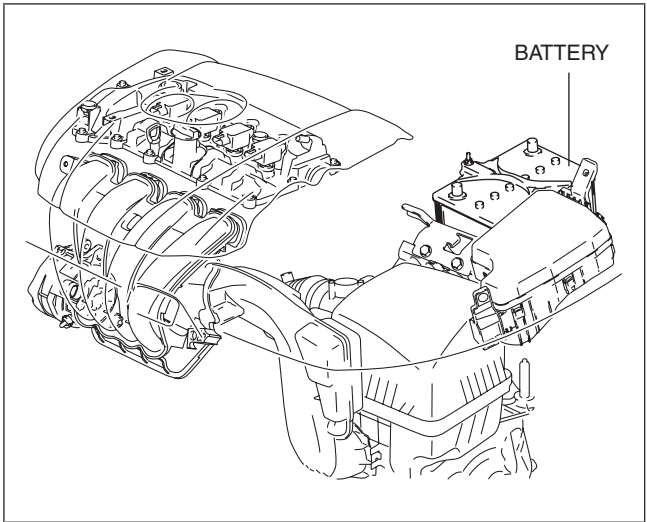

ac5wzn00001027

Fail-safe

DTC	Fail-safe
P057F:00	<ul style="list-style-type: none">• Inhibits engine-stop by operating the i-stop function. (Vehicle with i-stop)• Inhibits a part of the generator output control.