

## PRIMARY GEAR [GW6A-EL, GW6AX-EL]


id0517i2351900

### Purpose/Function

- The primary gear transmits the drive force converted by the 3-piece planetary gear to the secondary gear.

### Construction

- The primary gear is engaged with the front planetary carrier and rotates as a single unit.

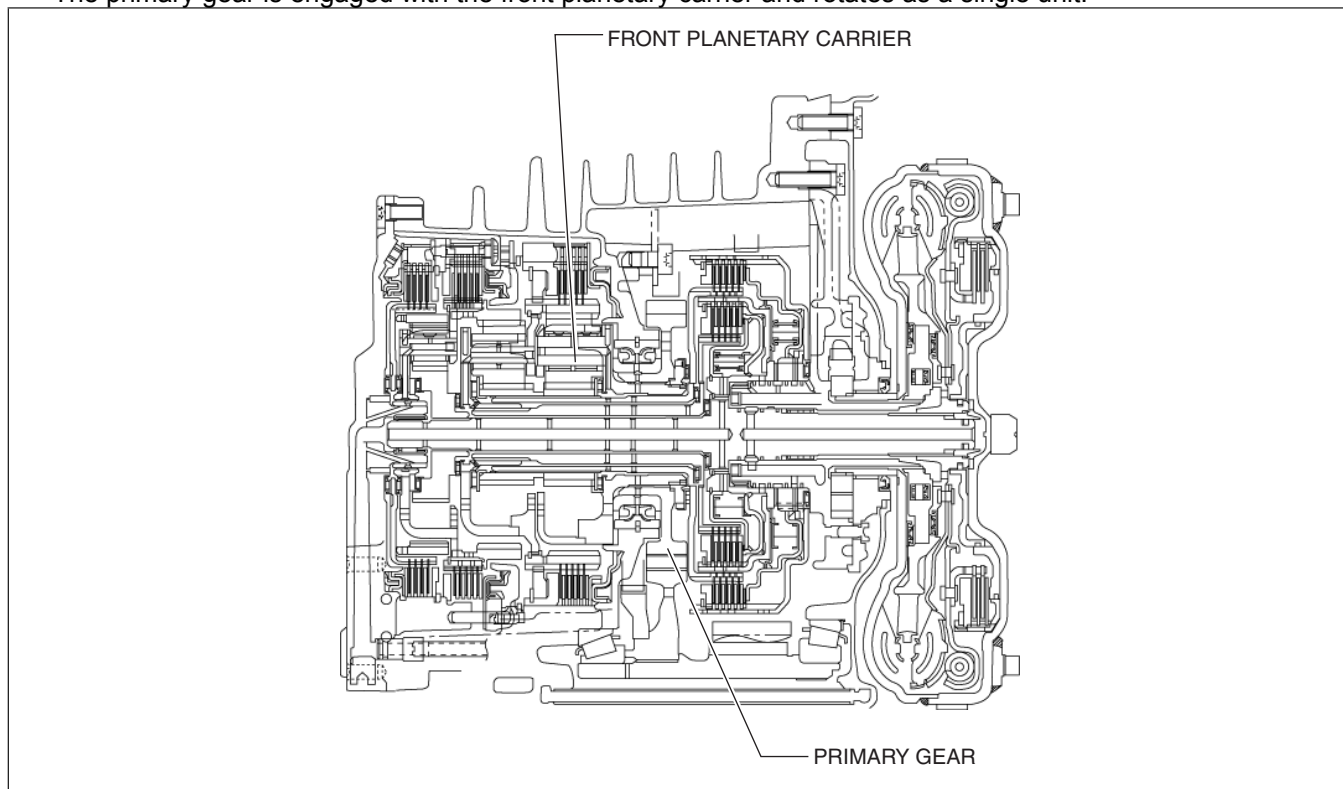

ac5wzn00001705