

FUEL TANK [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0114z9104100


Purpose, Function

- Store fuel safely and supply fuel to the engine.

Construction


- The fuel tank is installed below the rear seat.

2WD

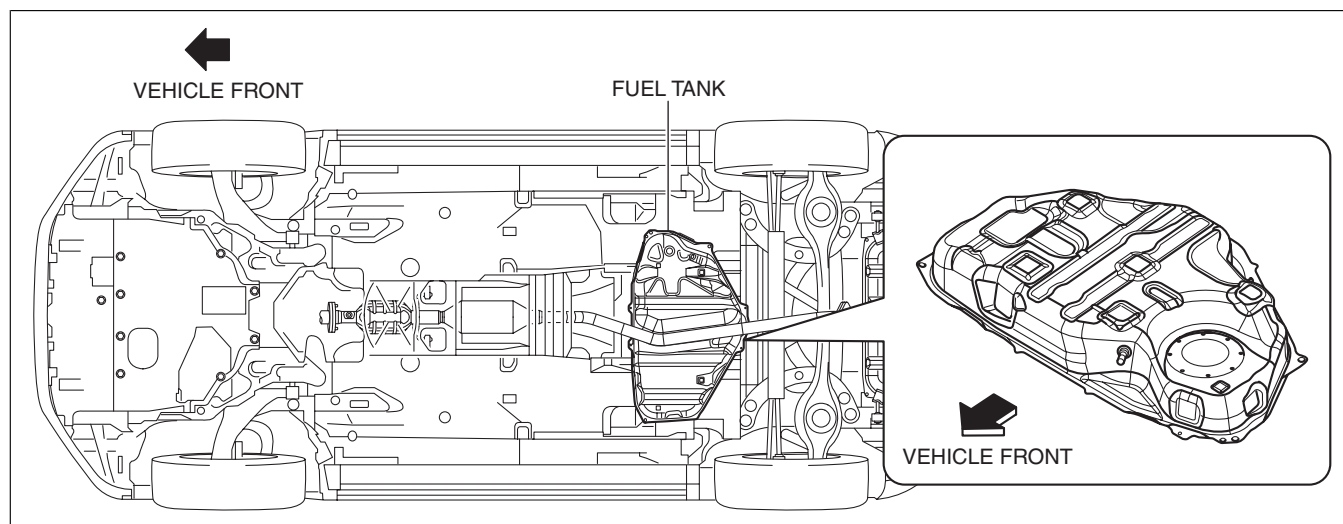

ac5wzn00000330


4WD

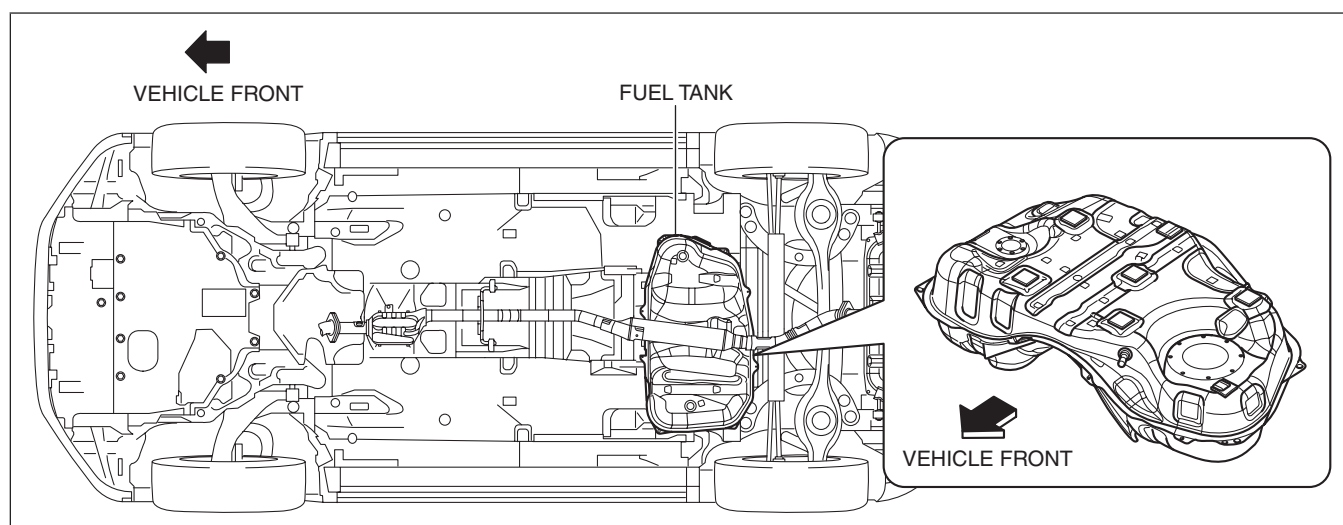

ac5wzn00000331


- The fuel tank is made of steel.
- The following parts are integrated in the fuel tank.
 - Non-return valve
(See NON-RETURN VALVE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - Rollover valve
(See ROLLOVER VALVE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

2WD

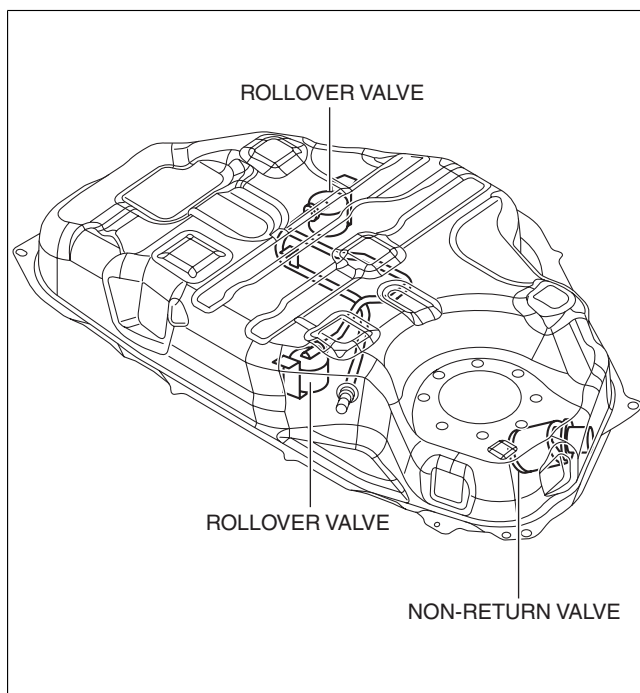

ac5wzn00000332

4WD

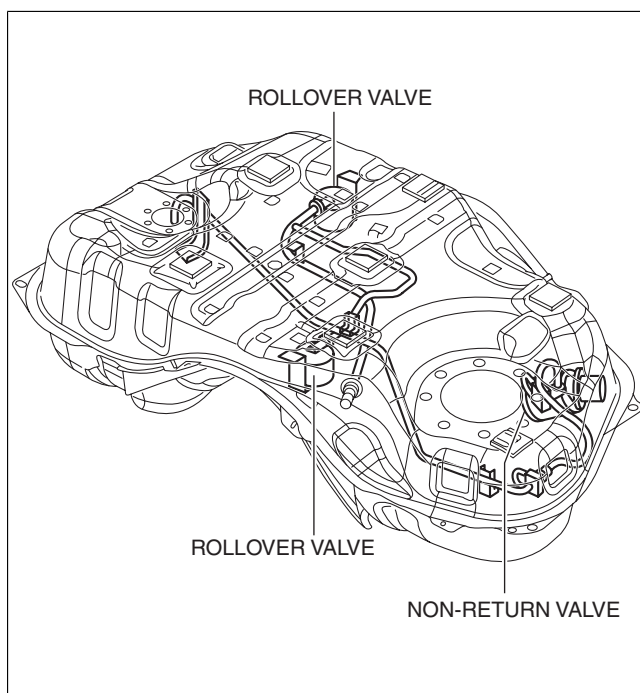

ac5wzn00000333