

MAIN FUSE

id092100800000

Purpose

- If electric current of the specified value or more flows to each fuse, the fuse melts due to heat generation to protect the systems and parts downstream of the fuse.


Function

- If electric current to each fuse is the specified value or more, the fuse melts due to heat generation.

Construction

- Installed to the battery terminal (+).


SKYACTIV-G 2.0, SKYACTIV-G 2.5

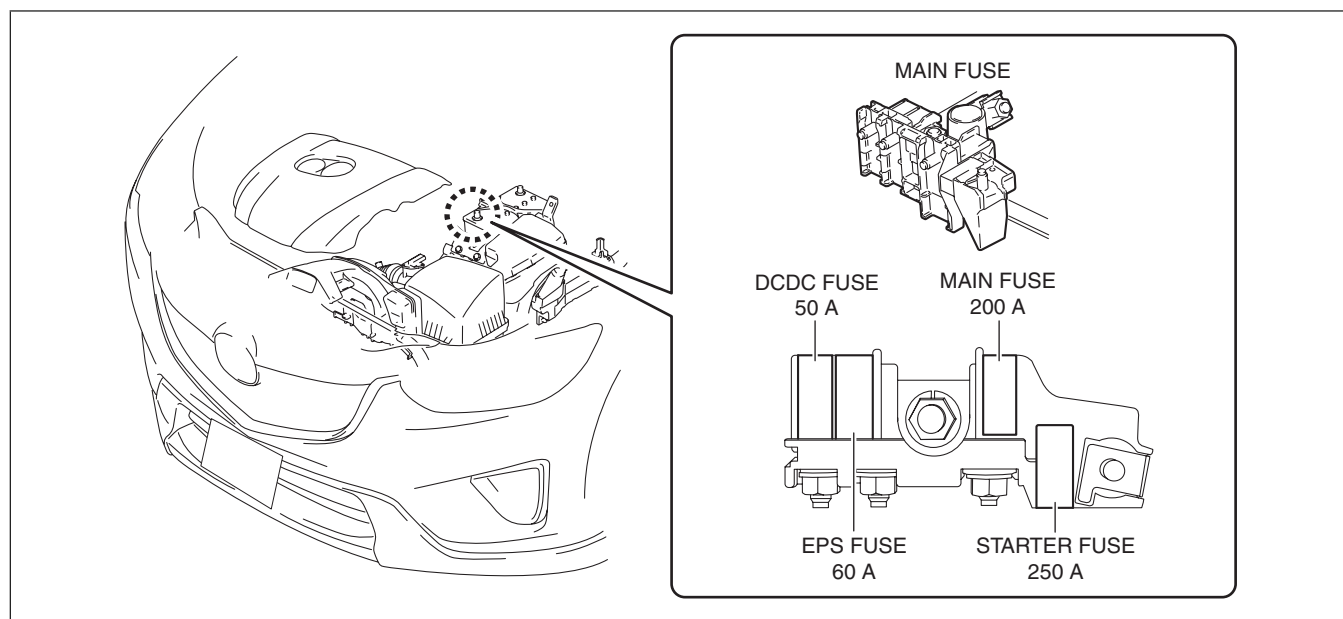

ac5wzn00001561


SKYACTIV-D 2.2

European (L.H.D.) specs., General (L.H.D.) specs., China specs.

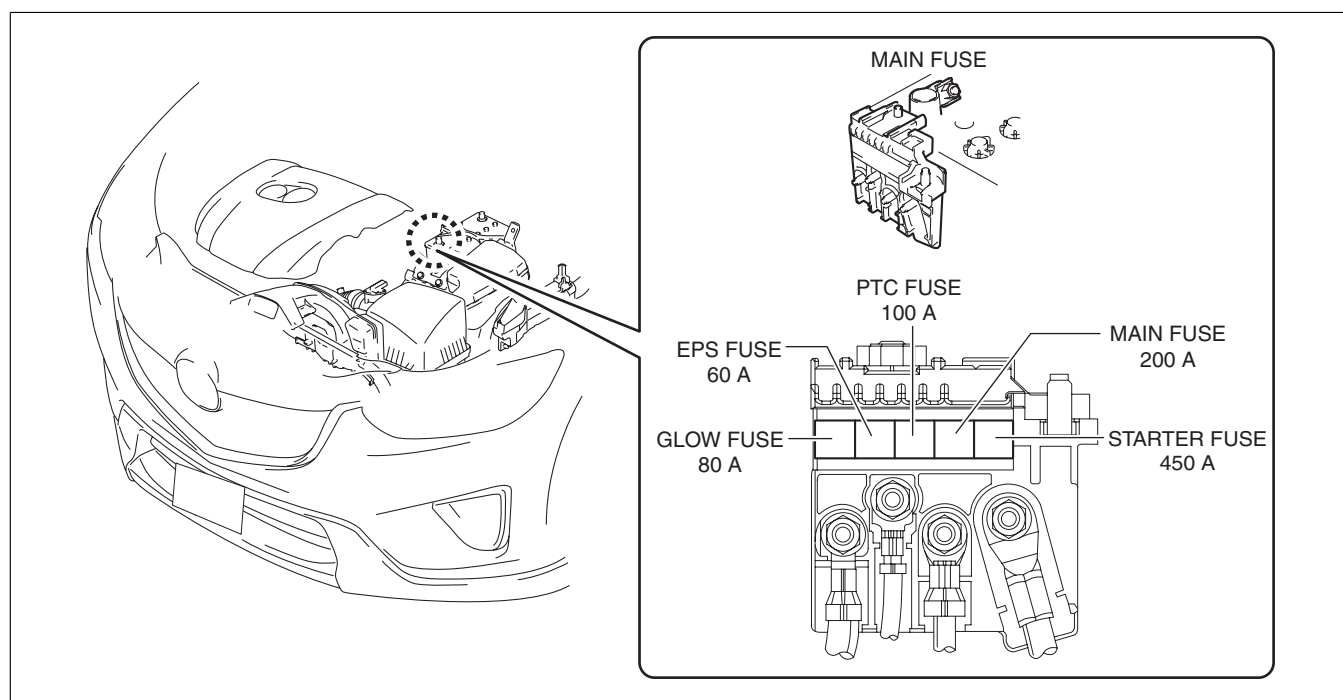

ac5wzn00001873

Except European (L.H.D.) specs., General (L.H.D.) specs., China specs.

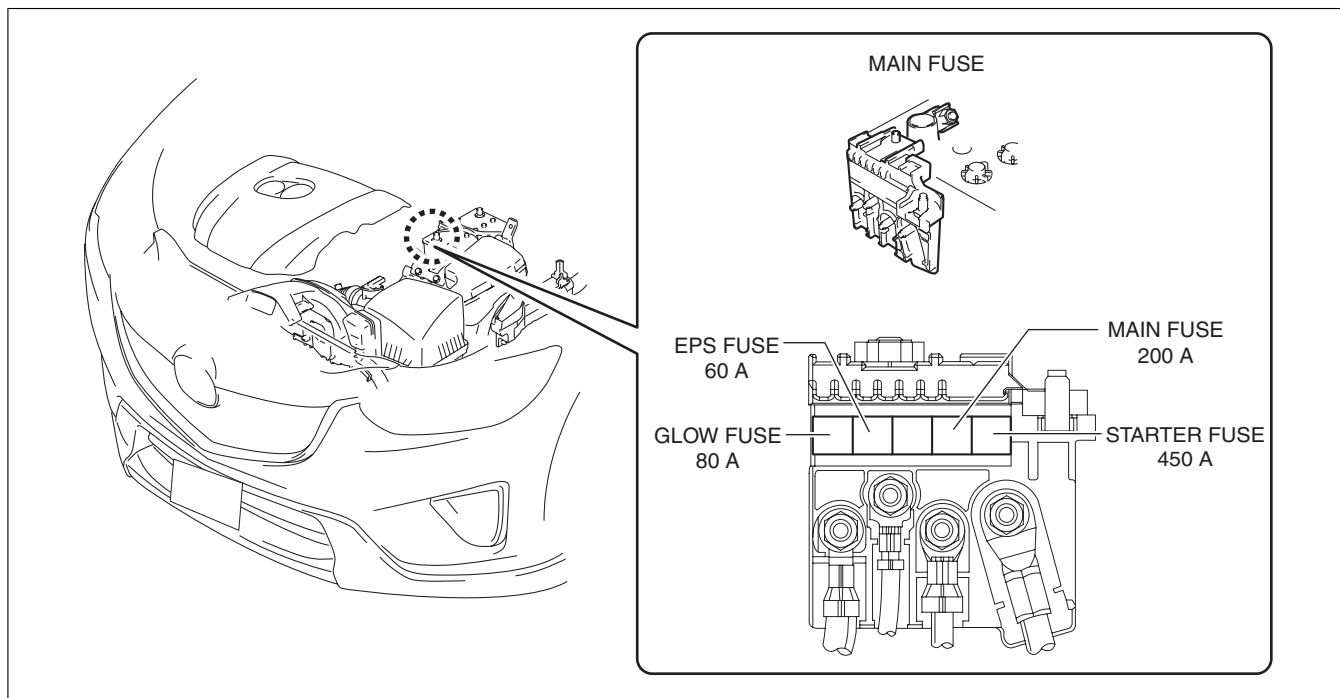

ac5wzn00001872

Operation

1. If electric current to each fuse is the specified value or more, the fuse melts due to heat generation.
2. Interrupts electric current flow downstream of the fuse.

Fail-safe

- Function not equipped.