

## THROTTLE BODY INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0113z9802600


### Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Disconnect the throttle body connector.
3. Measure the resistance between throttle body terminals E and F.

### Throttle body resistance

**1.38 ohms [20°C {68 °F}]**

- If not as specified, replace the throttle body.  
(See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

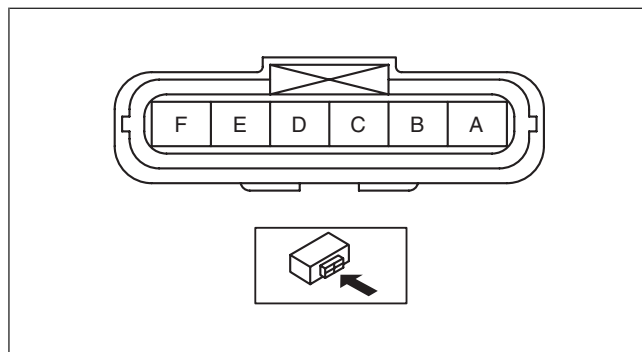

am3uuw00008477