

4WD WARNING LIGHT


id031800172000

Purpose, Function

- Warns the driver of a 4WD system malfunction.

Construction

- The 4WD warning light is built into the instrument cluster.

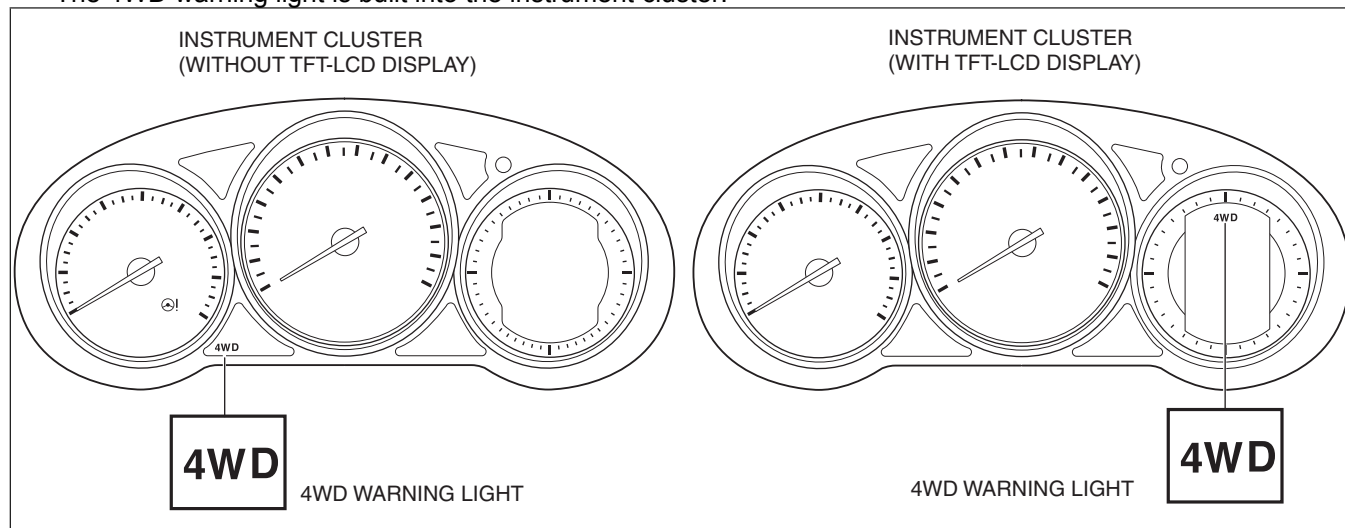

ac5wzn00001593

Operation

- If the self-diagnostic function stores a DTC, the warning light illuminates to alert the driver of the malfunction. If system control is temporarily suspended due to the rear differential oil temperature becoming abnormally hot or similar cause, the warning light flashes to alert the driver.
- The 4WD CM controls the operation of the warning light.

Fail-safe

- Function not equipped.