
PRESSURE CONTROL SOLENOID [GW6A-EL, GW6AX-EL]


id0517i2361000

Purpose/Function

- The pressure control solenoid adjusts the pressure control solenoid pressure and controls the line pressure based on the control signal from the TCM.

Construction

- The pressure control solenoid is installed to the solenoid control valve body.
- The pressure control solenoid is a normal open-type linear solenoid.

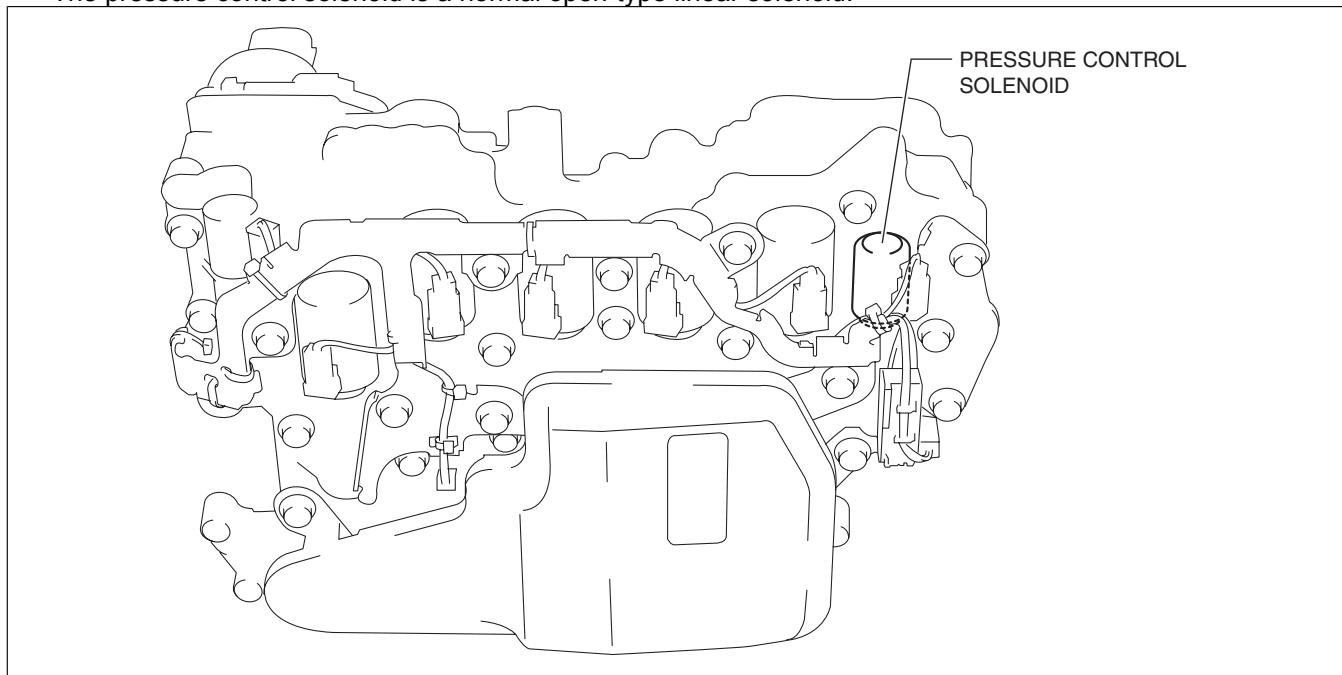

am3uun00002425

Operation

- Adjusts the pressure control solenoid pressure by increasing/decreasing the energization current to the pressure control solenoid according to the signal from the TCM.